

Always here to help you

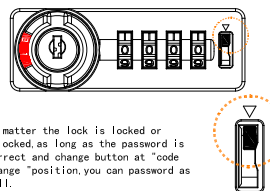
一. Code setting

Change default code from 0-0-0-0 to 1-6-8-8

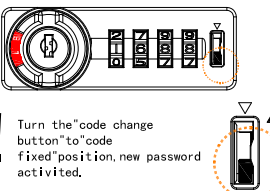
1.  = 0|0|0|0

↓

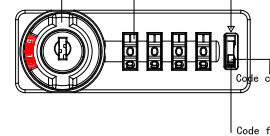
5.  = 1|6|8|8

2. 

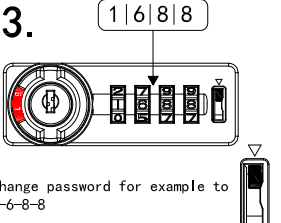
No matter the lock is locked or unlocked, as long as the password is correct and change button at "code change" position, you can password as will.

4. 

! Turn the "code change button" to "code fixed" position, new password activated.

1. 

 
Default code: 0-0-0-0

3. 

Change password for example to 1-6-8-8

5. 1|6|8|8 = ✓

Code set succeed

Go! 

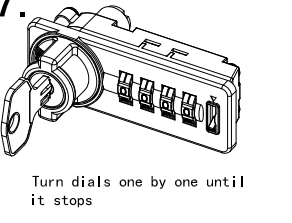
二. Code finding

Use key

6.  = 

↓

 
10.  = 1|6|8|8

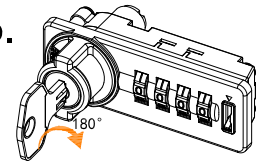
7. 

Turn dials one by one until it stops

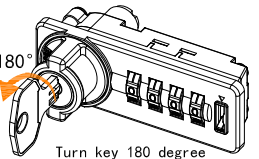
9. 1|6|8|8 = ✓

Code finding succeed

Go! 

6. 

Install key and turn 180 degree CW rotation

8. 

Turn key 180 degree CCW rotation and take out key

※Notice:work on it only when door at open position.