


Common problems & solutions

Problems	Primary cause	solution
After code input, "di di di" sound alarm, lock not able to open	Wrong code	Refer to reset
Correct code input, "di di" sound, red and green LED twinkle twice	Low voltage	Replace batteries
No sound when operating keypad, lock is ok to open	Buzzer broken	Replace buzzer


Installation

▼ Fixing hole size for lock


Unit: mm

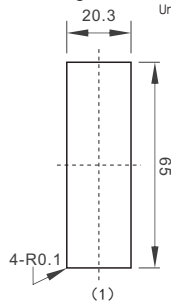


▼ Fixing hole size for battery box

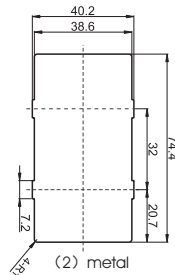

▼ Explosive view

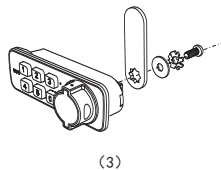

▼ Installation procedure on metal door

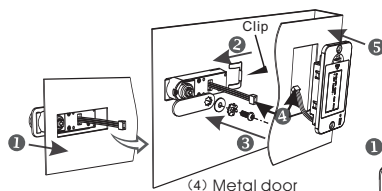


* Thickness range of the metal door: 0.8mm~1mm

<http://www.wang-tong.com>
Tel: 0574-63631987 Fax: 0574-63630233
Add: Guanhaiwei Industrial Zone West Section,
Cixi, Zhejiang, China



▼ Installation procedure on wooden door

* Thickness range of the wooden door: 16mm~24mm

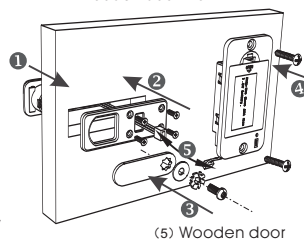


Work Manual

  — M-1811-00K1 —




WANGTONG LOCKS CO.,LTD.

Product Instruction

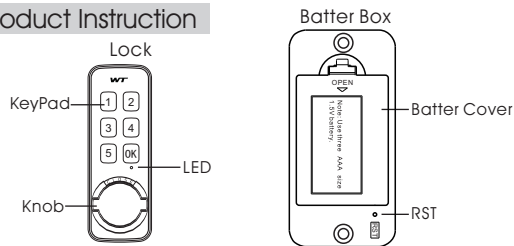

How to operate

 Unlock & Lock



Unlock

+

- 1 Press code + "OK"
→ long "di" sound + green LED on
- 2 Turn the knob to position within 3 seconds

Lock


- 1 Turn the knob to position

Note:

- When password is wrong alarming sound "di di di" 3 times.
- When lock shows red LED signal means low voltage.
- Factory default user code "1234"/ factory default management code "4321"
- User code will reset to factory default code "1234" after inputting management code

Setting

1. Code Setting (e.g. change "1234" to "123123")

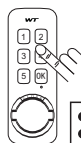

- 1 Press 1234 + "OK" → long "di" sound + green LED on
- 2 Press "OK" 2 seconds → long "di" sound + green LED flash
- 3 Press "123123" + "OK" → long "di" sound: New code activated

Note:

- Same procedure to change user code and management code
- Code can be consisted of 4-15 digits, management code and user code cannot be the same.

2. Public mode

► Turn on public mode


- 1 Press management code + "OK" → long "di" sound + green LED on
- 2 Press "OK" 2 seconds → long "di" sound + green LED flash
- 3 Press "OK" + "4 4" + "OK" → long "di" sound: Public mode activated

Note:

- Public mode can only be activated by management code
- Once press the management code, the temporary code will be invalid.

► Setting temporary code

Press "OK" + new code (4- 15 digits) + "OK" → long "di" sound + green LED on: New code activated

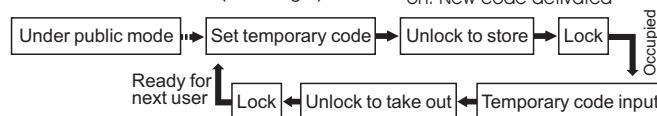

Note:

- Temporary code can be used only 1 time to open the lock, after that you need to reset the temporary code
- Green LED flash every 3 seconds when occupied

► Turn off public mode

- 1 Press management code + OK, → long "di" sound + green LED on
- 2 Press "OK" 2 seconds → long "di" sound + green LED flash
- 3 Press "OK" + "4 3" + "OK" → long "di" sound: Public mode off

3. Turn on/ off Fake Pin code function

- 1 Press management code + OK → long "di" sound + green LED on
- 2 Press "OK" 2 seconds → long "di" sound + green LED flash → press "OK"
- 3 Press "4, 2" + OK → turn on/ Press "4, 1" + OK → turn off

- Introduced with Anti-Theft Technology and Fake Pin code function you can input any code(s) before or after the real code to prevent the real code being peeped. Maximum 16 digits.

Special functions

1. Reset: Put the pin in "RST" hole on battery box, release the pin until you hear long "di" sound. The lock will be changed back to private mode automatically, user code to be 1234 and management code to be 4321.
2. Wrong input: 4 times wrong code input will make the lock "dead" for 60 seconds
3. Low voltage: The lock is at low voltage mode when red LED on during operation. Replace new batteries at your soonest convenient.
4. With emergent key function, for after-sale service only.