
Cluster

Single-sided Leg Rectangular Manager's Desk

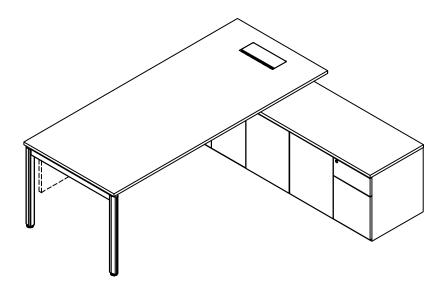








Product Parts List

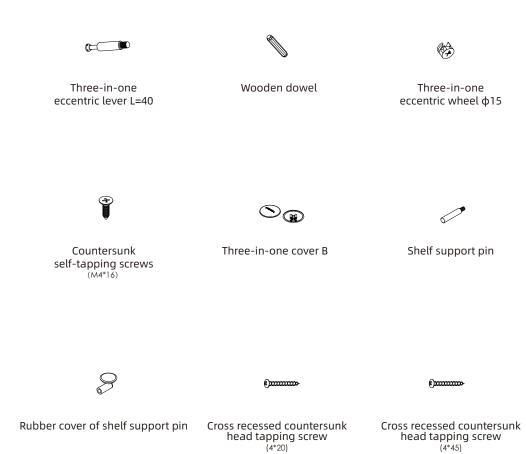







Hexagon socket cylindrical head screw (M6*16) Hexagon socket cylindrical head screw (M6*50) Tapered support of table board (NFCA-2002)







Conical lower connector of beam (NFCA-2004)




Beam support (NFCE-1108)

Step 1

1.Base plate: Insert wooden dowel into wooden dowel hole; screw the eccentric lever into the pre-buried hole with screwdriver and other tools;


2.Install roof panel, back panel and external side panel into corresponding holes;

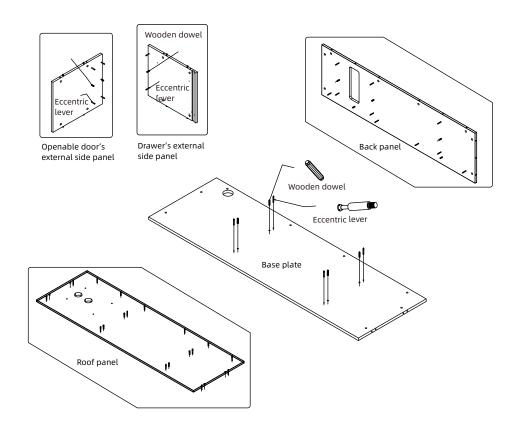

1.Install side cabinet's upper wiring terminal

Step 1: Install the short upper wiring terminal onto the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 1);

Step 2: Install the tall upper wiring terminal onto the upper wiring terminal through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 2)

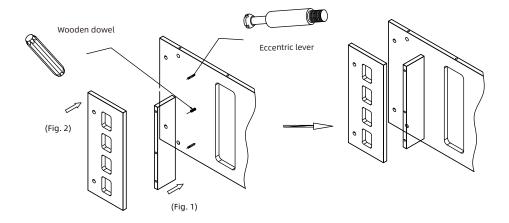


Step 3

1.Install side cabinet's roof panel guide rail and sliding door

Step 1: Install the external side panel onto the tall wiring terminal and the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 1);

Step 2: Install the external side panel onto the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 2);


Step 3: Install the middle riser onto the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 3)

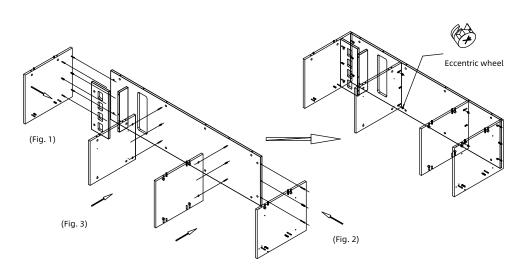


1.Install side cabinet's roof panel and base plate

Step 1: Install the roof panel onto the external side panel, the middle riser and the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 1);

Step 2: Install the base plate onto the external side panel, the middle riser and the back panel through wooden dowel and eccentric lever, screw down and fix with eccentric wheel (see Fig. 2)

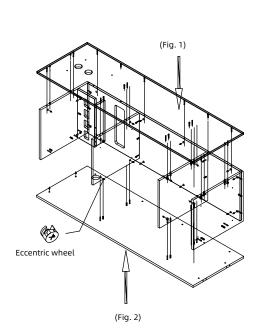

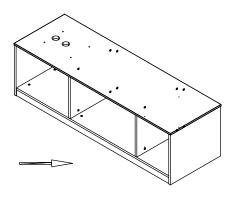


Step 5

1.Install side cabinet's single door, adjust door gap;

Install movable shelf board's shelf support pin and rubber cover;

Install drawer's guide rail on the side panel and the middle riser, and link rod lock's rod

(adopting lock rod's fixing sheet and fitting)

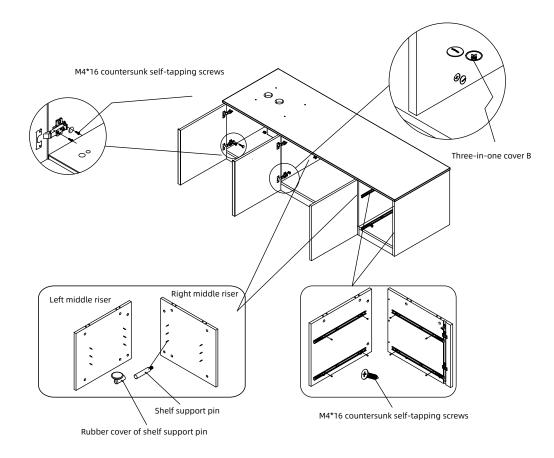

1.Install side cabinet's movable shelf board and drawer


I.Drawer panel and drawer are connected and fixed with self-tapping screws;

II.Install lock head;

III.Install the drawer into the cabinet, adjust the drawer's pull-push smoothness;


IV. Adjust locker rod to appropriate height and guarantee that drawer could be closed



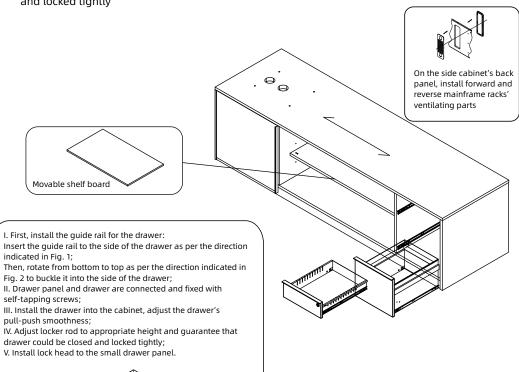


Step 7

1.Install side cabinet's support cabinet

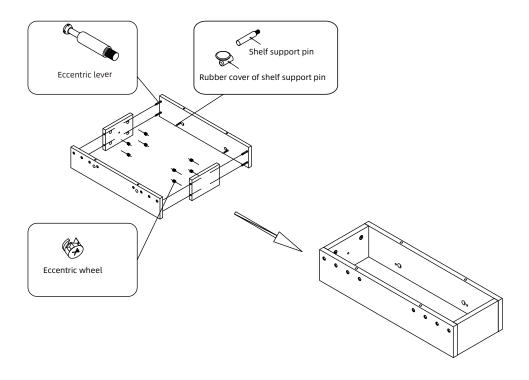

1. Side cabinet is installed completely

Note: After support cabinet is fixed to side cabinet's roof panel with eccentric wheel, buckle up cover B; fix the shelf support pin below, and put it in the shelf; fix it to the shelf surface with 2 shelf support pins, in order to prevent the shelf board from being taken out during power supply plug and unplug!

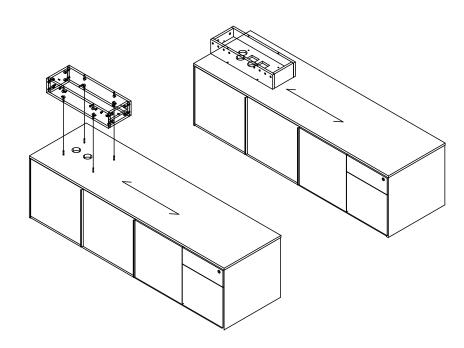


Installation instructions for Cluster single-sided leg Manager's desk side cabinet (length W1800mm):

1. All the above installation steps are based on the side cabinet (length W1800mm)!
2.This side cabinet's installation instructions are suitable for all Cluster single-sided leg
Manager's desk side cabinets!

Step 9


1.Install door-like side foot

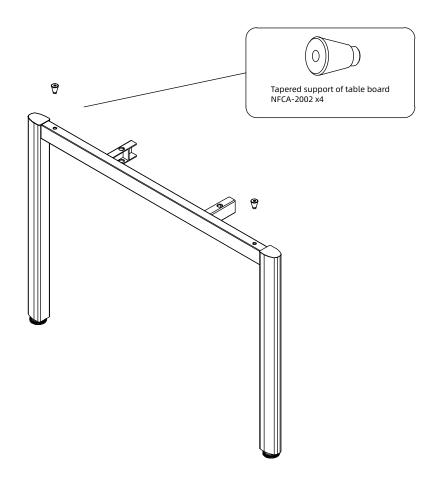


1.Install the table leg stand


Step 11

1.Install the beam and Side cabinet

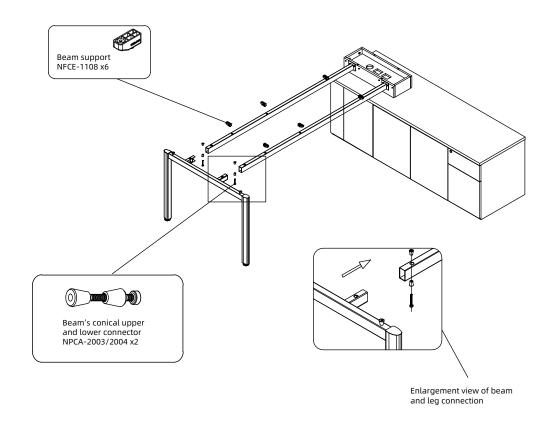

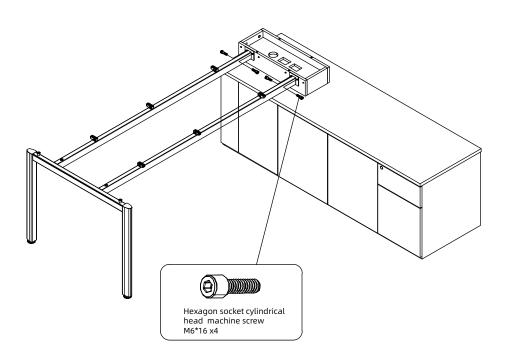

1.Install the tabletop

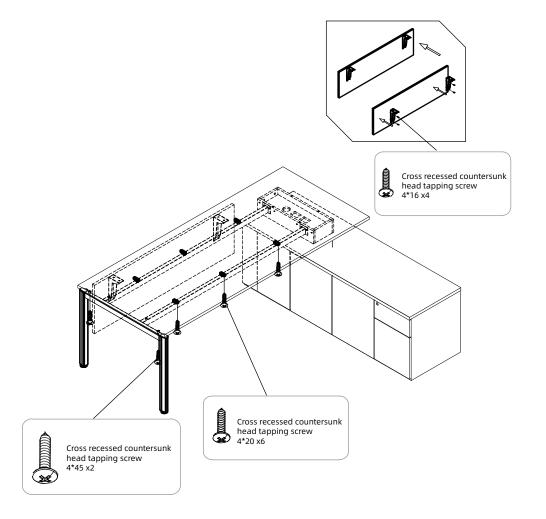

Step 13

1.The installation is complete

