

YOKO

NOVAH[®]



NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH[®]



Yoko-C

 
 
 
 


Yoko-S




Yoko-L

Product Parts List

			
1X	Lifting Armrest 1x or Fixed Armrest 1x		1X
			
1X	1X	1X	5X
			
2X	2X	3X	3X
			
1X			
			
YOKO-S/L		YOKO-C	
M8*20 3X		M8*35 3X	
M6*30 6X		M6*65 6X	


Step 1

Insert the casters into the five-star feet successively

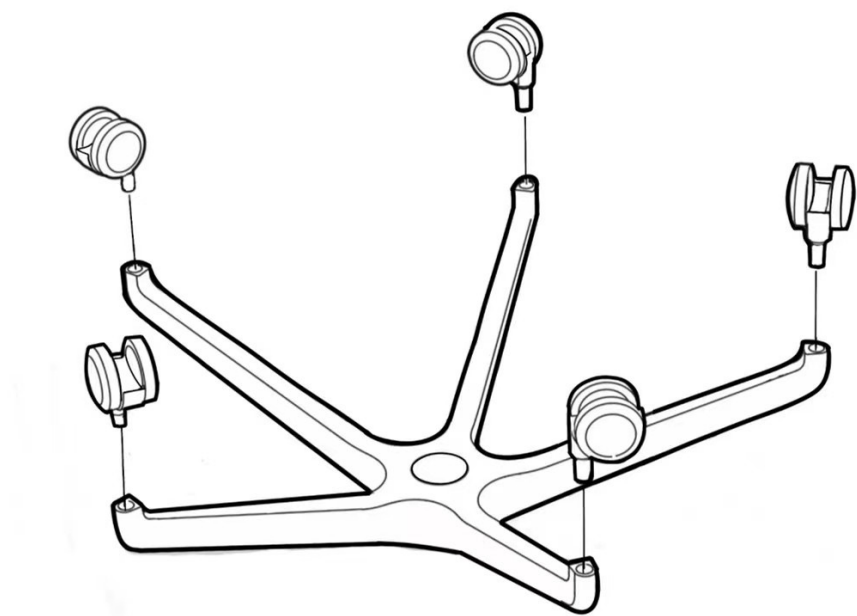


Step 2

Place the air pressure rod into the center of the chair feet

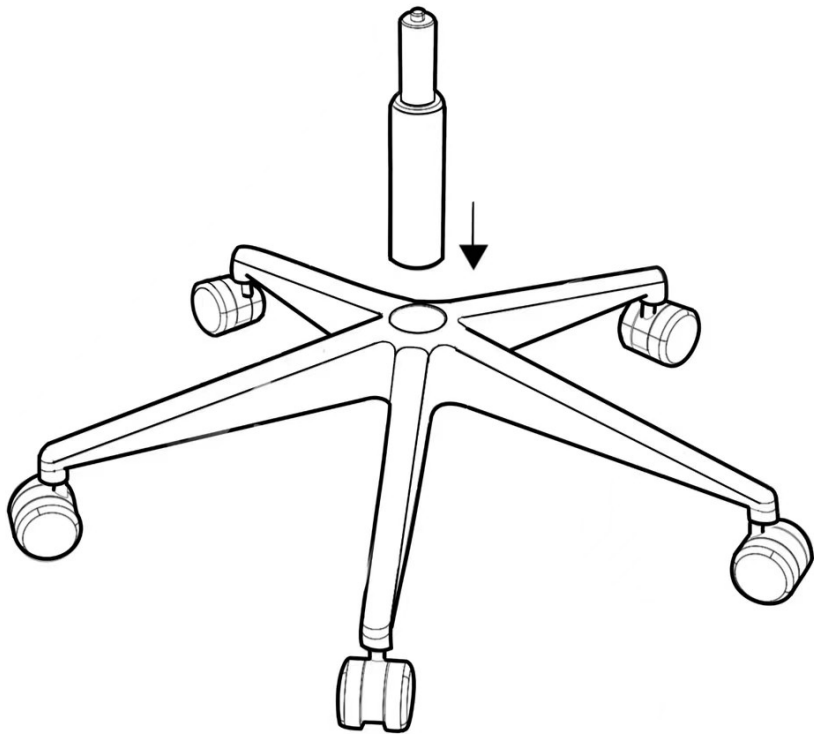

Step 3

Install the backrest to the base

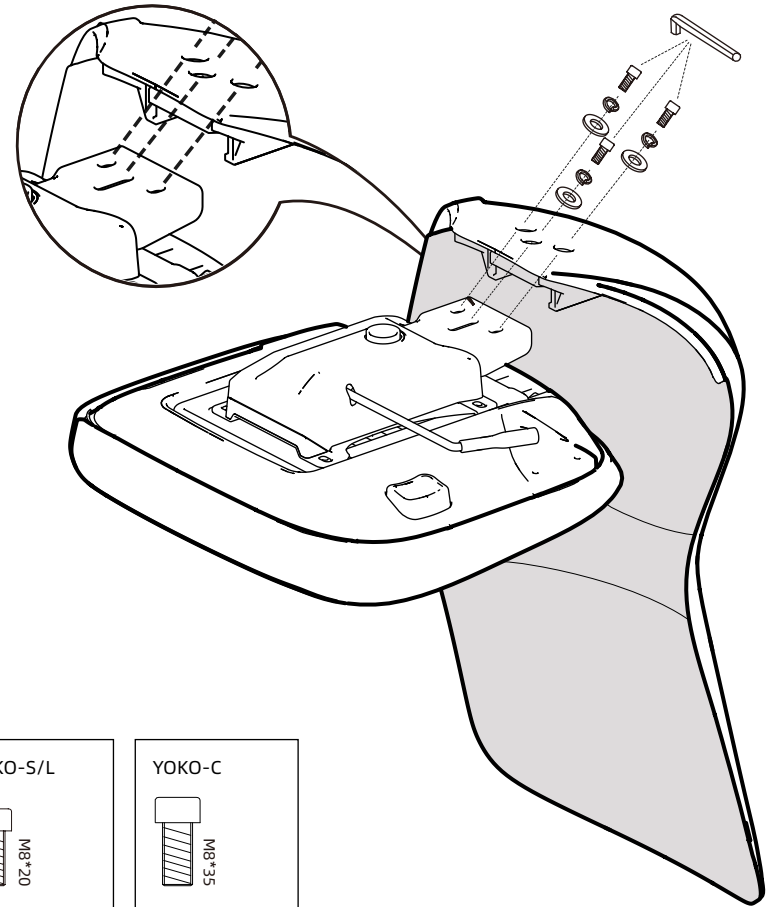


YOKO-S/L	YOKO-C
 M8*20	 M8*35
 M8*2	 M8*2
 M8*2	 M8*2

*The installation method is the same, but for different model numbers, the models of the chassis and mounting screws are different




Step 4

Align the upper half of the assembled seat with the center of the air pressure axis and insert

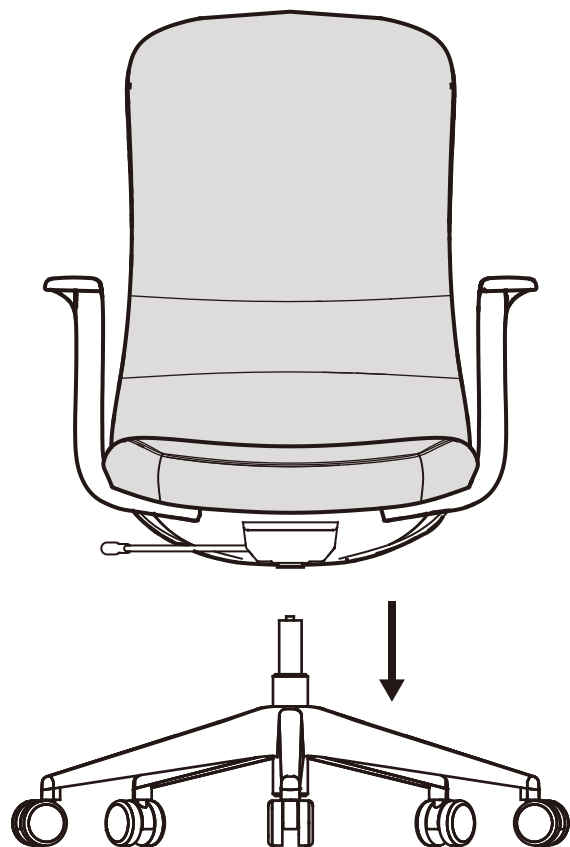

Step 5


Fasten the armrest to the seat cushion

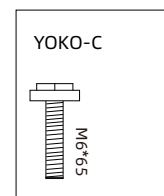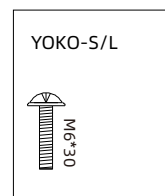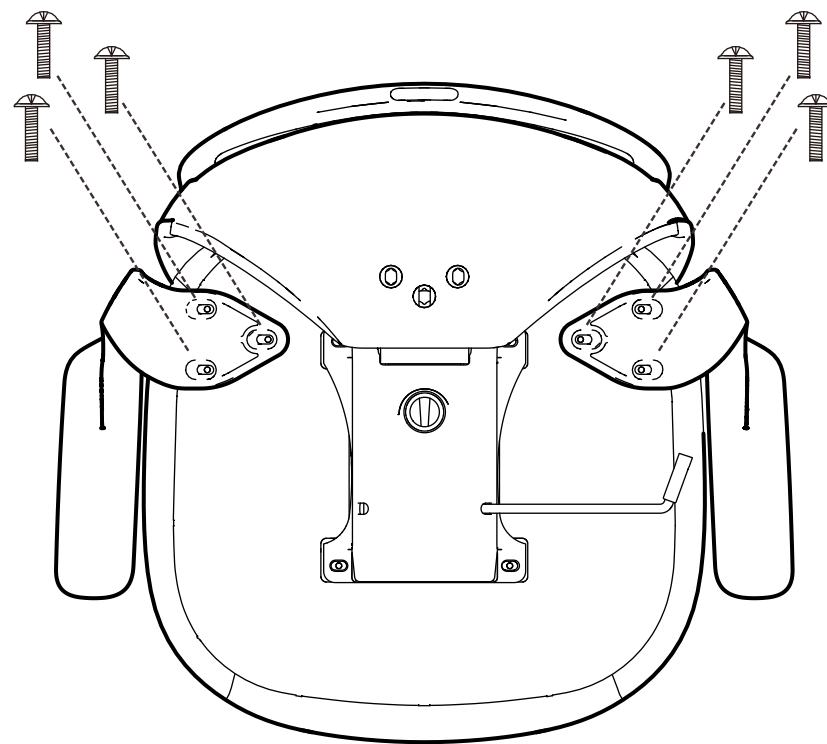

*The installation method is the same, but for different model numbers, the models of the chassis and mounting screws are different

Step 6

 Secure the headrest to the seat back



Step 7

The installation is complete

