


# Locker

Smart Steel Locker's Combination

**NOVAH<sup>®</sup>**

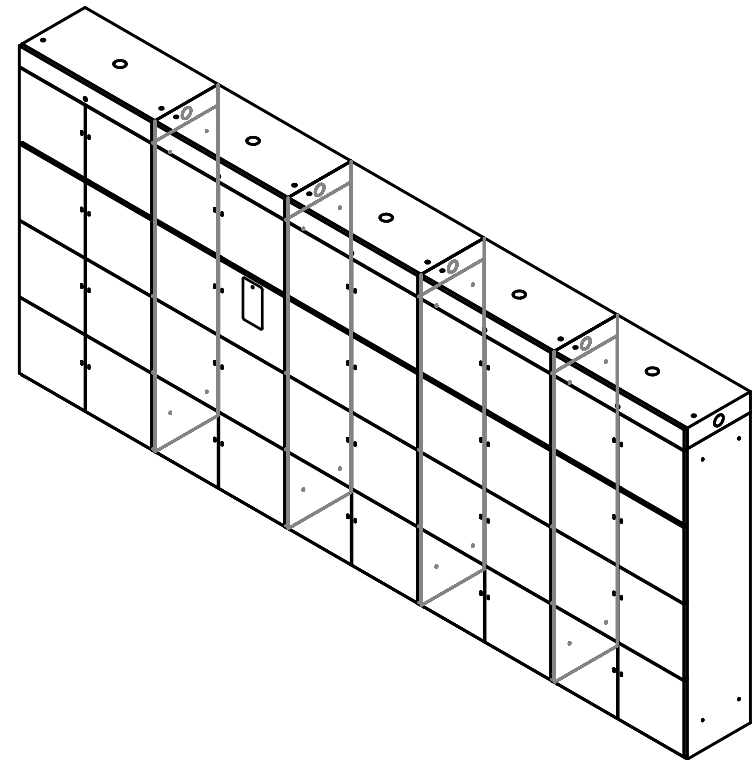

NOVAH System Technology Co.,Ltd.  
Tel: 400-115-1688  
Web: [www.novah.cc](http://www.novah.cc)  
Mail: [int@novah.cc](mailto:int@novah.cc)

**NOVAH<sup>®</sup>**

# Product Parts List

①



4x(M6\*8)

②




4x(M6)

# Step 1

1.After steel lockers are put on the ground properly, fix the 2 steel lockers with butt screws

2.Adjust the bottom cabinet to horizontal with the adjustable feet under it

3.Please refer to the information on the next page for installation and arrangement steps of primary and auxiliary steel lockers;

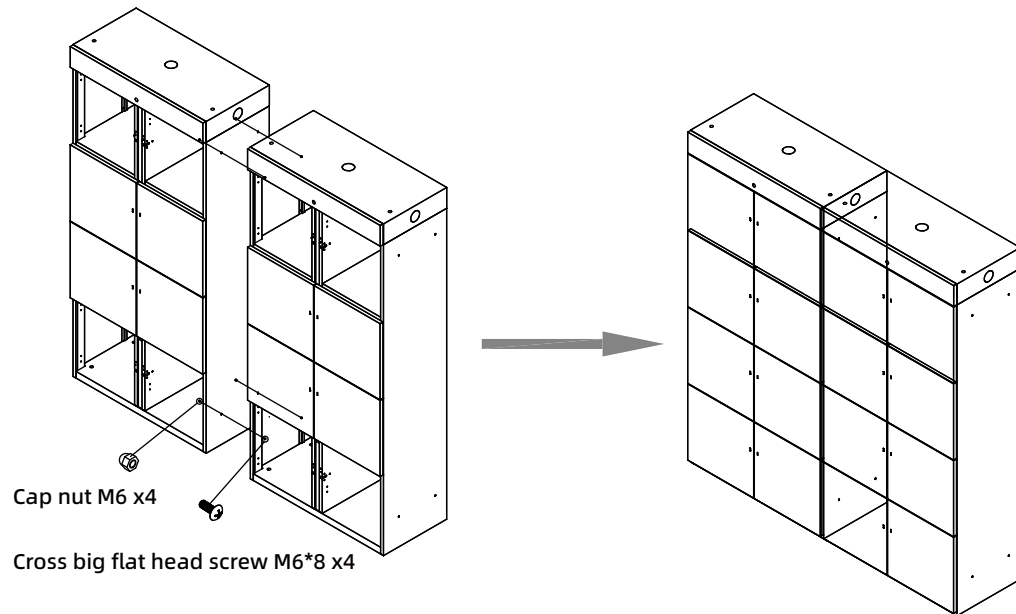


# Step 2

Instructions for installation and arrangement of smart steel lockers:

1. Arrangement from left to right; the second locker is the primary locker, while other lockers are auxiliary ones;

2.After auxiliary lockers reach certain quantity, it's needed to install more primary locker accordingly;

3.Please refer to the information on the next page for wiring instructions

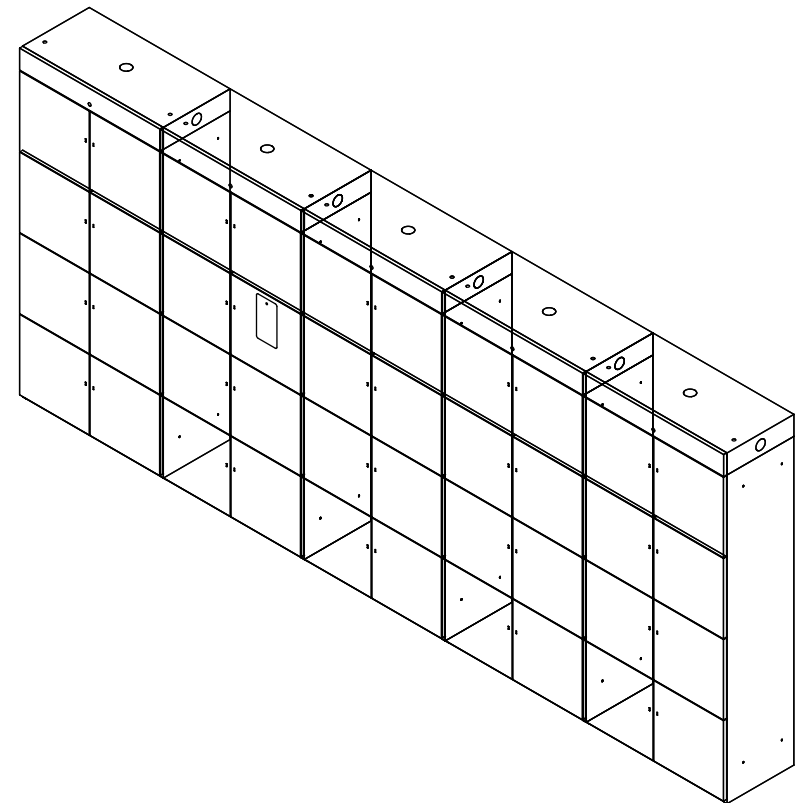

# Step 3

Wiring diagram for smart steel locker:

One 3-plug power position should be reserved for 1-4 smart lockers

Two 3-plug power positions should be reserved for 5-8 smart lockers

