 


Dyna2

Cylindrical Manager's Desk

NOVAH[®]

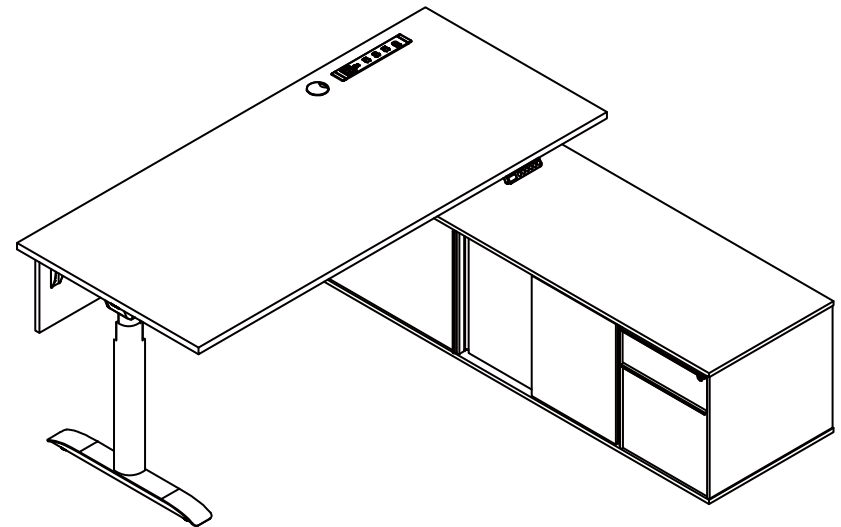

NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH[®]

Product Parts List



(Hexagon socket cylindrical head screw M8-16)



(Hexagon socket cylindrical head screw M6-16)



(Hexagon socket pan head screw M6-16)



(Cross recessed pan head tapping screw ST5.5-20)



(Cross recessed pan head tapping screw ST3.5-12)



(Three-in-one)



(Shelf support pin, shelf support)



(Vent baffle)



(Cross countersunk self-tapping screw 4*16)



(Cross countersunk self-tapping screw 4*12)



(Cross diagonal flat head screw 6*10)



(Cross countersunk self-tapping screw 3*12)



(Cross countersunk self-tapping screw 3.5*14)



(Wooden plug)

 
Step 1

1.Place ① the lifting column and ④ undertable wireway as shown in the figure

2.Install ① the lifting column + ② bottom feet +
+ ③adjustable feet


Sheet metal feet

(Hexagon socket pan head screw M6-16)

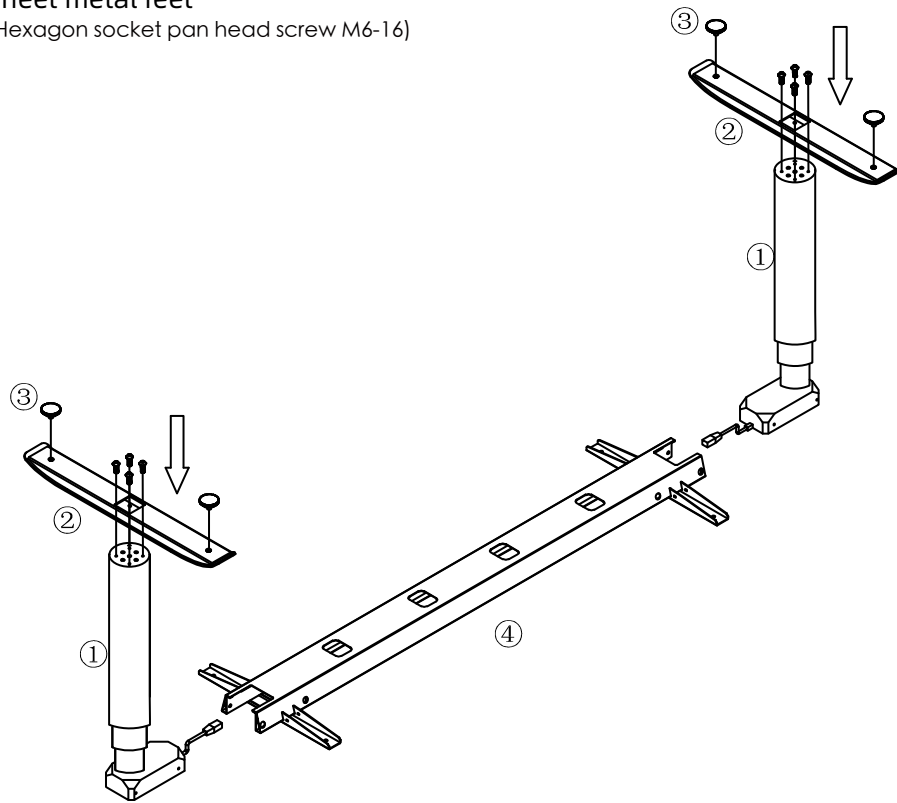

Rock Foot

 
(Hexagon socket pan head screw M6-40)

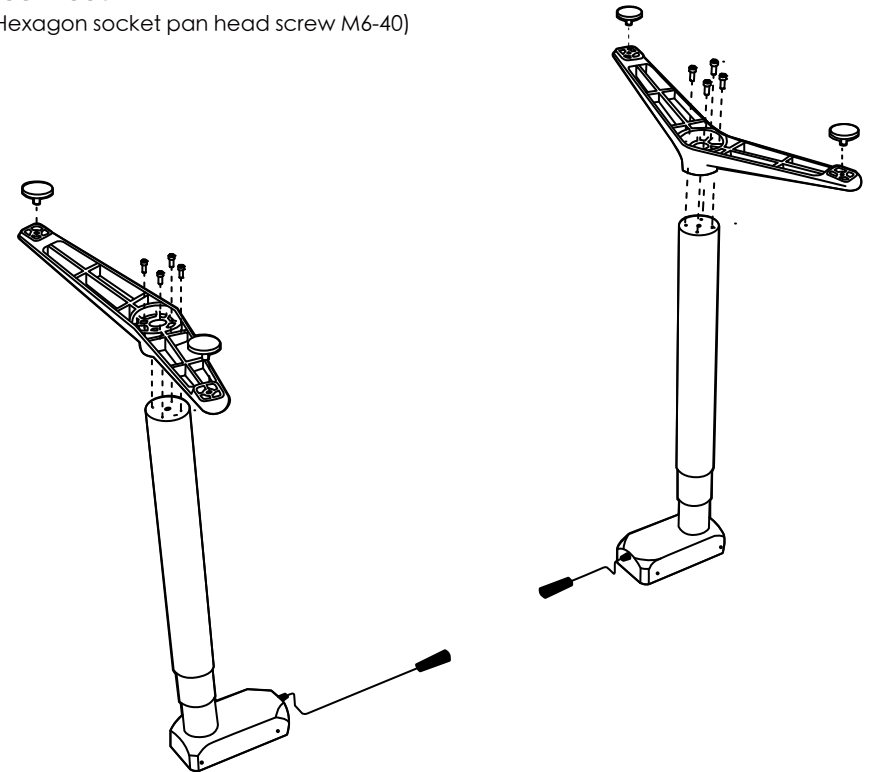

Step 2


1. Install ① the lifting column and ④ undertable wireway
(Hexagon socket cylindrical head screw M6-12)

 2. Table stand turning over

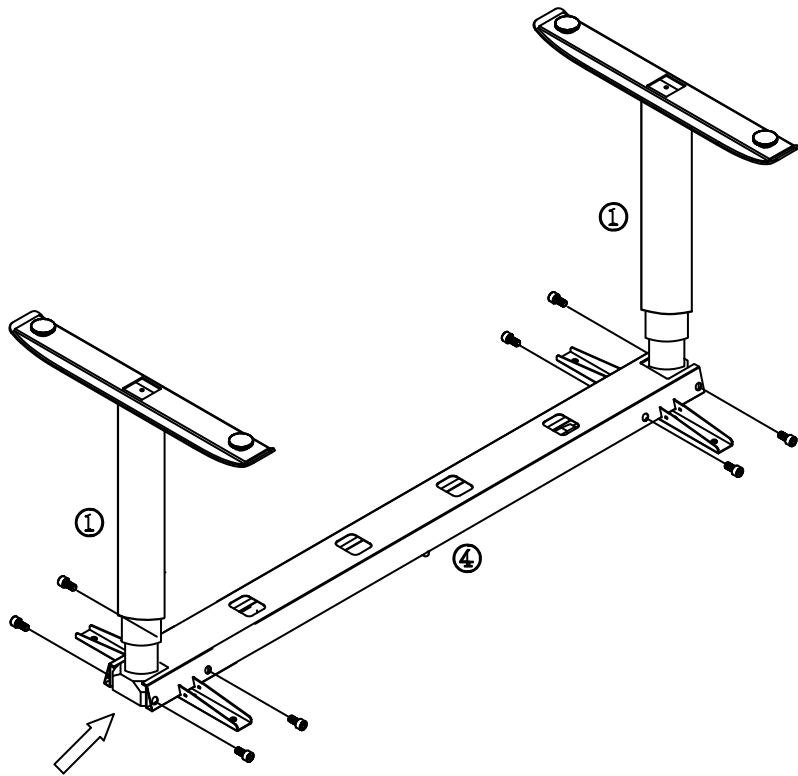


Step 3

 
1. Install the side cabinet

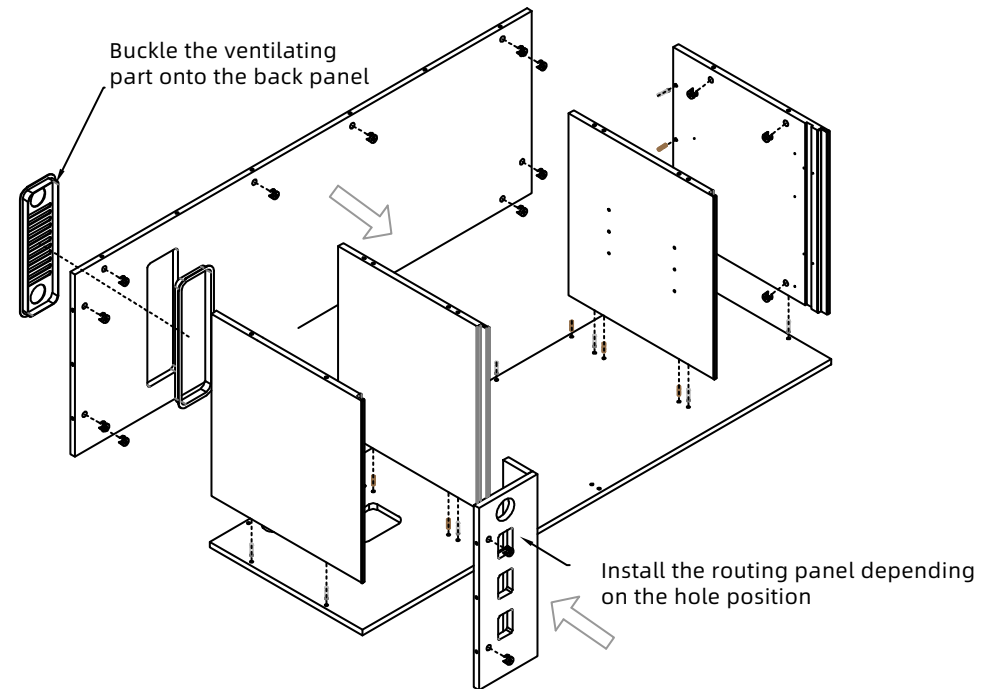

 Step 4

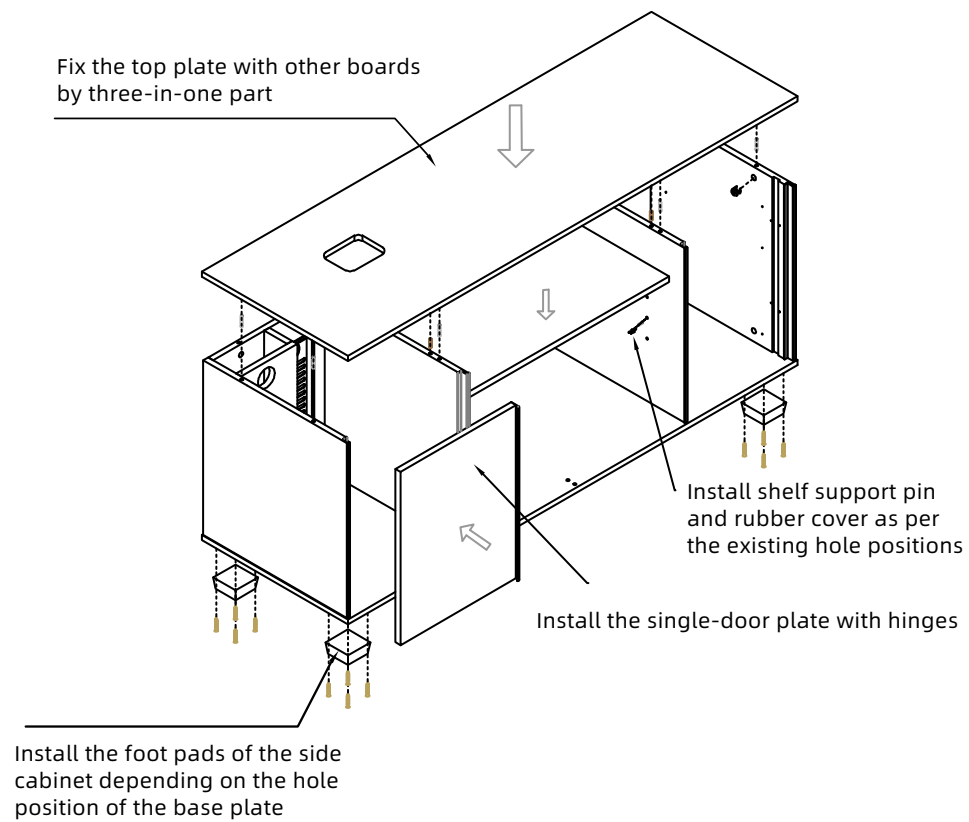


 Step 5

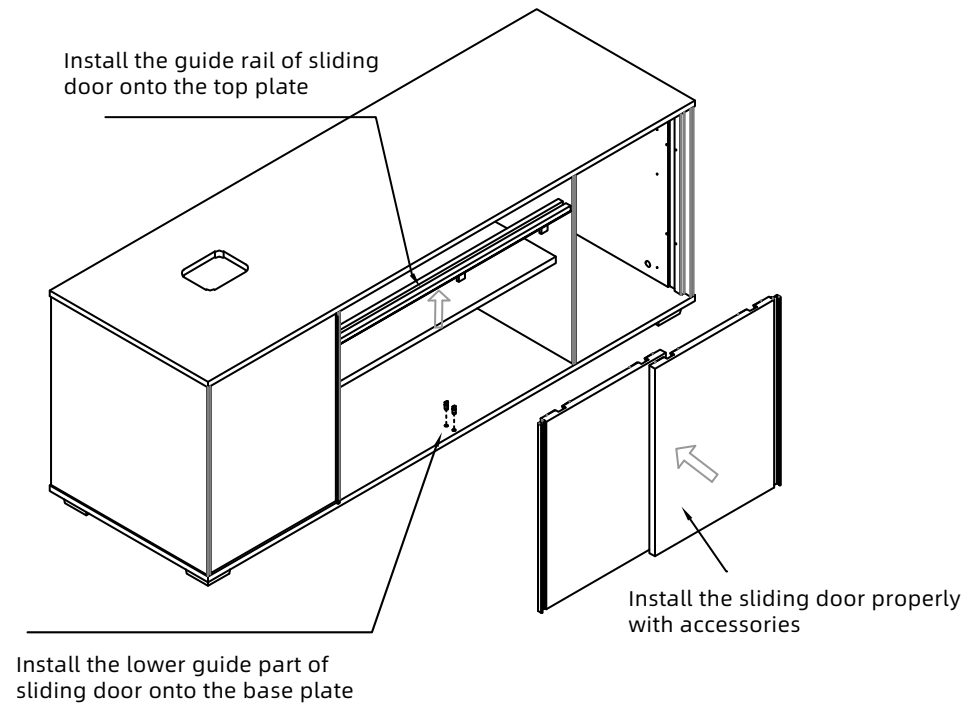


Step 6

 Install the guide rail, link rod and lock rod through the guide hole of side plate

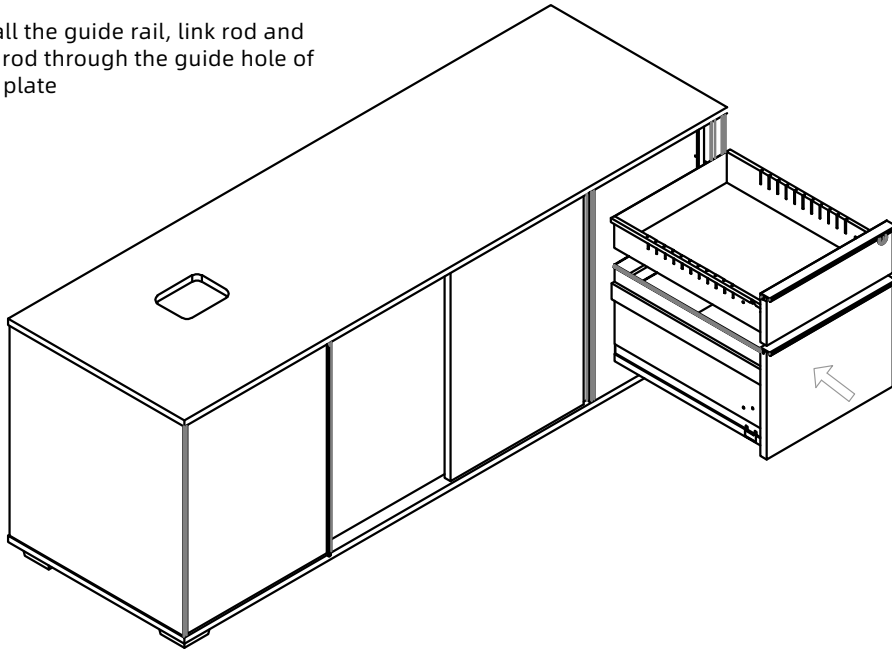

Step 7

 Insert the table stand through the side cabinet and install the bottom connectors of side cabinet

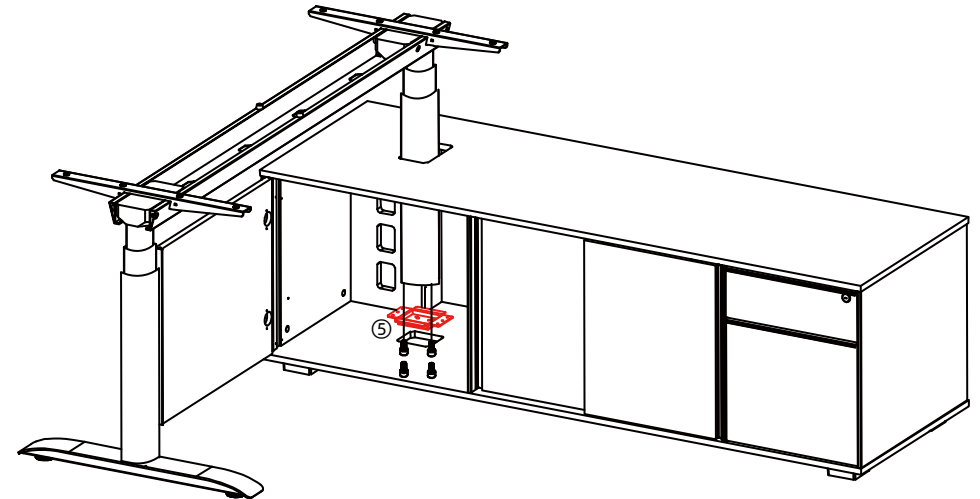

Step 8

 
1. Install the bottom connector of side cabinet and ⑤ coating
(Cross recessed big flat head tapping screw ST5*12)

2. Install ⑥ the clamping part coating of side cabinet
(Cross recessed big flat head tapping screw ST5*12,
Hexagon socket cylindrical head screw M6-16)

3. Install the cables of lifting table
The controller (rose red) is arranged between two holes
with the plane downward;
It is located in the direction of routing;
convenient for connection with the table board
Extension cord (yellow) column (green) power cable (red)
hand controller (blue) installed on the right


4. Install ⑦ the rubber gasket of table board

5. Install ⑧ the heightened pad
(Cross recessed big flat head tapping screw ST3.5*12)

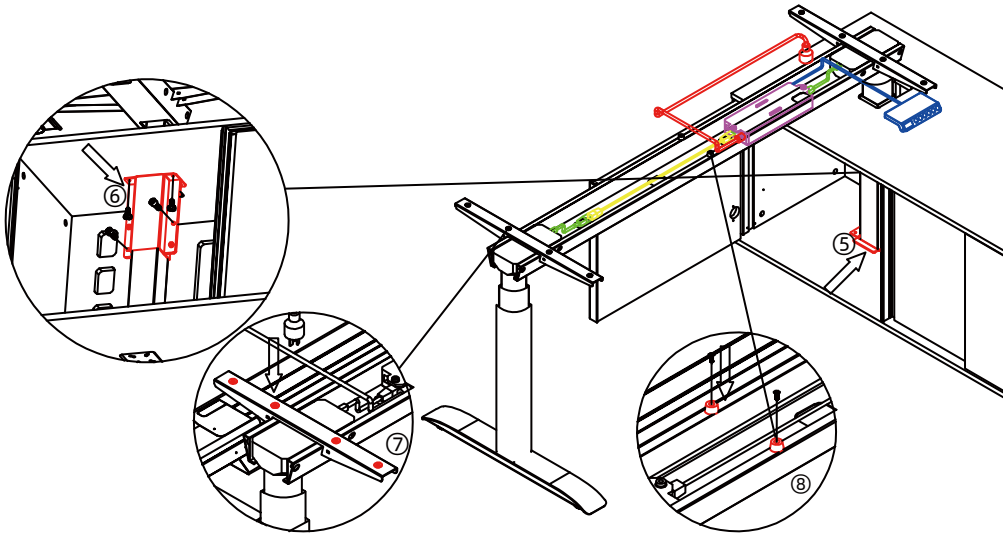

Step 9

 Routing Schematic Diagram

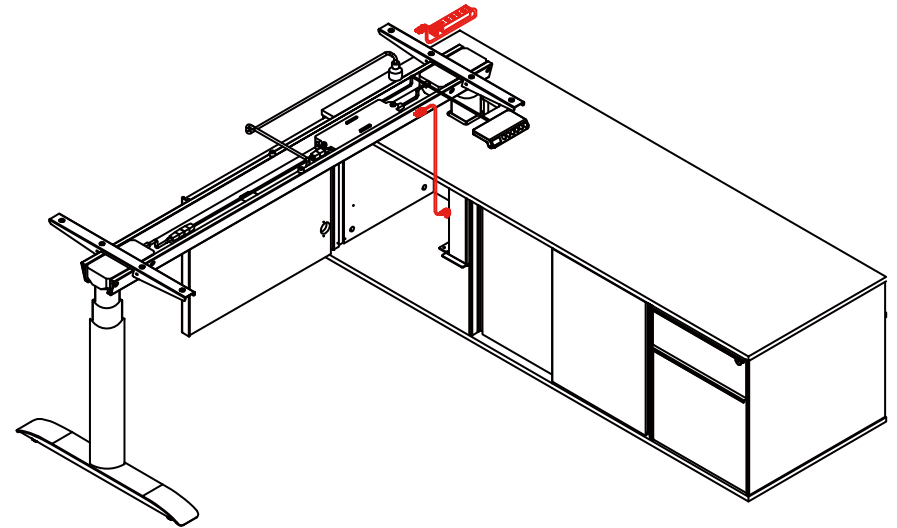


Step 10

1.Test if the lifting system runs normally and check if the circuits are plugged in firmly

2.Install the table board and baffle
(Cross recessed pan head tapping screw ST5.5*20)

3.Install ⑨ the tank chain
Tank routing chain is not applicable to
Dyna cylindrical manager's desk (Locke base)
Fix the table board and the top cabinet of side cabinet

 4.Plug relevant cables inside the tank chain

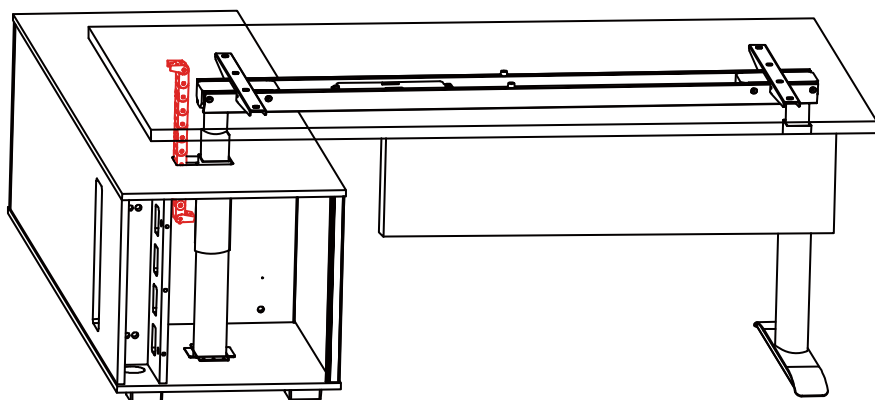


Step 11

1.Install ⑩ the end cover of undertable wireway (ABS) (figure 1)

2.Install ⑪ the support arm of undertable wireway (ABS) (figure 2)


3.Install the hand controller with the cable attached to the support arm (Figure 3)
(Cross recessed pan head tapping screw ST3.5*16)

 4.Fix the controller on the table board (Figure 4)
(Cross recessed pan head tapping screw ST5.5*20)

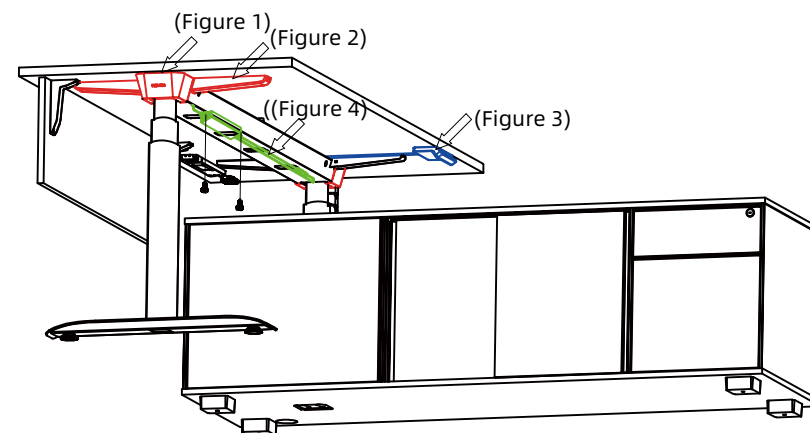

Step 12

 1.The installation is complete

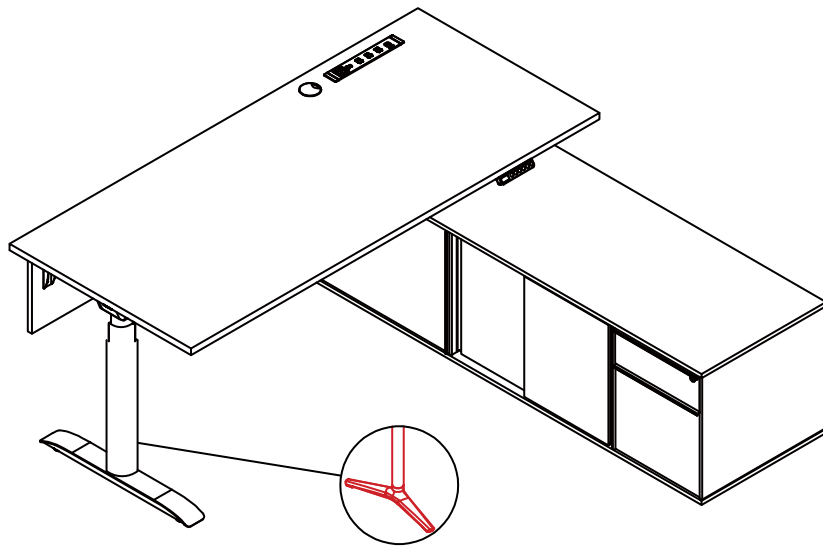

* Circular lifting column fits with Locke base