 


# Dyna\_Pro

Manager's Desk+Side Cabinet

**NOVAH**<sup>®</sup>

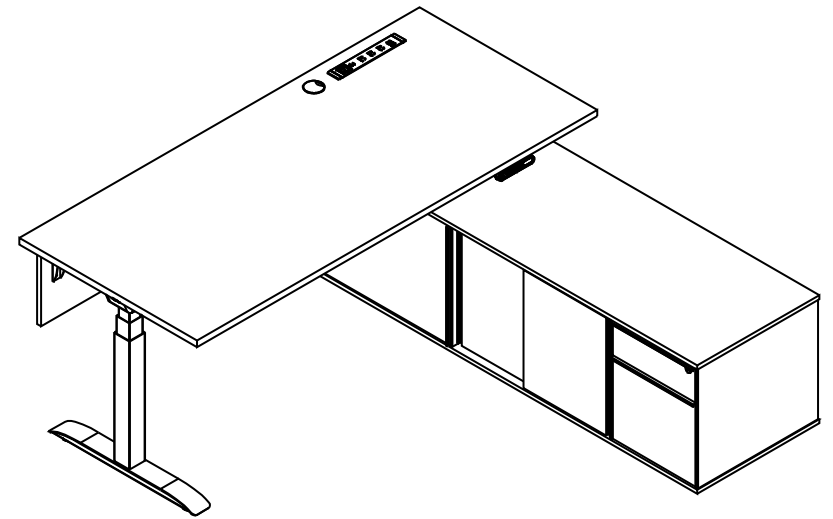

NOVAH System Technology Co.,Ltd.  
Tel: 400-115-1688  
Web: [www.novah.cc](http://www.novah.cc)  
Mail: [int@novah.cc](mailto:int@novah.cc)

**NOVAH**<sup>®</sup>

# Product Parts List



(Hexagon socket cylindrical head screw M6-12)



(Hexagon socket cylindrical head screw M6-16)



(Cross recessed pan head tapping screw ST5.5-20)



(Cross big flat head self-tapping screws ST5-20)



(Cross big flat head self-tapping screws ST5-16)



(Cross recessed pan head tapping screw ST4.2-45)



(Cross recessed pan head tapping screw ST3.5-16)



(Cross big flat head self-tapping screws ST3.5-12)



(Three-in-one)



(Shelf support pin, shelf support)



(Vent baffle)



(Cross countersunk self-tapping screw 4\*16)



(Cross countersunk self-tapping screw 4\*12)



(Cross diagonal flat head screw 6\*10)



(Cross countersunk self-tapping screw 3\*12)



(Cross countersunk  
self-tapping screw 3.5\*14)



(Wooden plug)

 
# Step 1

1. Place ① the lifting column and ④ undertable wireway  
as shown in the figure

2. Install ① the lifting column + ② bottom feet +  
+ ③ adjustable feet

Sheet metal feet

(Hexagon socket pan head screw M6-16)

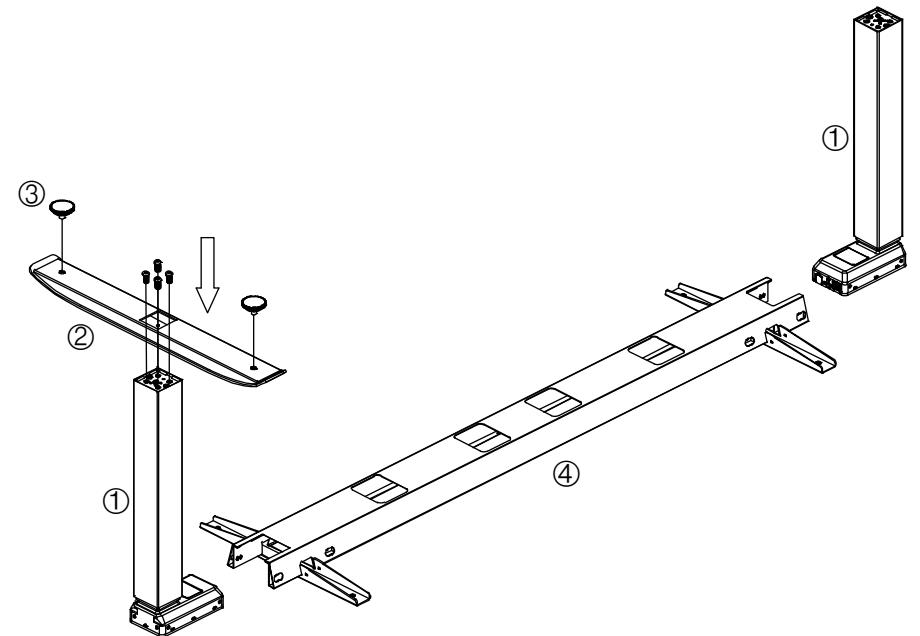


# Step 2

1. Install ① the lifting column and ④ undertable wireway  
(Hexagon socket cylindrical head screw M6-12)

2. Table stand turning over

 
3. After completion, debug and confirm the three-section column is reset at the top and the minimum height is 730mm

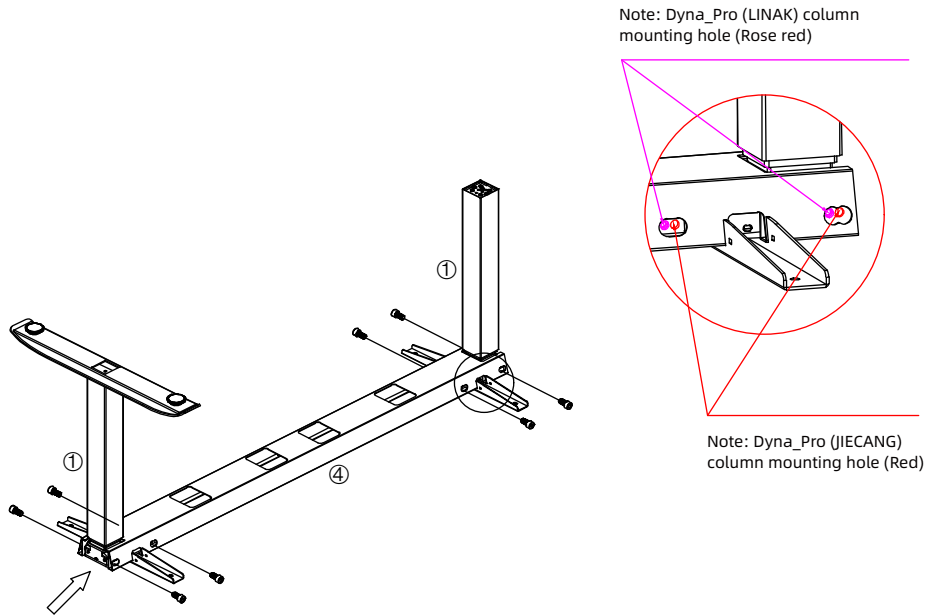


Note: Do not lock the screws on both sides of the lifting column, and the screw length can only be M6-12. Otherwise, it may cause damages to the motor and abnormal noise.

# Step 3

 
1. Install the side cabinet

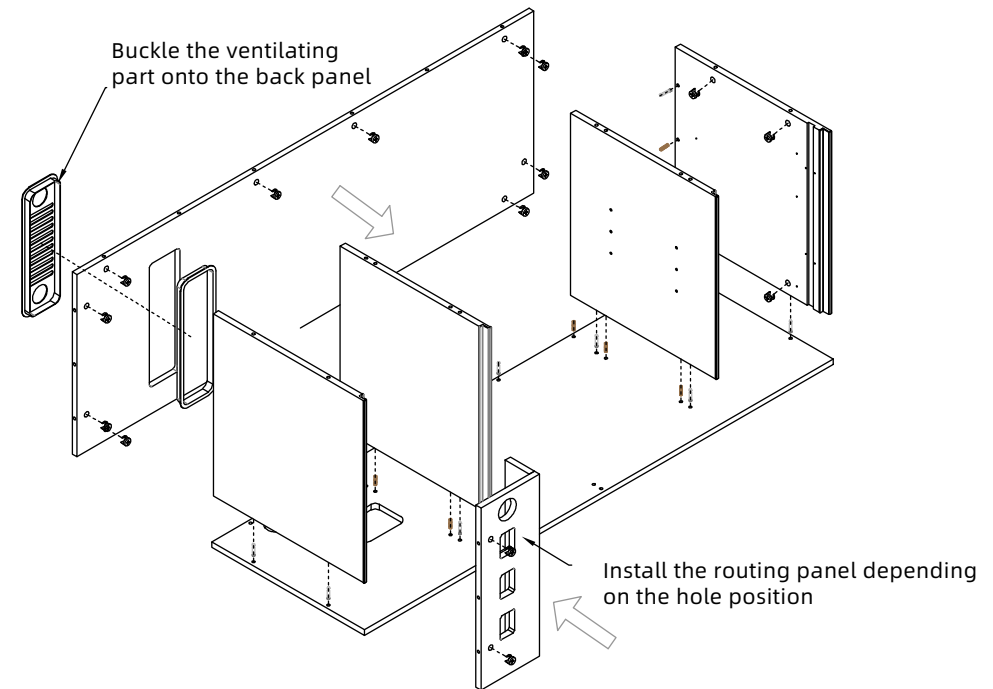

# Step 4

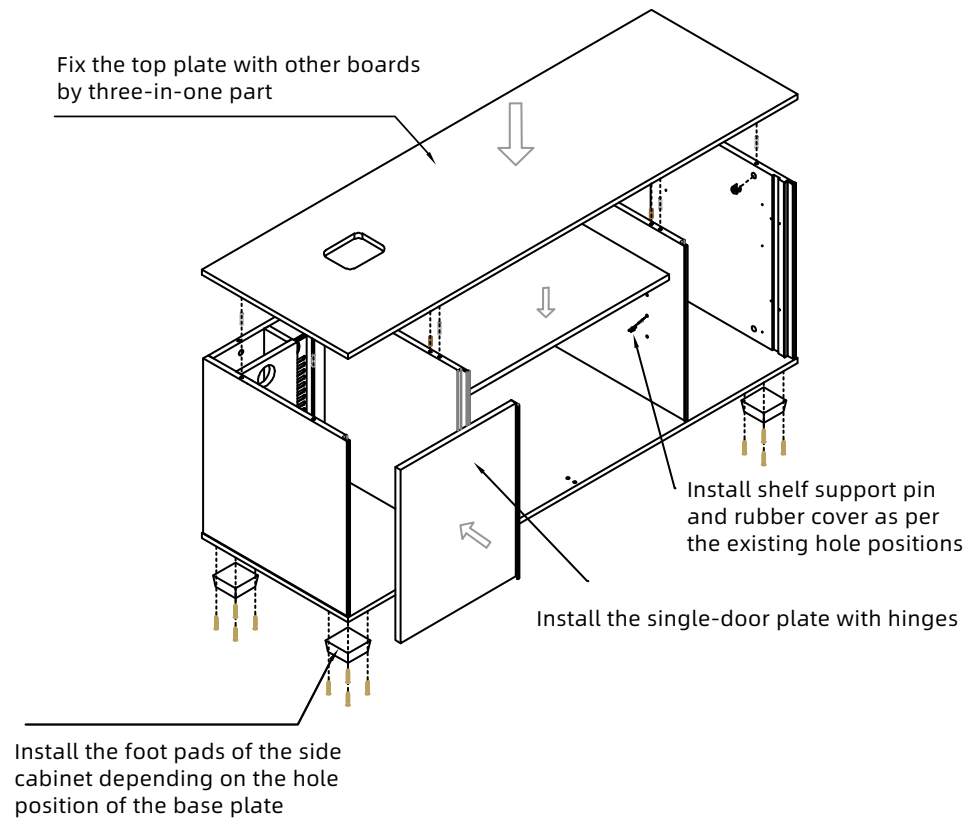 


# Step 5

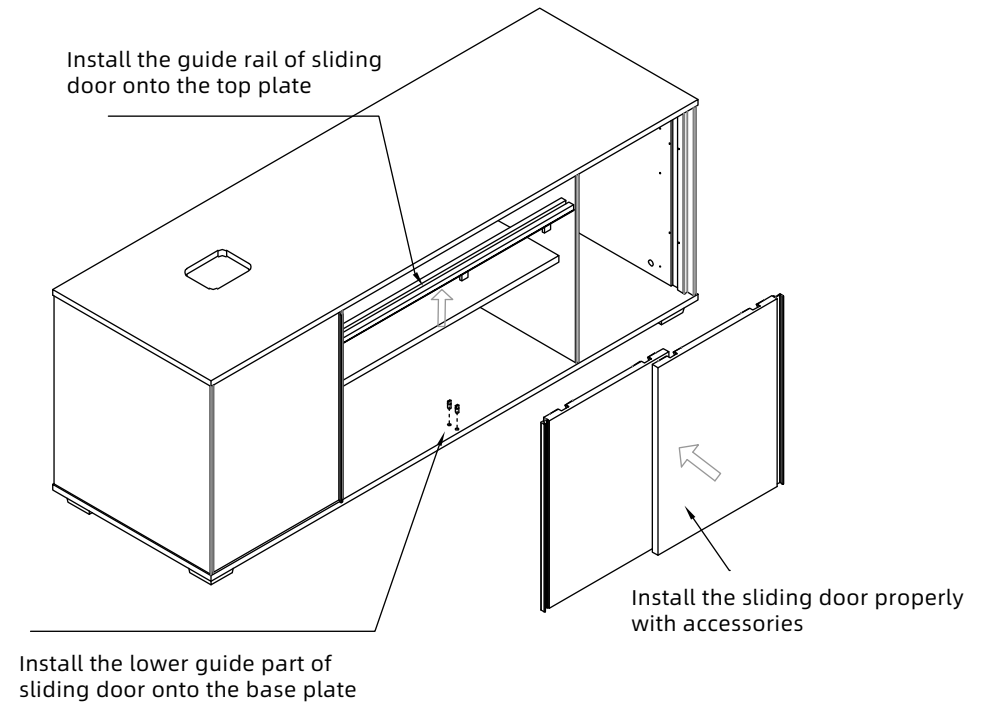 

# Step 6

 Install the guide rail, link rod and lock rod through the guide hole of side plate

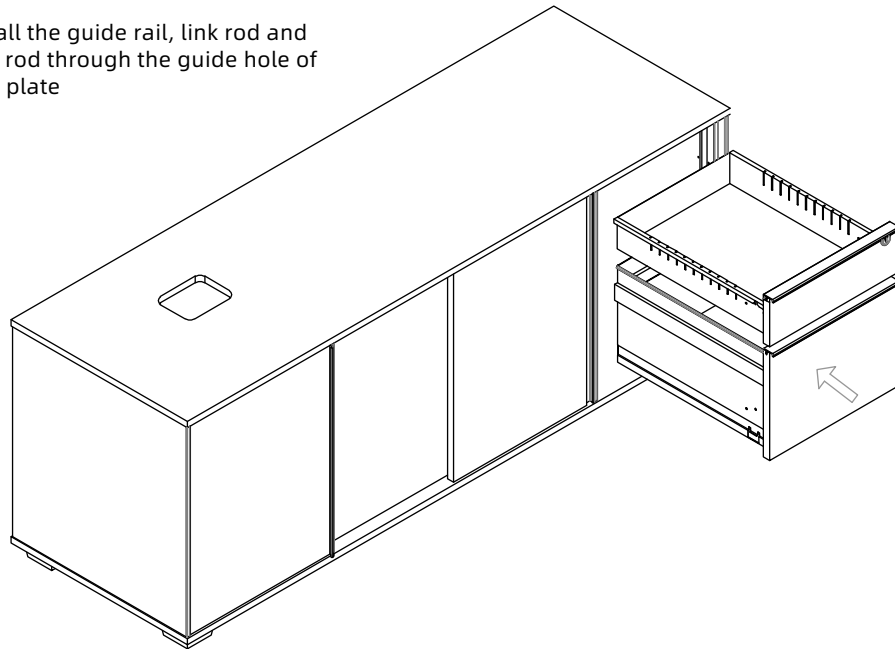


# Step 7

1. Insert the table stand through the side cabinet and install the bottom connectors of side cabinet

(Hexagon socket cylindrical head screw M6-12)

 2. Install the cover of undertable wireway ⑤ (ABS)(Fig. 1)

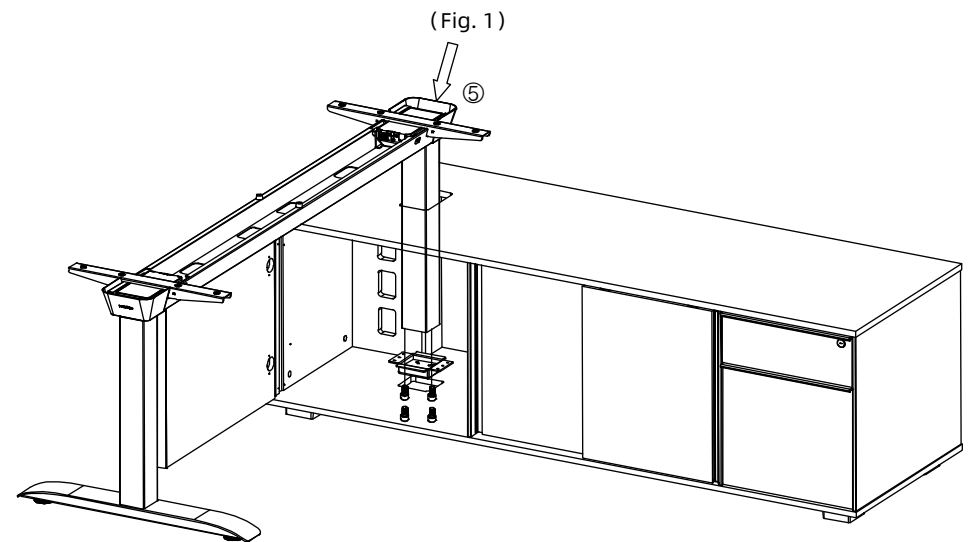

# Step 8

 
1. Install the bottom connector of side cabinet and ⑥ coating  
(Cross recessed big flat head tapping screw ST5\*12)

2. Install ⑦ the clamping part coating of side cabinet  
(Cross recessed big flat head tapping screw ST5\*16,  
Hexagon socket cylindrical head screw M6-16)

3. Install the cables of lifting table  
The controller (rose red) is arranged between two holes  
with the plane downward;  
It is located in the direction of routing;  
convenient for connection with the table board  
Gyroscope (Cyan) is mounted on the side of the controller  
Motor wire (yellow) column (green) power cable (red)  
hand controller (blue) installed on the right


4. Install ⑧ the rubber gasket of table board

5. Install ⑨ the heightened pad  
(Cross recessed big flat head tapping screw ST3.5\*12)

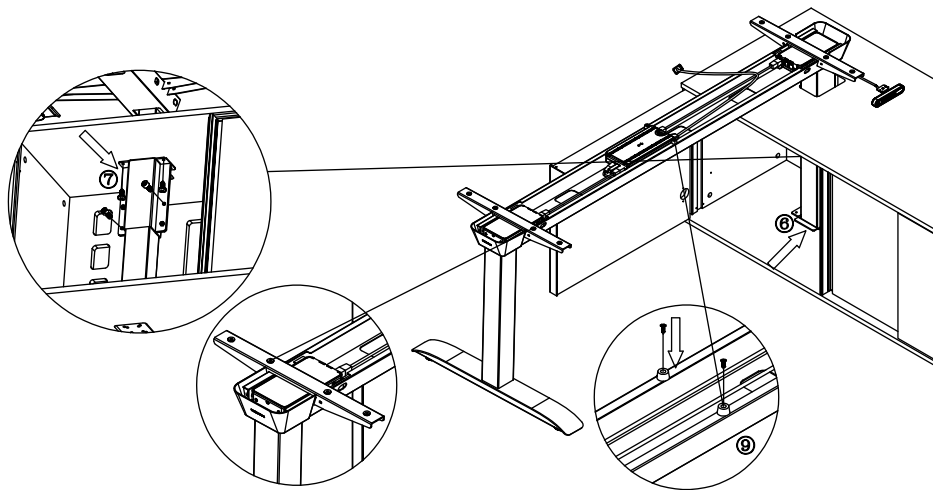

# Step 9

 Routing Schematic Diagram

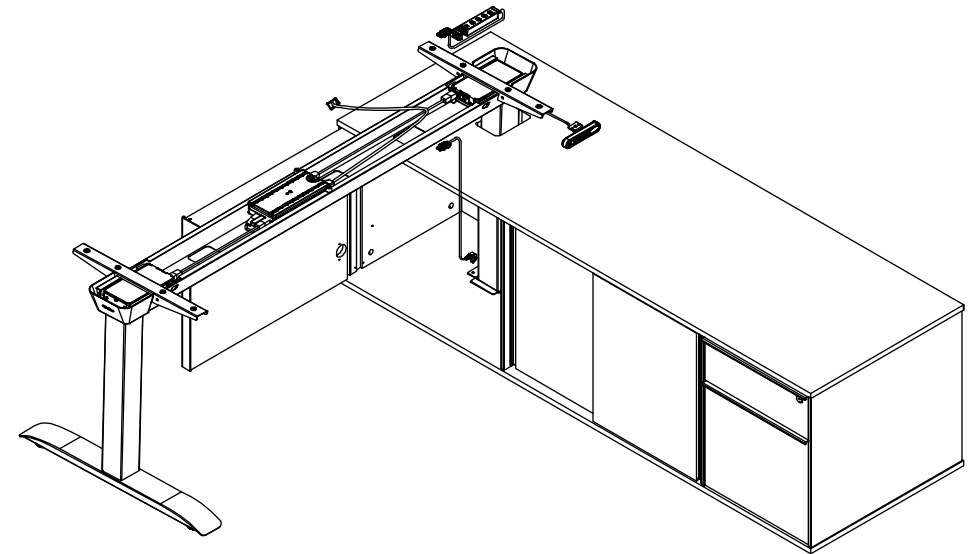

# Step 10

1. Test if the lifting system runs normally and check if the circuits are plugged in firmly

2. Install the table board and baffle

 
(Cross recessed pan head tapping screw ST5.5\*20)

(Cross recessed pan head tapping screw ST5\*16)

3. Install @ the tank chain

Fix the table board and the top cabinet of side cabinet

4. Plug relevant cables inside the tank chain

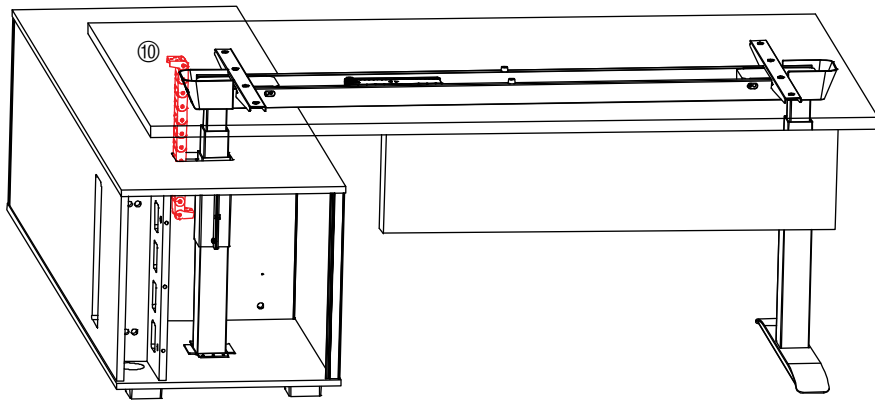

# Step 11

1. Install the support arm of undertable wireway (ABS) (Fig.1)

3. Install the hand controller with the cable attached to the support arm (Fig.2)

 
(DPF1C\_Cross recessed pan head tapping screw ST3.5\*16)

(DPF1K\_Cross recessed pan head tapping screw ST3.5\*16)

(DPG1C\_Cross recessed raised countersunk head tapping screw ST3.5\*32)


4. Fix the controller on the table board (Fig.3)

(Cross recessed pan head tapping screw ST4.2\*45)

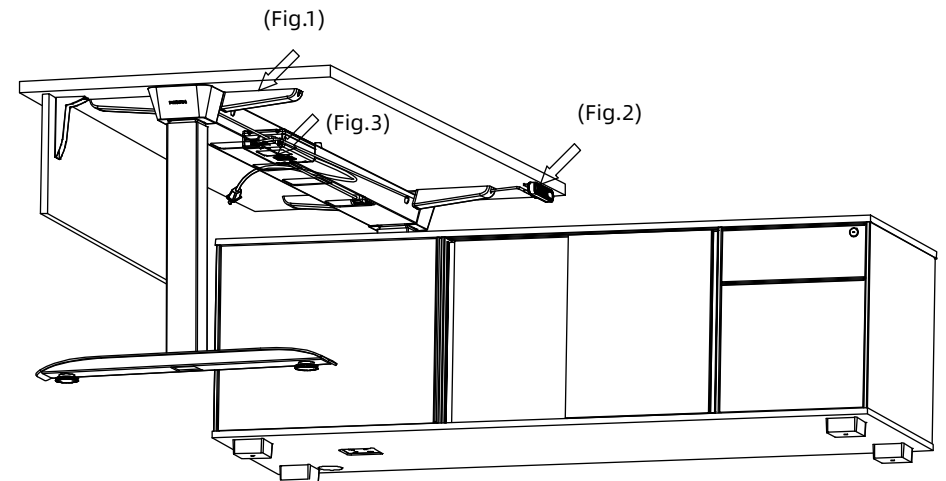

# Step 12

 1.The installation is complete

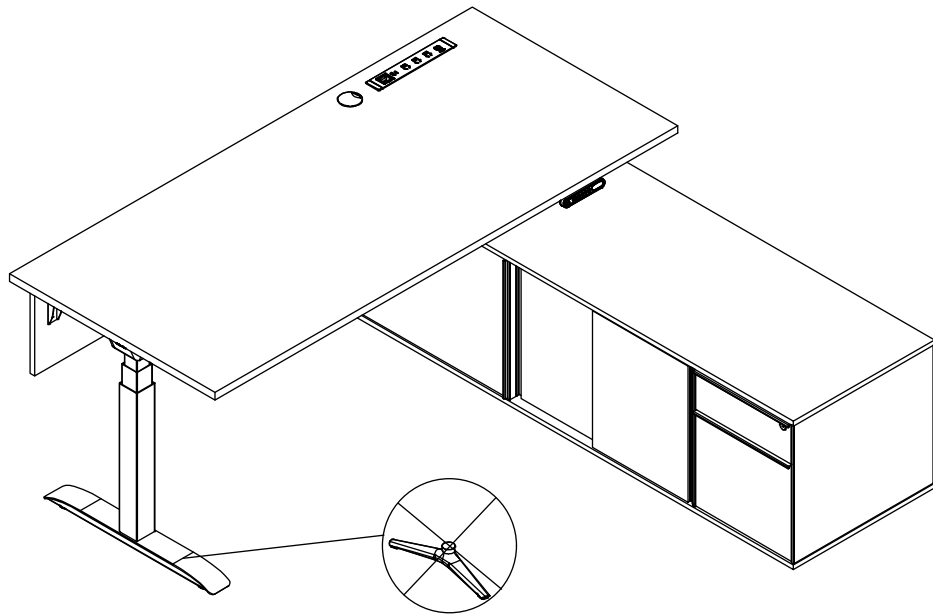

Dyna\_Pro(LINAK) lifting column without Rock legs