

Arris

Guide Book





Seat Depth Adjustment:

To adjust the seat depth:

1. Lift the handle located on the left underside of the seat cushion.
2. Lean back in the chair to a comfortable reclining angle while lifting the handle.
3. Once the desired angle is reached, push the handle down to lock the seat at the adjusted position.

Seat Height Adjustment:

To adjust the seat height:

Lift the handle located on the left underside of the seat cushion.

Adjust the seat height according to your body weight by raising or lowering the seat to the desired position.

Once the appropriate height is achieved, release the handle to lock the seat in place.

To lower the seat, push the handle down to unlock and control the downward movement.