

MELO

Guide Book



**Armrest Adjustment:**

- Adjust armrest height by lifting the control lever upward.
- Slide the armrest forward or backward to adjust its fore-aft position.
- Move the armrest left or right to adjust its side-to-side position.
- Rotate the armrest left or right to adjust its angle.

Headrest Adjustment:

The lowest position of the headrest is where the locking function is activated; conversely, the highest point is where the unlocking function is activated. After engaging the locking function at the lowest point, you can pull up the headrest to raise its height. Once the headrest reaches its maximum height, the unlocking function will be initiated. Following this, you can lower the headrest by pulling it down to decrease its height. When the headrest is lowered to its minimum position, the locking function will automatically re-engage once again.

Lumber Height:

Adjust the lumbar support height by moving it up or down.

Seat depth adjustment:

Pull the handle outward to adjust the seat depth.

Seat height adjustment:


Adjust the seat height by lifting the control mechanism upward.

Tension Control:

Turning the knob clockwise allows for adjusting the backrest tilt tension from its loosest to tightest setting (counterclockwise rotation will decrease tension from tight to loose).

Backrest Reclining Adjustment:

To lock the backrest in place, push the handle downwards. To unlock and adjust the backrest, pull the handle upwards.

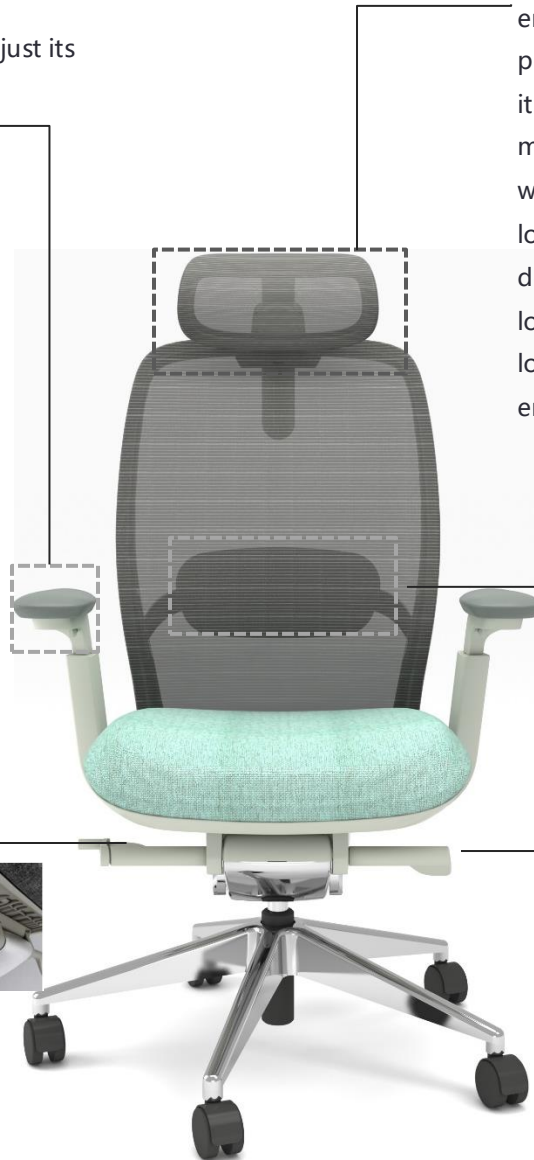

**Headrest Adjustment:**

The lowest position of the headrest is where the locking function is activated; conversely, the highest point is where the unlocking function is activated. After engaging the locking function at the lowest point, you can pull up the headrest to raise its height. Once the headrest reaches its maximum height, the unlocking function will be initiated. Following this, you can lower the headrest by pulling it down to decrease its height. When the headrest is lowered to its minimum position, the locking function will automatically re-engage once again.

Armrest Adjustment:

- Height adjustment: Adjust the armrest height by lifting the control lever upward.
- Fore-aft position: Slide the armrest forward or backward to adjust its position along the depth of the seat.
- Lateral position: Move the armrest left or right to adjust its horizontal placement.
- Angular adjustment: Rotate the armrest left or right to change the angle.

Footrest Adjustment:

The hidden telescoping footrest can be extended by pulling it outward.

**Lumber Height:**

Adjust the lumbar support height by moving it up or down.

**Backrest Reclining Adjustment:**

To lock the backrest in place, push the handle downwards. To unlock and adjust the backrest, pull the handle upwards.

Seat height adjustment:

Adjust the seat height by lifting the control mechanism upwards.

Tension Control:

Turning the tension dial clockwise increases backrest tension, while turning it counterclockwise decreases backrest tension.

**Headrest Adjustment:**

The lowest position of the headrest is where the locking function is activated; conversely, the highest point is where the unlocking function is activated. After engaging the locking function at the lowest point, you can pull up the headrest to raise its height. Once the headrest reaches its maximum height, the unlocking function will be initiated. Following this, you can lower the headrest by pulling it down to decrease its height. When the headrest is lowered to its minimum position, the locking function will automatically re-engage once again.

Armrest Adjustment:

- Adjust armrest height by lifting the control lever upward.
- Slide the armrest forward or backward to adjust its fore-aft position.
- Move the armrest left or right to adjust its side-to-side position.
- Rotate the armrest left or right to adjust its angle.

Seat height adjustment:

Adjust the seat height by lifting the adjustment lever upwards.

Tension Control:

Push the handle inward to lock the backrest in place; pull the handle outward to unlock and adjust the backrest.

**Lumber Height:**

Adjust the lumbar support height by moving it up or down.

Seat depth adjustment:

Move the adjustment lever forward or backward to adjust the seat depth.

Tension Control:

Turning the tension control clockwise increases backrest tension, while turning it counterclockwise decreases backrest tension.

**Headrest Adjustment:**

The lowest position of the headrest is where the locking function is activated; conversely, the highest point is where the unlocking function is activated. After engaging the locking function at the lowest point, you can pull up the headrest to raise its height. Once the headrest reaches its maximum height, the unlocking function will be initiated. Following this, you can lower the headrest by pulling it down to decrease its height. When the headrest is lowered to its minimum position, the locking function will automatically re-engage once again.

Armrest Adjustment:

- Adjust armrest height by lifting the control lever upward.
- Slide the armrest forward or backward to adjust its fore-aft position.
- Move the armrest left or right to adjust its side-to-side position.
- Rotate the armrest left or right to adjust its angle.

**Seat height adjustment:**

To adjust the seat height, lift the adjustment lever upwards.

**Lumber Height:**

Adjust the lumbar support height by moving it up or down.

Seat depth adjustment:

Pull the handle up and down to adjust the seat depth.

**Tension Control:**

Push the handle down to lock the backrest, and pull it up to unlock and adjust the backrest.