

 
Melo

NOVAH[®]




NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc


NOVAH[®]

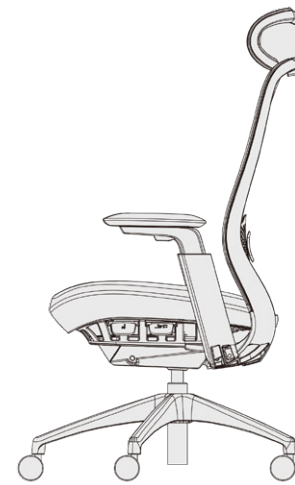


Melo-S

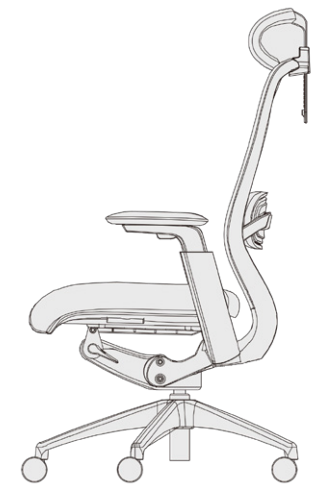 

Melo-V

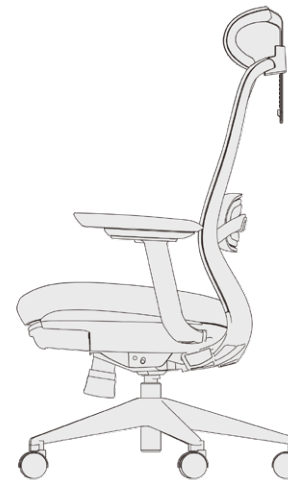 

Melo-C

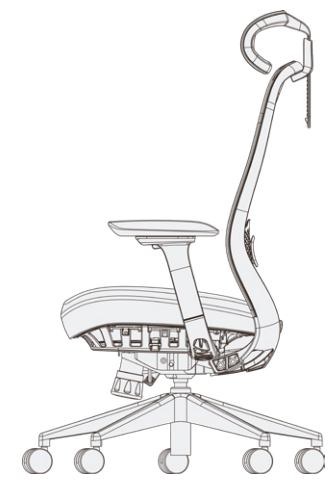 


Melo-L


Product Parts List

Step 1

 
Insert the casters into the five-star feet successively

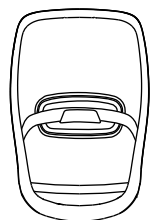


1X

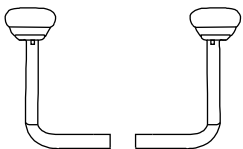 


1X

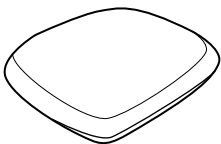 


1X

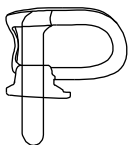 


1X

 


1X

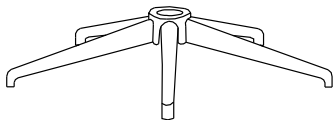 


1X

 

3X

 

2X

 


2X




2X



 
3X




3X

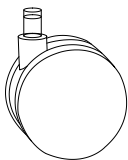 

5X

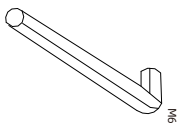 


1X

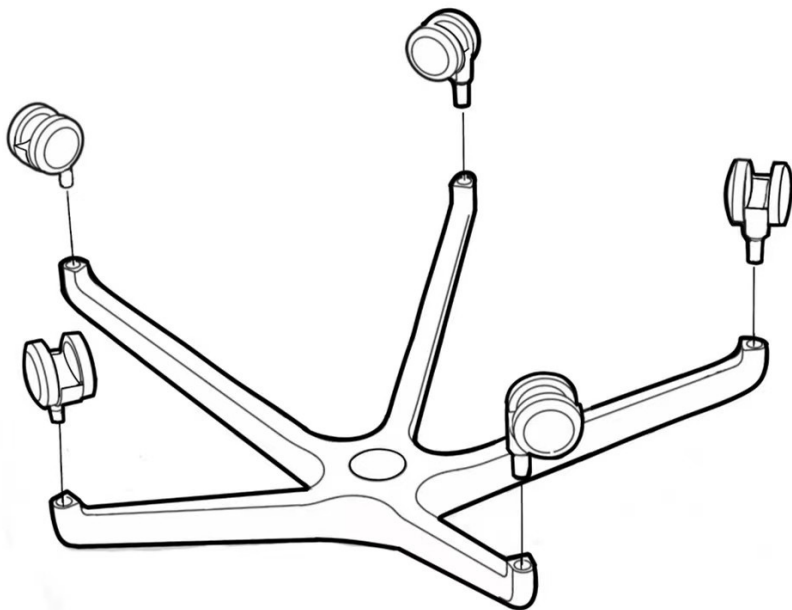 


Step 2

 Place the air pressure rod into the center of the chair feet

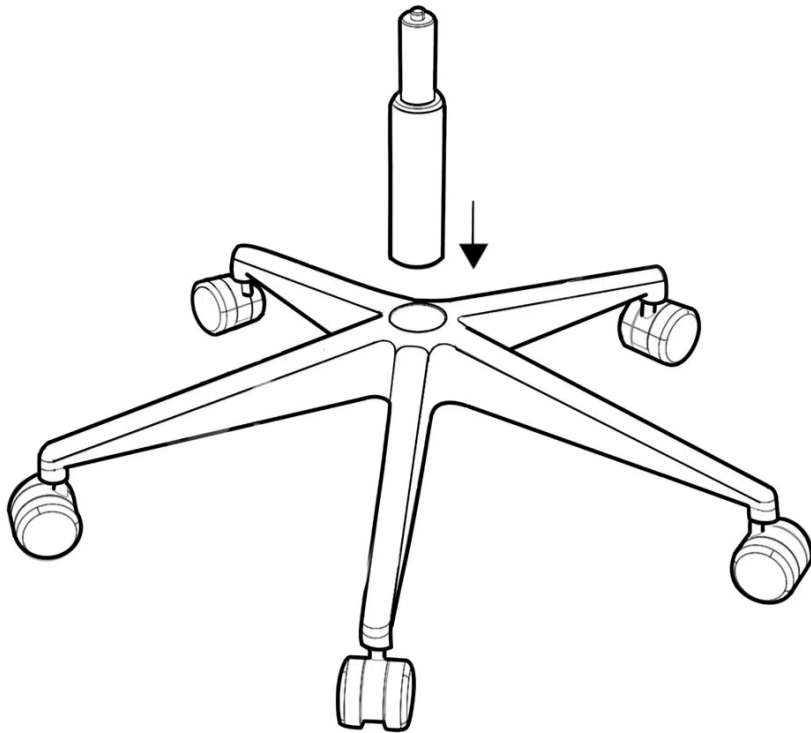


Step 3

 Install the backrest to the base

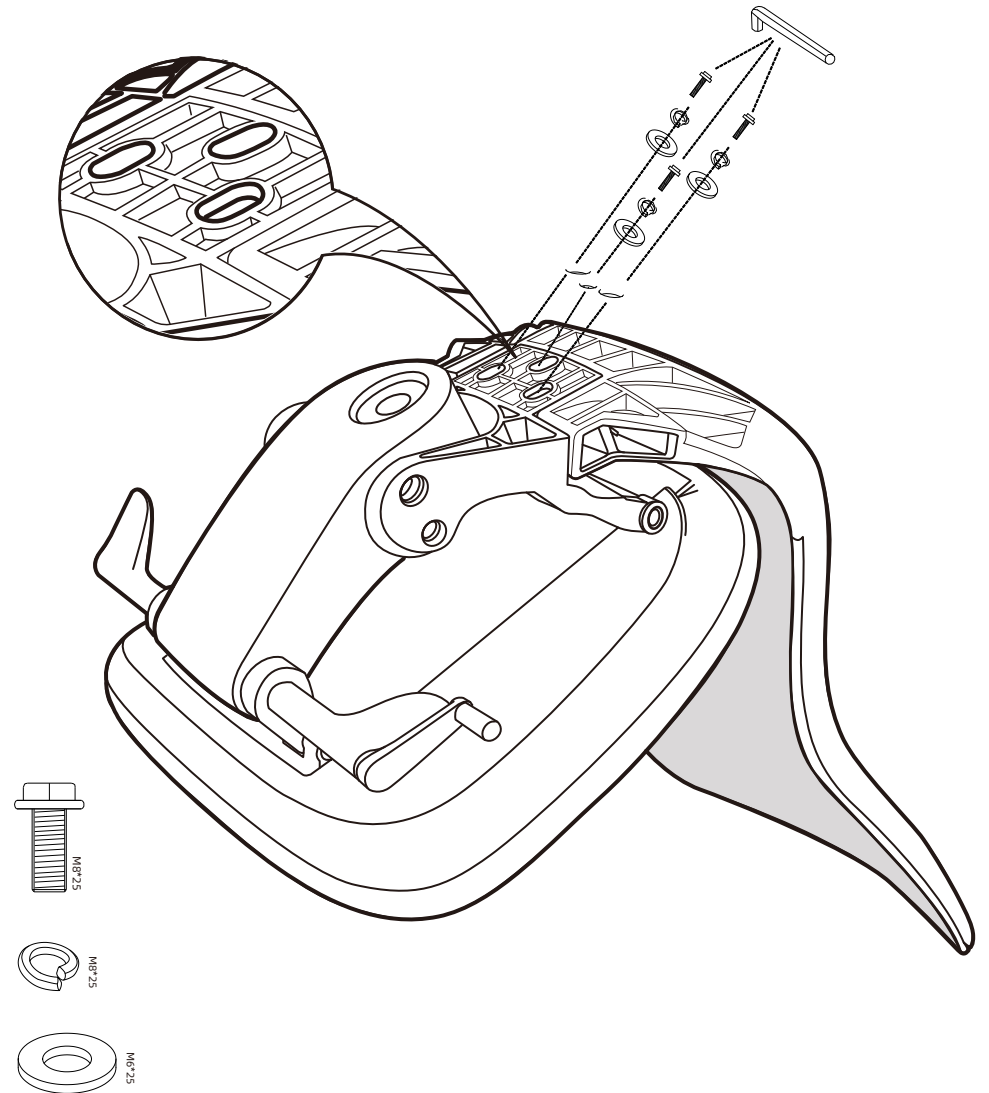


Step 4

 Align the upper half of the assembled seat with the center of the air pressure axis and insert

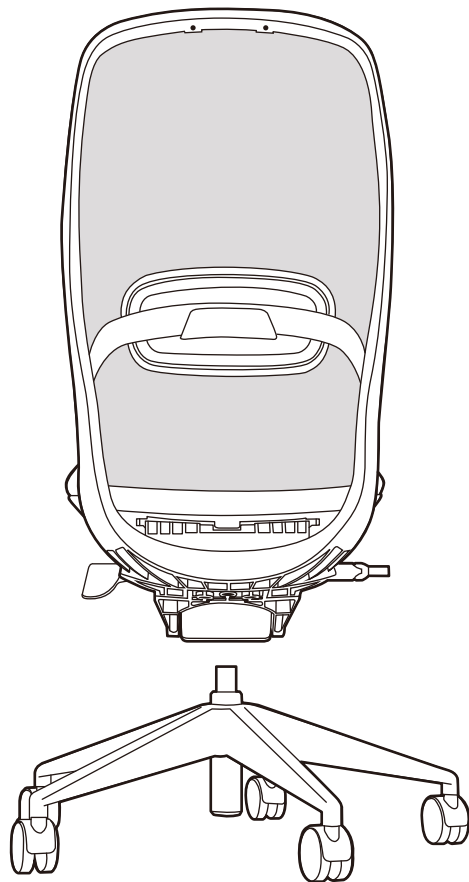


Step 5

 Insert the armrests onto the seat cushion left and right (Melo-S/V)

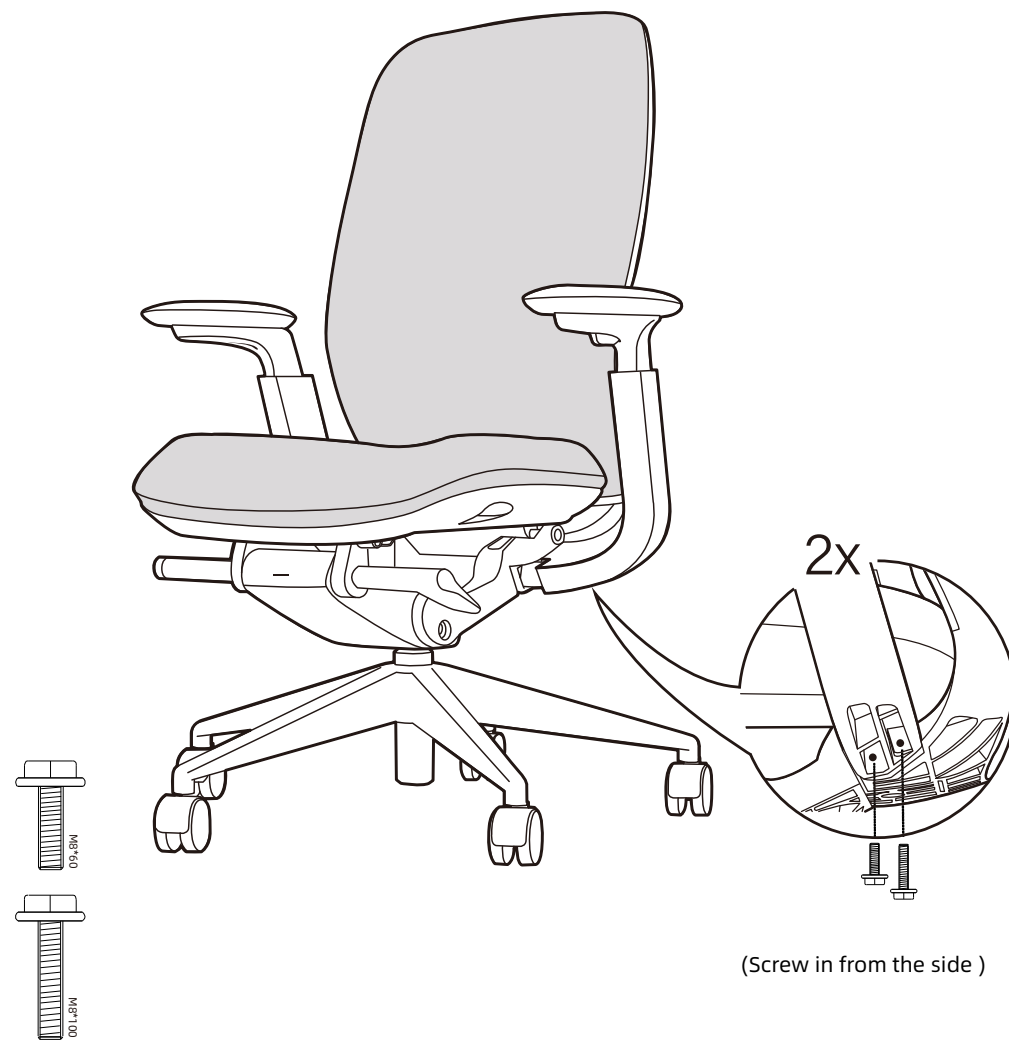


Step 6

 Fix the armrest vertically onto the seat cushion (Melo-L/C)

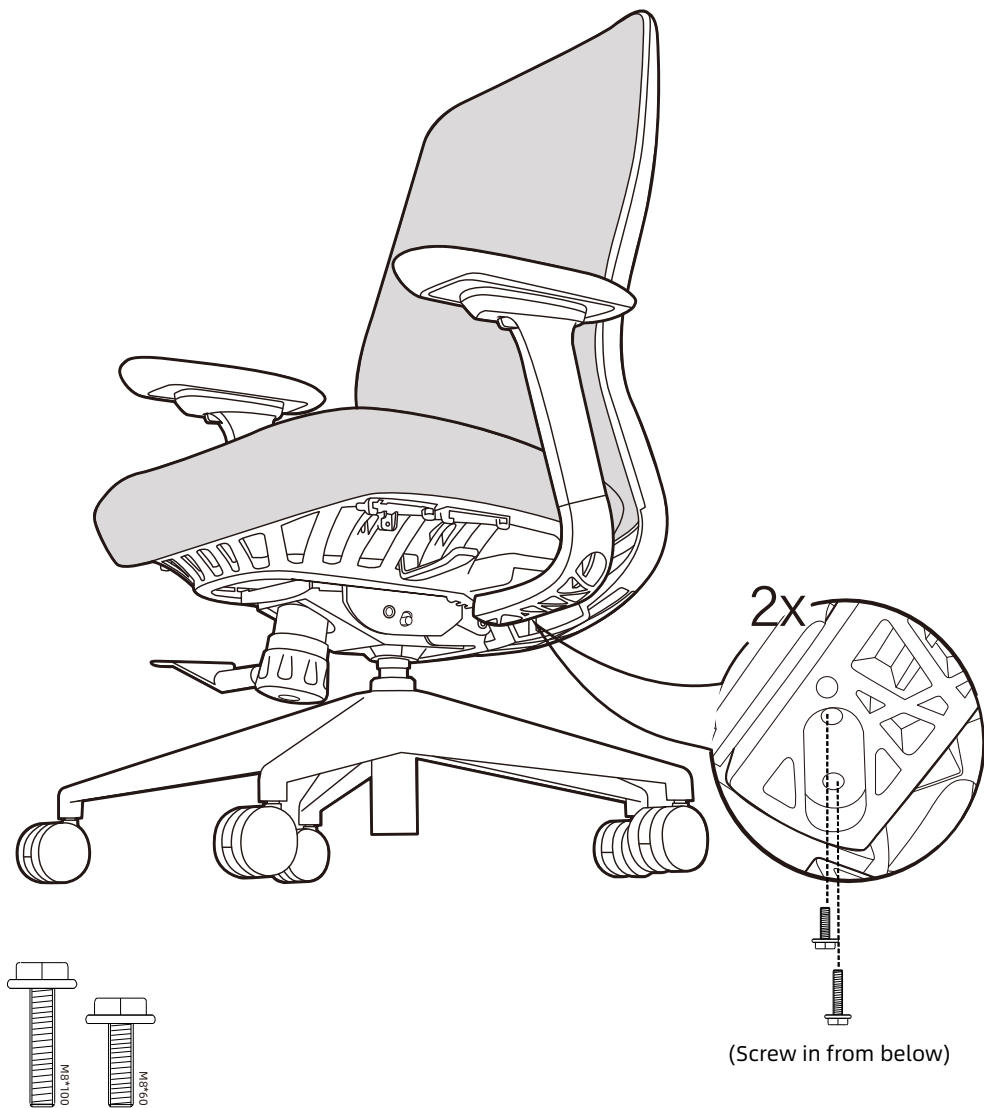

Step 7

 Secure the headrest to the seat back

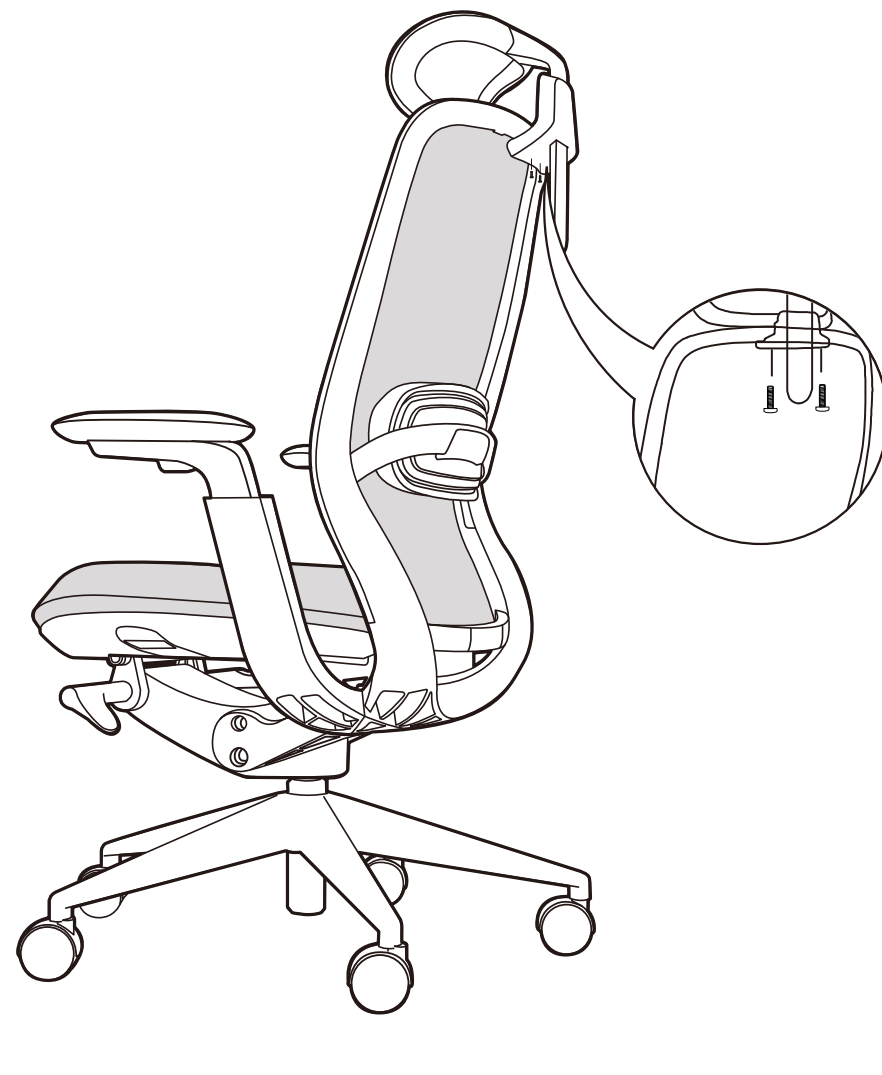

Step 8

The installation is complete

