

NOVAH®

MELO

Guide Book



Headrest Adjustment:

The lowest position of the headrest activates the locking function. The highest position activates the unlocking function. To raise the headrest, unlock it and pull upward. To lower the headrest, pull it fully up to unlock, then push down. Lowering it fully re-engages the lock.

Armrest Adjustment:

- **Height:** Lift the control lever to adjust armrest height.
- **Front/Back Position:** Slide the armrest forward or backward.
- **Left/Right Position:** Slide the armrest laterally.
- **Angle:** Rotate the armrest to adjust its angle.

Seat Height Adjustment:


Lift the control lever to adjust the seat height.



Lumbar Support Adjustment:

Lift the control lever to adjust the lumbar support height.

Functional Adjustments:

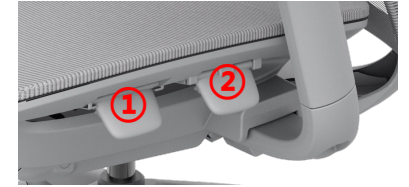

- **Seat Slide Function:** 60mm sliding range to accommodate different user seat depth preferences. Lift the seat upward to slide and adjust seat depth.
- **Recline Lock Function:** Four locking positions with a maximum recline angle of 20°, enabling comfortable, relaxed reclining. Lift upward to release the recline lock; press downward to lock into the desired recline position.

Headrest Adjustment:

The lowest position of the headrest activates the locking function; the highest position activates the unlocking function. To raise the headrest, lift it upwards to disengage the lock, then pull it up to the desired height. To lower the headrest, pull it fully up to unlock, then push it down; returning it to the lowest position re-engages the lock.

Armrest Adjustment:

Lift the control lever to adjust armrest height. Slide the armrest forward or backward to adjust its front-to-back position. Slide the armrest left or right to adjust its lateral position. Rotate the armrest left or right to adjust its angle.

Seat Height Adjustment:


Lift the control lever to raise or lower the seat.



Lumbar Support Adjustment:

Lift the control lever to adjust the height of the lumbar support.

Seat Function Adjustments:

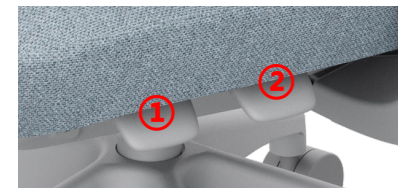

- Lift the seat front upwards to adjust seat depth by sliding the cushion.
- Push the handle downwards to lock the backrest; pull the handle upwards to unlock the backrest.