
## Cluster

Double-sided rectangular 6-seat workstation (A)

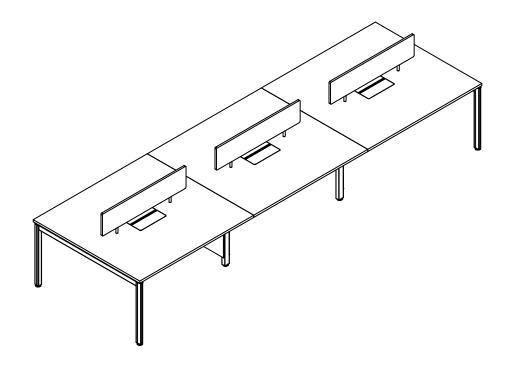







### **Product Parts List**



Cross recessed countersunk

head tapping screw

(4\*20)

**())** 

Cross recessed countersunk head tapping screw (4\*45)



Cross recessed milling-end screw (M4\*10)



Hexagon socket cylindrical head screw (M6\*16)

Hexagon socket cylindrical head screw (M6\*50)

Hexagon socket cylindrical head screw (Including spring washer) (M10\*65)



Screen routing sheet

(NF4B-3003)

Conical upper connector of beam

Tapered support of table board (NFCA-2002)



(NFCA-2003)

Conical lower connector of beam (NFCA-2004)



Flat washer (PD06AT3)



Middle leg support (NFCE-1106)



Middle legs' upper beam end member (NFCE-1107)



Beam support (NFCE-1108)


### Step 1

1.Install door-like side foot

## Tapered support of table board NFCA-2002 x4

### Step 2

1.Install the middle leg (routing type)

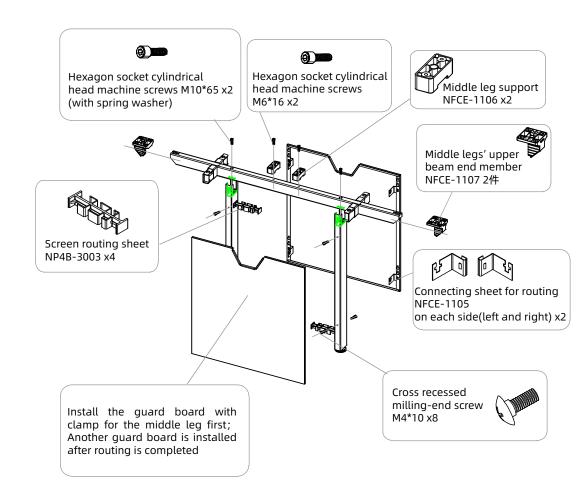


### Step 3

1.Install the table leg stand

# Note: Optional; If not equipped, screws of beam support are 4\*20 Middle support of beam NPCA-2100 x6 Beam support NFCE-1108 x12 Beam's conical upper and lower connector NPCA-2003/2004 x12


## Step 4

1.Install the countertop

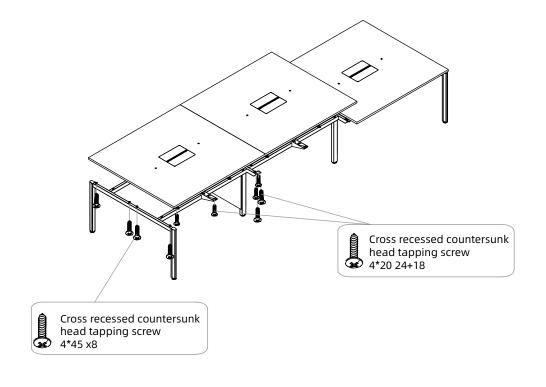

## Step 5

1.Install the desktop screen and wire box

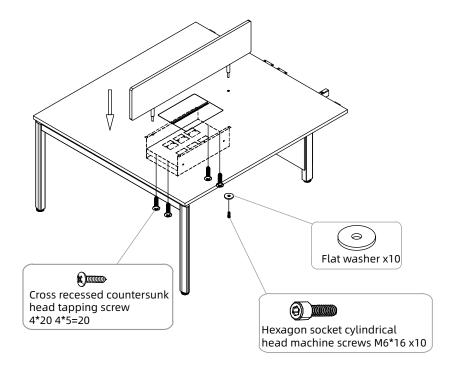

## Step 6

1.The installation is complete

