
# Cluster

**Conference Desk(2-section)** 

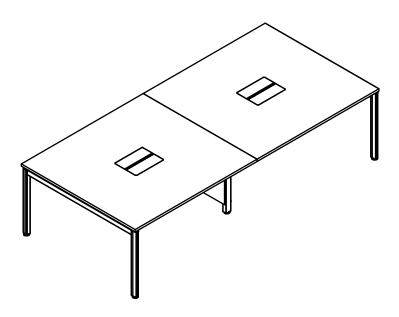







Web: www.novah.cc Mail: int@novah.cc



#### **Product Parts List**



Cross recessed countersunk

head tapping screw

(4\*20)

**())** 

Cross recessed countersunk head tapping screw (4\*45)



Cross recessed milling-end screw (M4\*10)





Hexagon socket cylindrical head screw (M6\*16)

Hexagon socket cylindrical head screw (M6\*50)

Hexagon socket cylindrical head screw (Including spring washer) (M10\*65)



Tapered support of table board

(NFCA-2002)



Screen routing sheet (NF4B-3003)



Conical upper connector of beam (NFCA-2003)



٥



Flat washer (PD06AT3)

Middle leg support (NFCE-1106)



Conical lower

connector of beam

(NFCA-2004)


Middle legs' upper beam end member (NFCE-1107)



Beam support (NFCE-1108)


#### Step 1

1.Install door-like side foot

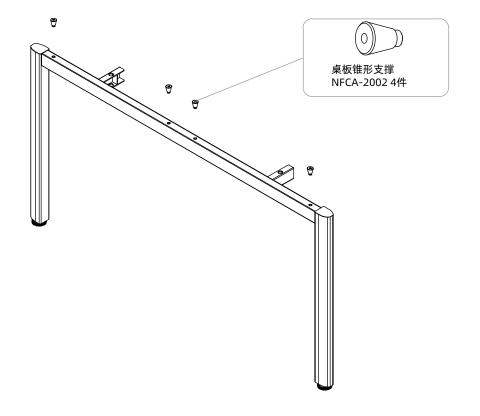


#### Step 2

1.Install the middle leg (routing type)

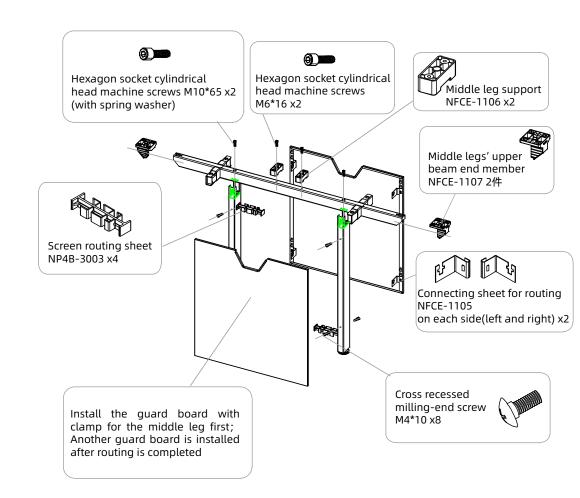


#### Step 3

1.Install the table leg stand

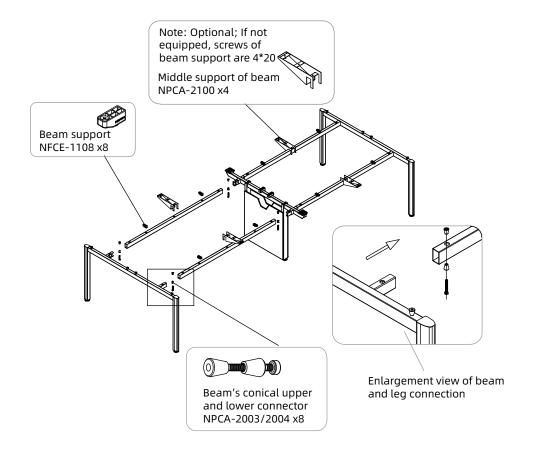


### Step 4


1.Install the countertop

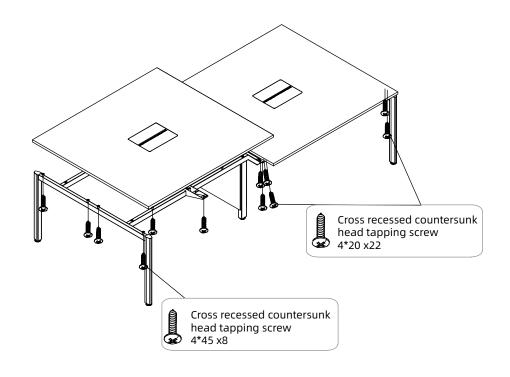

# Step 5


1.Install the wire box

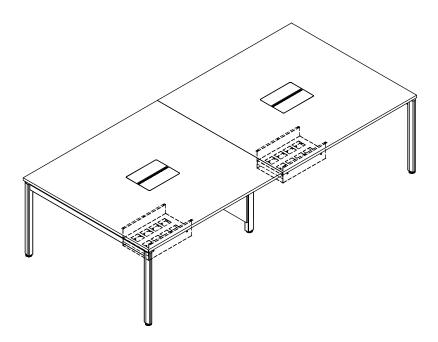



## Step 6

1.The installation is complete

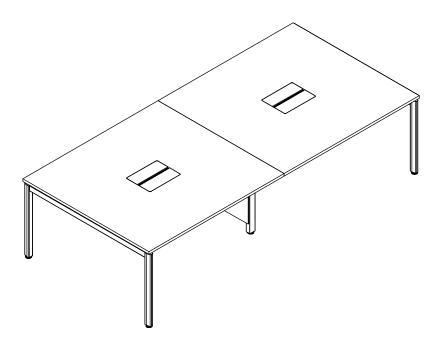

Make sure to fasten the screws of flat guard board to avoid excessive gap and abnormal noise!