


# FourSure 88

Without Armrest


**NOVAH<sup>®</sup>**

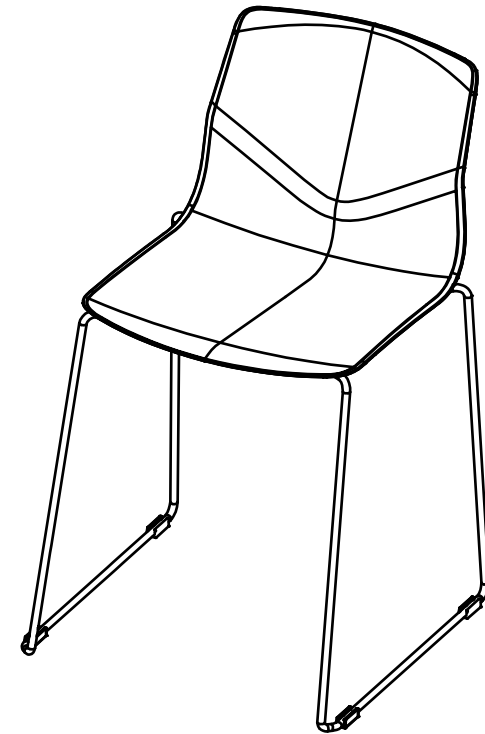

NOVAH System Technology Co.,Ltd.  
Tel: 400-115-1688  
Web: [www.novah.cc](http://www.novah.cc)  
Mail: [int@novah.cc](mailto:int@novah.cc)

**NOVAH<sup>®</sup>**

# Product Parts List



1x



1x




4x




1x


# Step 1

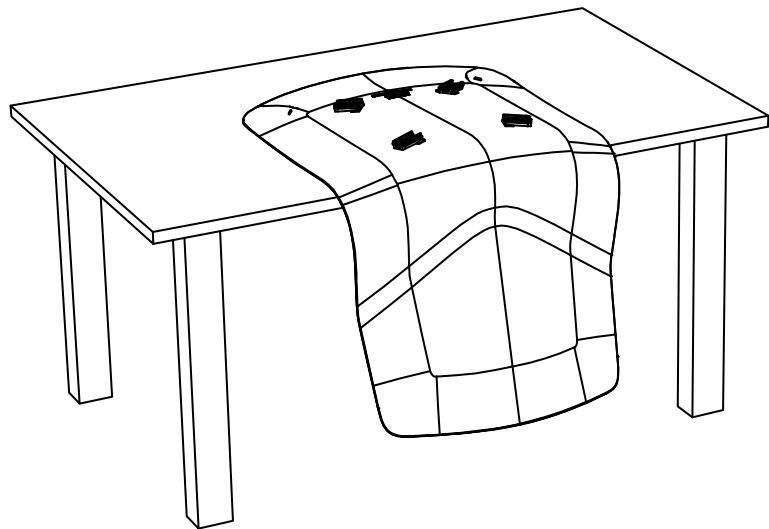

# Step 2

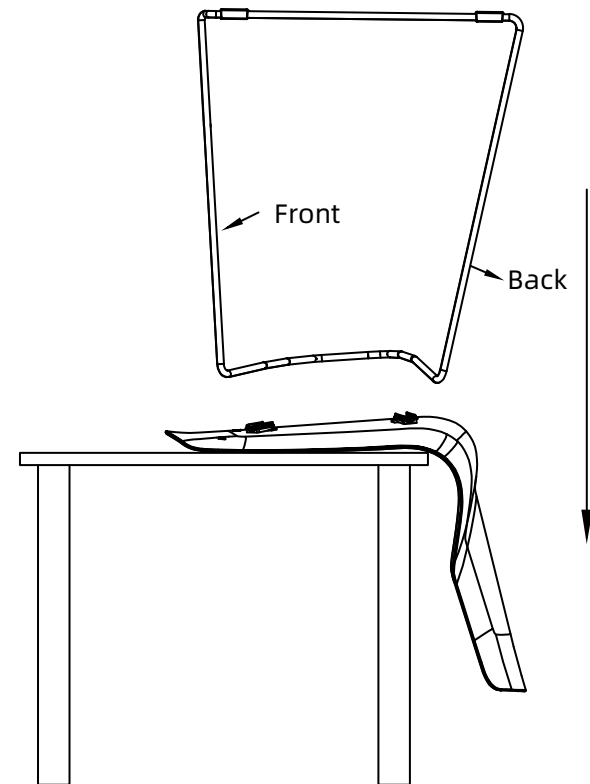


# Step 3

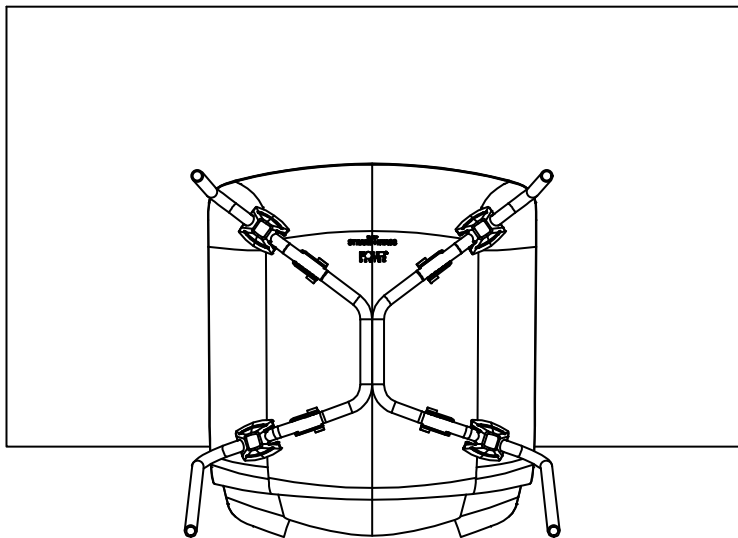


# Step 4

Place four fasteners in the corresponding position and push them

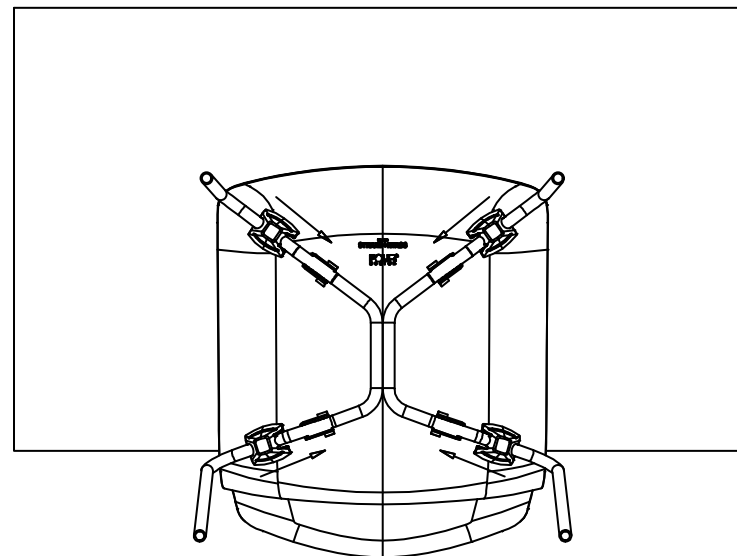


# Step 5

While pushing the fasteners to the half position, knock it to the end with rubber hammer

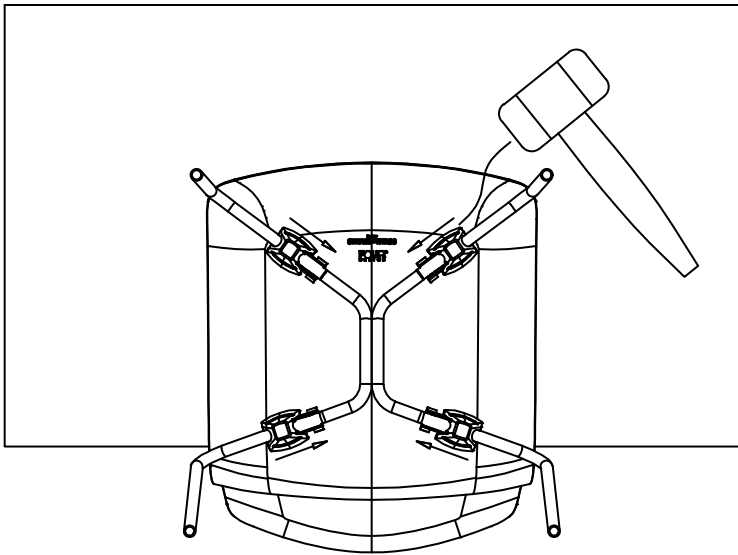


# Step 6

Fit completely

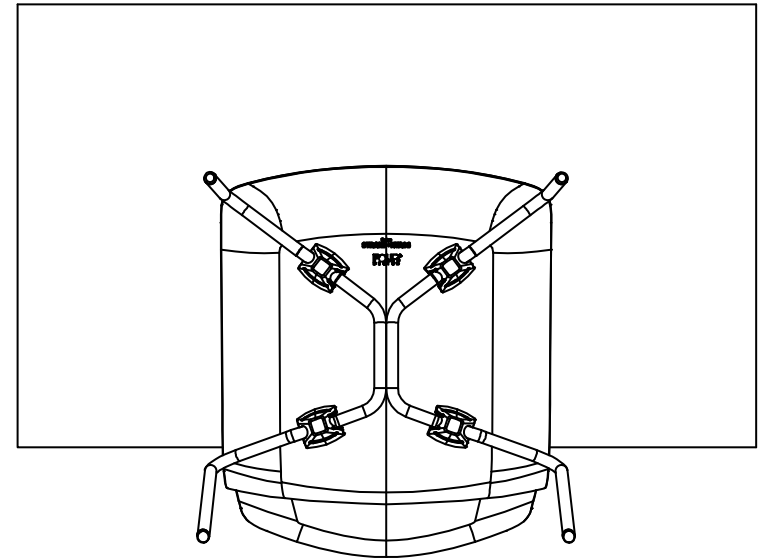

# Step 7

The seat cushion/back is upholstered. Please refer to this step

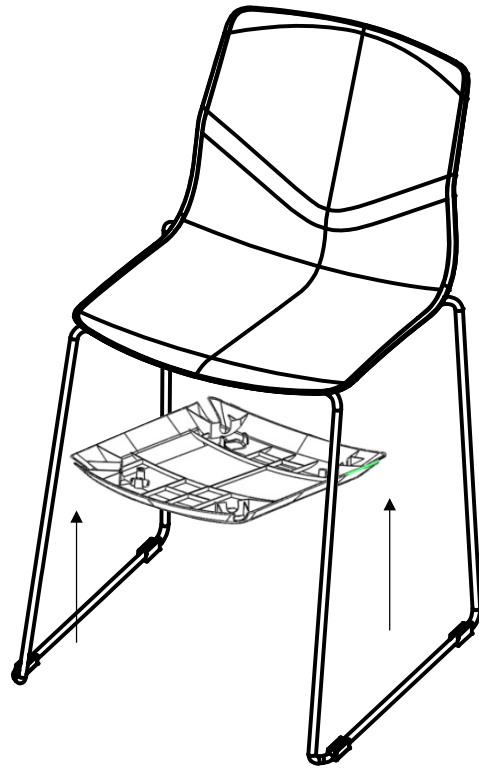

# Step 8

