
FourSure 88

With Armrest

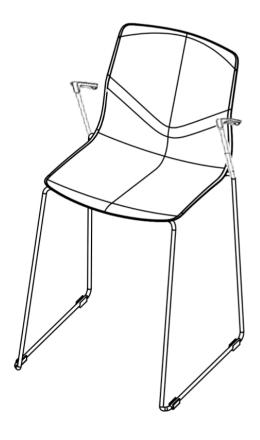







Web: www.novah.cc Mail: int@novah.cc



Product Parts List



1x



1x





4



1x


Step 2

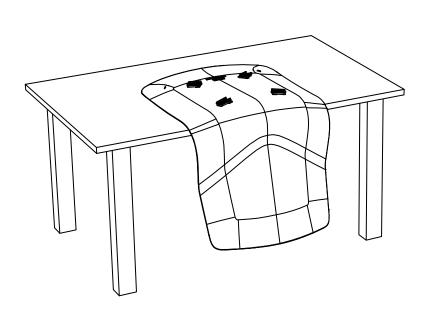


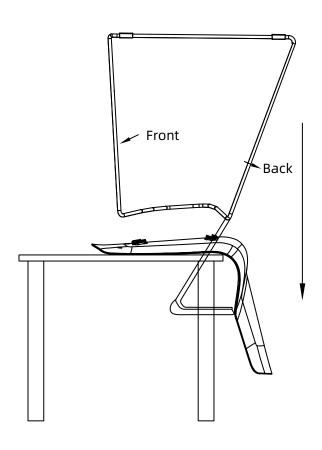

Step 4

Place four fasteners in the corresponding position and push them

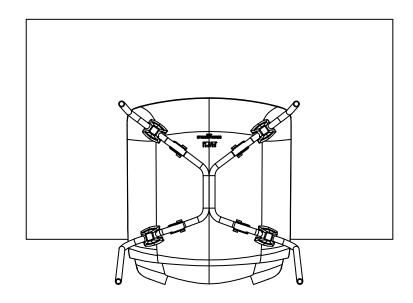


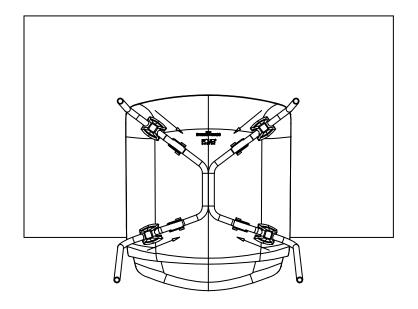


While pushing the fasteners to the half position, knock it to the end with rubber hammer

Step 6

Fit completely

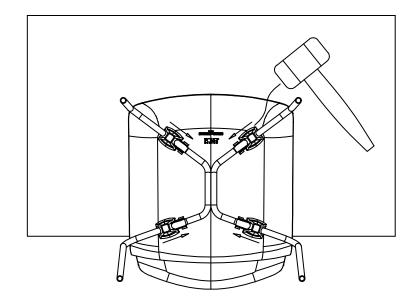

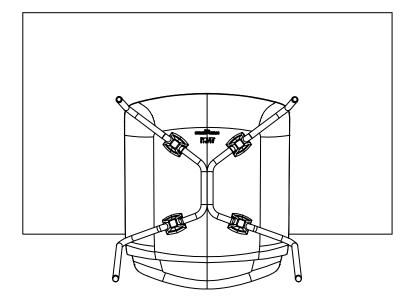

Step 8

The seat cushion/back is upholstered. Please refer to this step



