


Nobius

Neol Six-seat_sitting Posture

NOVAH[®]

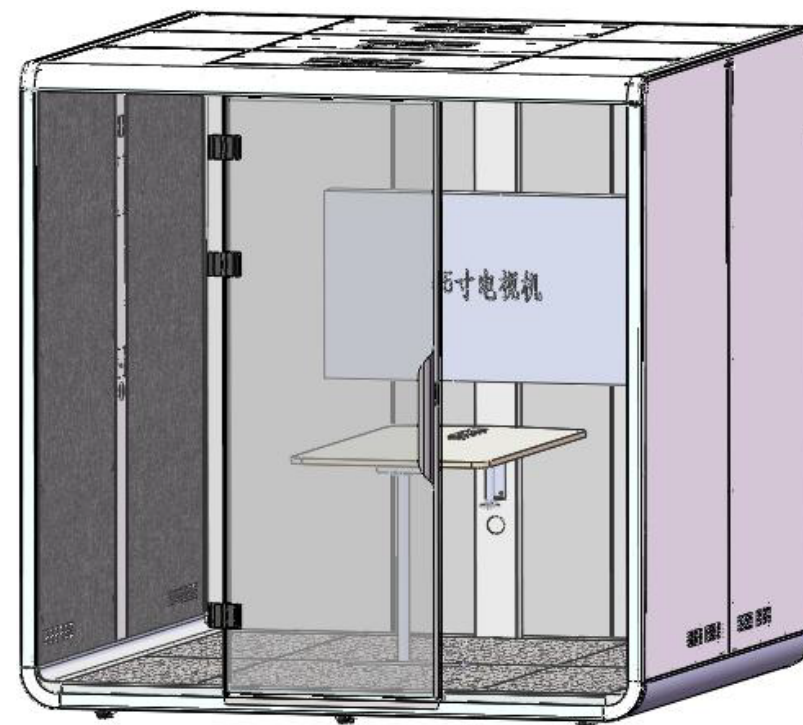

NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH[®]

Product Parts List

①



1X(Bottom assembly - frontequipped with carpet and soundproof cotton)

②



1X(Bottom assembly - rear equipped with carpet and soundproof cotton)

③



1X(Left bottom side crossbeam)

④



1X(Right bottom side crossbeam)

⑤



2X(Side column L)

⑥



2X(Side column R)

⑦



1X(Top front crossbeam)

⑧



1X(Top rear crossbeam)

⑨



1X(Top left side crossbeam)

10



1X(Top right side crossbeam)

11




2X(Right middle column attached with closure plate)

12



2X(Side frame 1*2 embedded with soundproof cotton attached with closure plate)

19



1X(Top middle PET)

20



2X(Left and right glass of rear frame)

21



1X(Middle glass of rear frame)

13



2X(Side frame 2*2 embedded with soundproof cotton attached with closure plate)

14



2X(Top frame front and rear embedded with soundproof cotton attached with closure plate)

15



1X(Top frame middle embedded with soundproof cotton attached with closure plate)

22



1X(Left glass of door frame)

23



1X(Right glass of door frame)

24



1X(Door glass)


16

2X(Left and right up PET)

17

2X(Left and right downrPET)

18



2X(Top left and rightPET)

25



2X(left and right closure plates)

26



1X(Column of table board)

27



1X(Table board with CEB)

Step 1

1.Take down wooden floor on the front and rear bottom assembly,
connect and fix them with M6*55 screws and bolts;

2.Screw on the left and right bottom side beams with M6*35 bolts 50%
Do not tighten them (to facilitate the installation of glass subsequently)
Be careful to distinguish the left and right side crossbeams (threaded hole on the left)

28



1X(TV column)

29




2X(Accessory box)



4 persons
for handling




4 persons
for installation

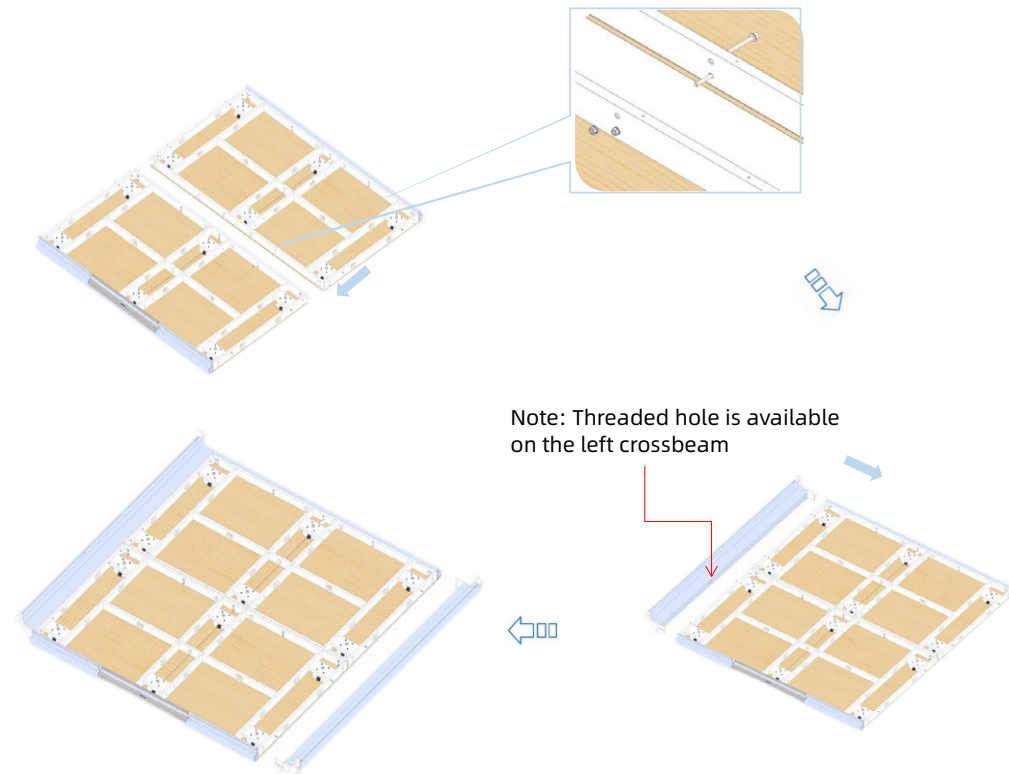

Step 2

1. Fix the left and right column with M6*20 countersunk bolt and be sure to distinguish the upper and lower end (notch on the lower end)


2. Fix the left and right crossbeam with M6*20 countersunk bolts and distinguish the left and right side beams (Threaded hole available on the left side)

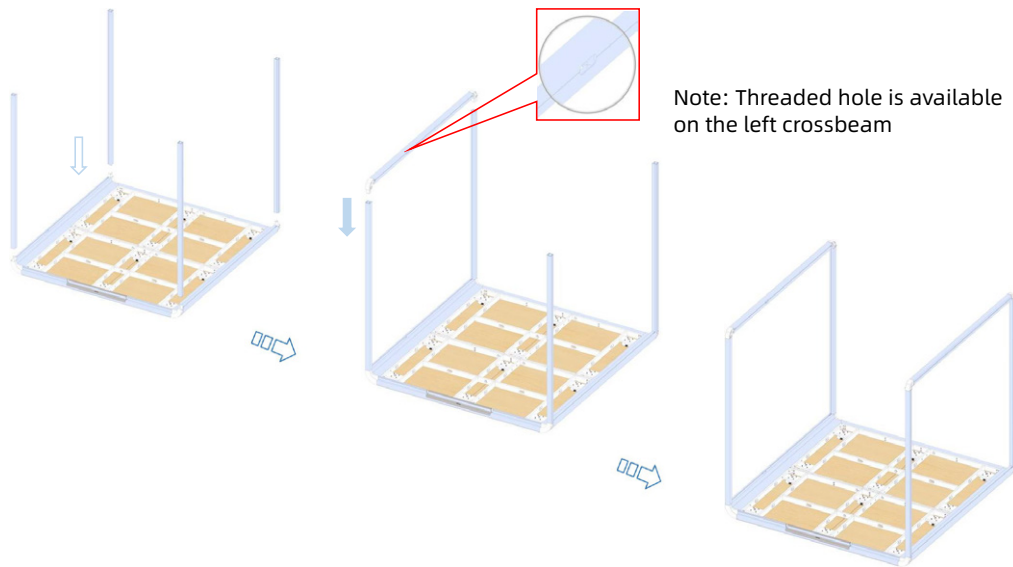

Step 3

1. While fixing right column, place the lower right PET first, press PET flat, fix the bottom tapping screw and then put in the right top PET and finally fix the top tapping screw


2. The left side is fixed just like the right side

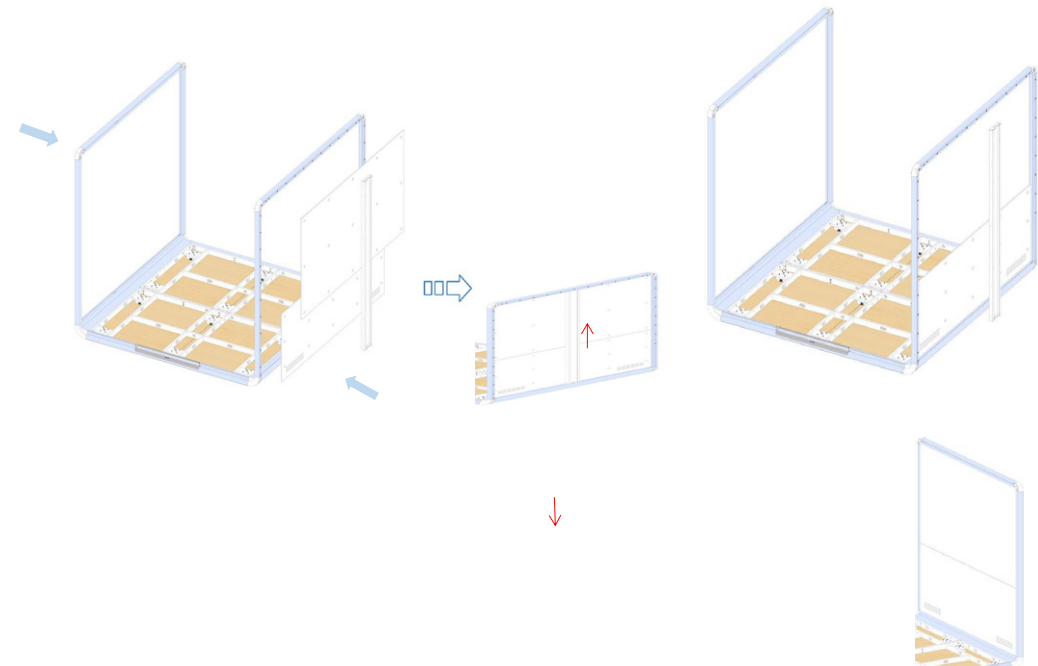

Step 4

1.After removing the preinstalled galvanized closure plate of side frame, insert it into the frame formed by right column and profile, fix with tapping screw, place white soundproof cotton and install the galvanized closure plate;

2.while installing on the rear side and front side, keep close to PET and there is no sloshing clearance when PET is pressed internally
(Check if the bottom vent is installed as requested)

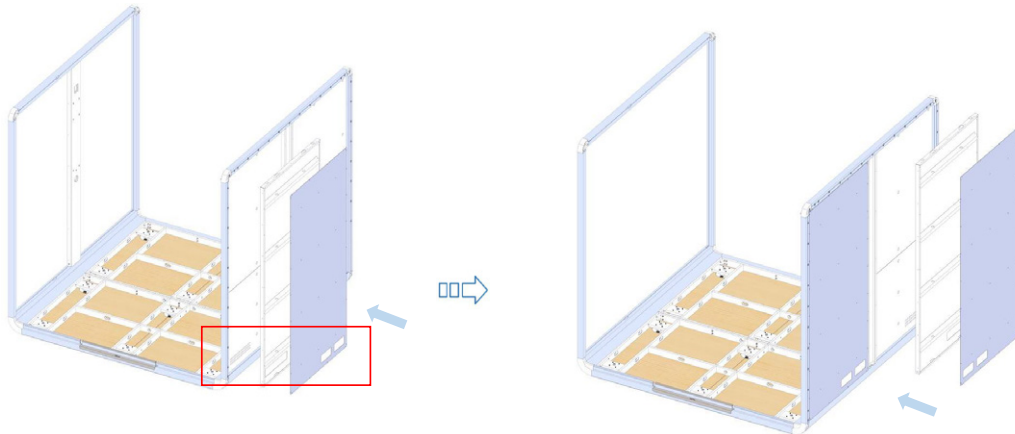

Note: The vent of internal side frame and the vent of galvanized closure plate on the external side of PET shall be misaligned as indicated by the figure


Step 5

1.For easy installation, plug the white soundproof cotton on the rear part of bottom frame and pave wooden floor (power plug is threaded out of the bottom threaded hole in advance);

2.Use sucker to insert the rear frame glass into the slot of profile and attach H-shaped transparent adhesive tape while installing the middle glass;


3. Fix top rear crossbeam with M6*45 hexagon socket cylindrical head bolt;

4.Insert the left and right glass of front frame into the profile slot (left glass with hinge hole)

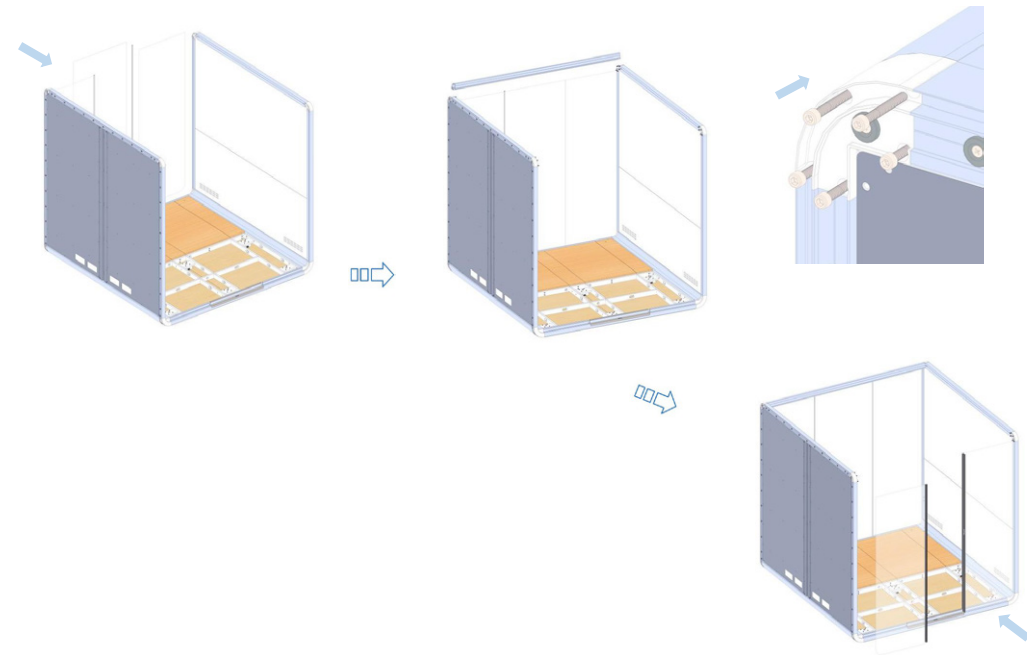



Step 6

1. Fix the top front crossbeam with M6* 45 hexagon socket cylindrical head bolt (note: door barrier stopper needs to be stuck into the door barrier column);
2. Remove the paved wooden floor and stick the TV column obliquely into the upper limit unit on the rear crossbeam;
3. Then fix it vertically onto the bottom frame with tapping screws

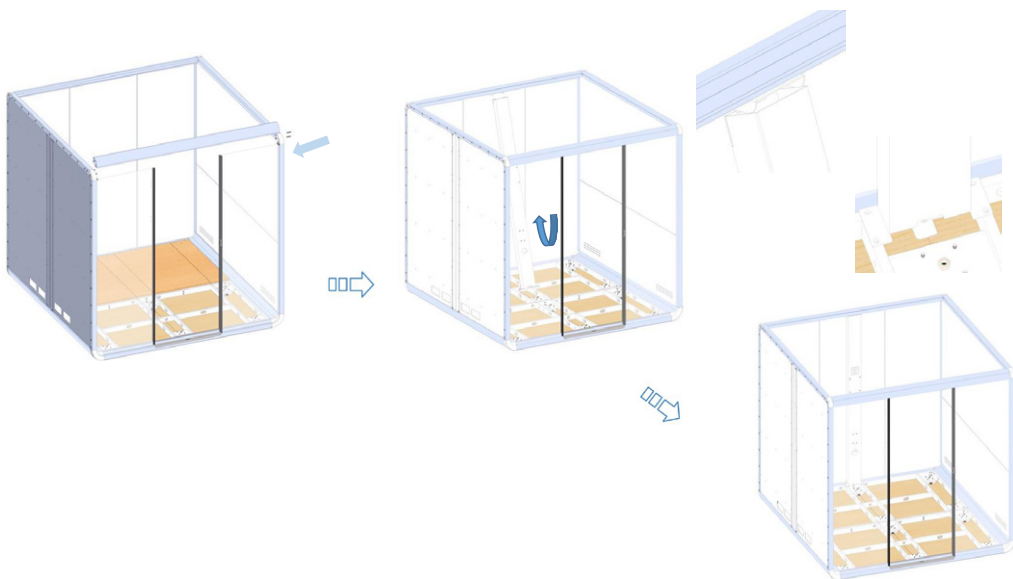

Step 7


- 1. Take out the lower installation frame from the middle unit of the top frame, fix it onto the left and right profile with M6*16 cylindrical head bolt;**
- 2. Take out the lower installation frame from the front and rear unit of the top frame, fix them respectively with M6*16 bolts and finally fix them with tapping screws and middle frame;**
- 3. Refer to the Wiring Schematic Diagram for top electrical connection; (These are universal for six-seat standing posture and sitting posture; Only the left PET, middle column and TV column are different)**

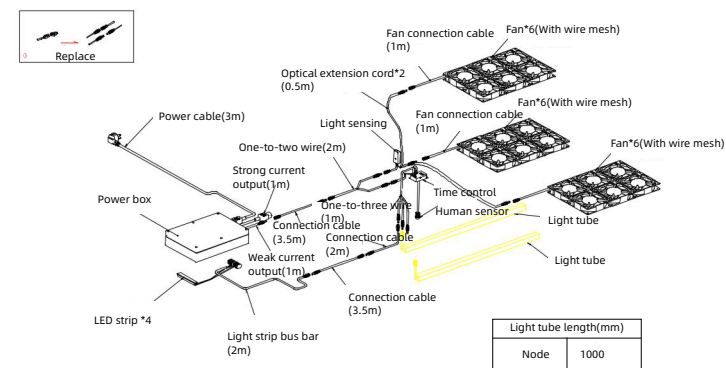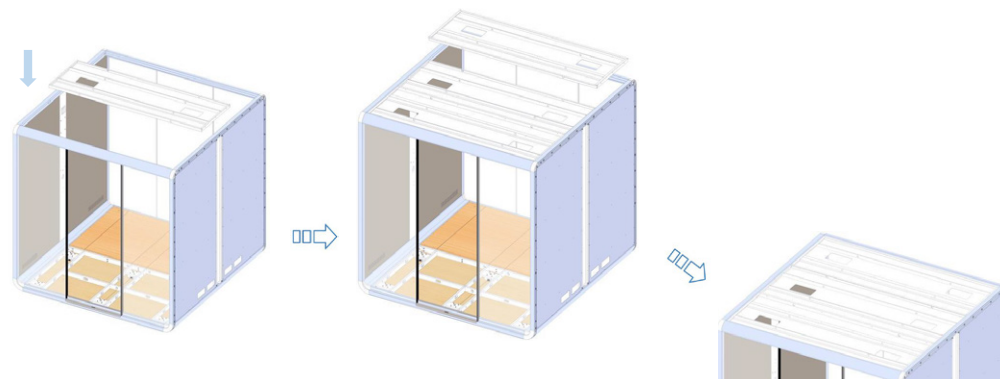

Light tube length(mm)	
Node	1000


Step 8

- 1.Put on the top middle cover with fan and connect DC quick plug;
2. For bottom electrical connection, refer to the wire connections of side frame as shown in the schematic diagram;
(These are universal for six-seat standing posture and sitting posture;
Only the left PET, middle column and TV column are different)

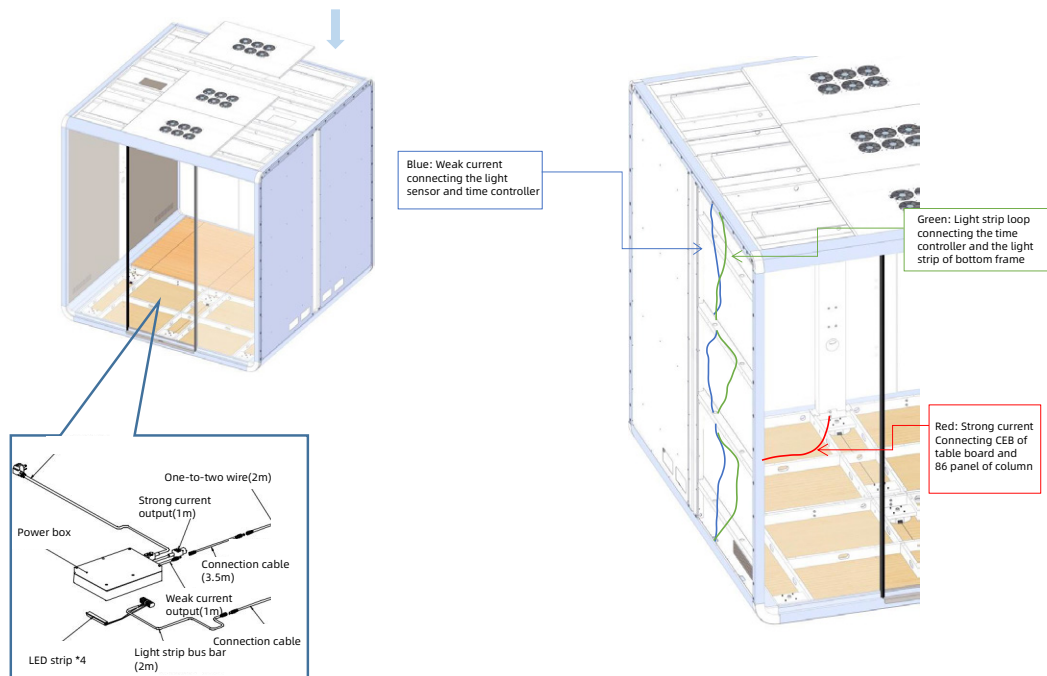

Step 9

- 1.Take out top PET, and install it on the top with magnet and buckle
(It's required to install infrared sensor on the middle PET and connect it to the time controller);
- 2.take out the silicone light strip from the accessory box and insert it into the light strip slot and connect it to the lamp wire loop at the bottom;
- 3.Test if the weak current and strong current power are connected and run normally;
- 4.Pave wooden floor and carpet and put on the top plate;
- 5.Fasten the exterior trim plate with magnet separately and make sure it is installed smoothly;
(These are universal for six-seat standing posture and sitting posture;
Only the left PET, middle column and TV column are different)

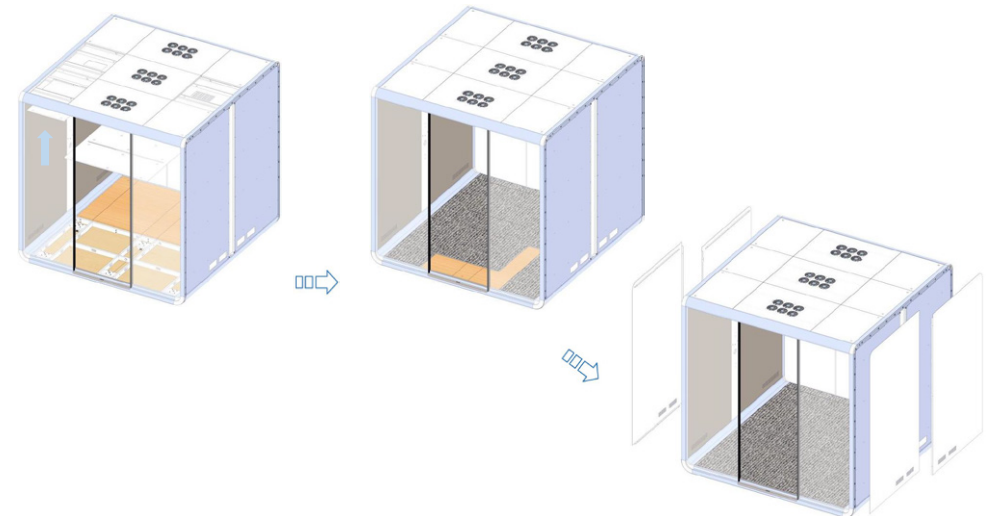

Step 10

1.Install table board column and fix the table stand onto the TV column;

2.Connect CEB quick connector and test if CEB runs normally;

3.After installing the door hinge, install the door glass and the door lock and debug whether the door is closed smoothly;

4.Check if all parts are installed properly and electrical equipment runs normally

