
# Campers

Screen

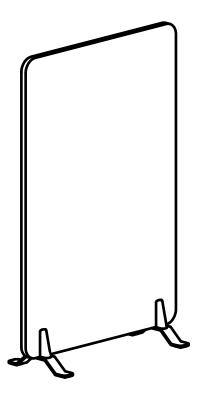








Web: www.novah.cc Mail: int@novah.cc




#### **Product Parts List**

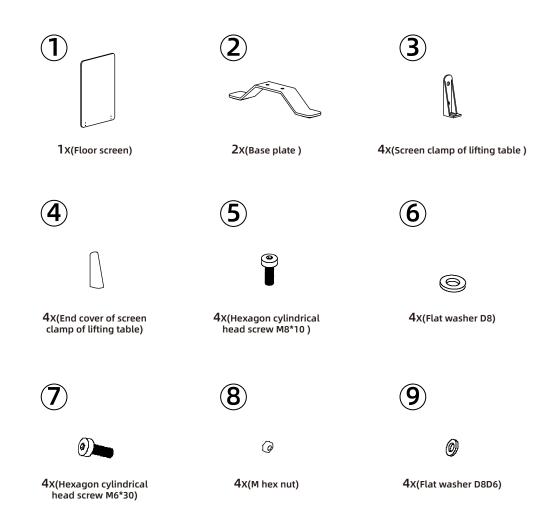

#### Step 1

Put the screen clamp of lifting table on the base plate; M8\*10 hexagon cylindrical head screw gets through flat washer D8, and into the base plate from the top of the screen clamp of lifting table

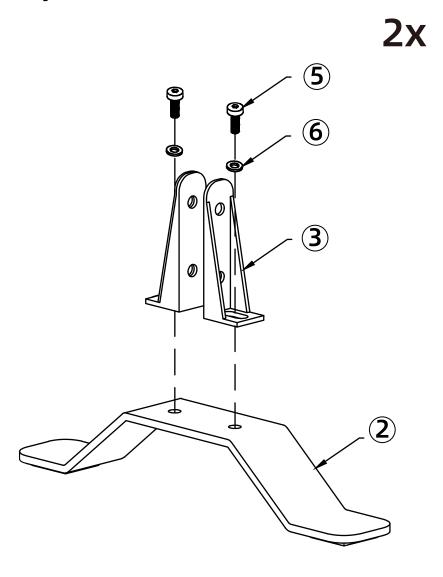


#### Step 2

Floor screen is put onto the base plate from top to bottom


(Note: No interference in the direction of screen clamp of lifting table)

M6\*30 hexagon cylindrical head screw gets through flat washer D6, at one side of the screen clamp of lifting table; while the other side is tightened by M6 hex nut

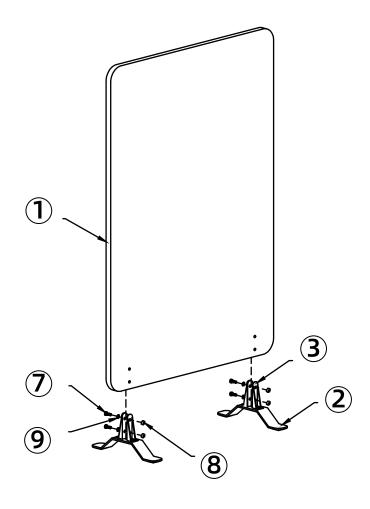

### Step 3

The end cover of the screen clamp of lifting table presses the floor screen from above tightly, Insert downwards, until contact the base plate

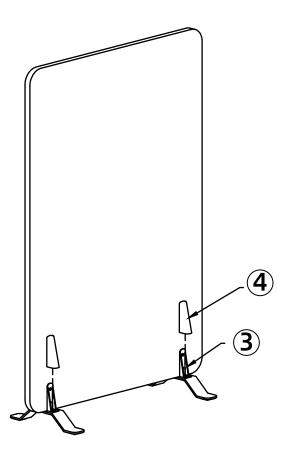

## Step 4

