


Campers

High Table

NOVAH[®]

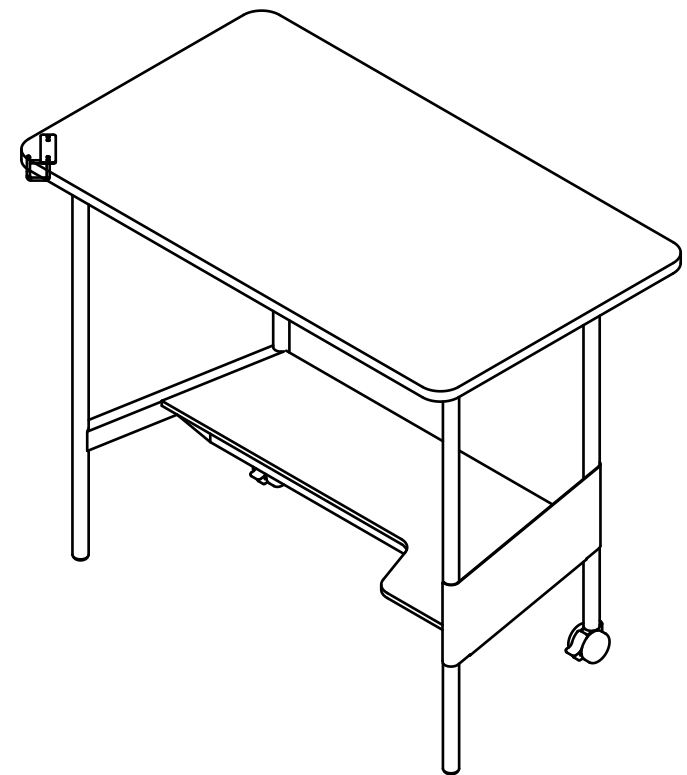

NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH[®]


Product Parts List

①




1X(Table board)

②



1X(High table leg assembly A)

③




1X(High table leg assembly B)

④




2X(Positioning and
adjustable M8*30)

⑤



1X(Upper beam)

⑥



1X(Lower beam)

⑦



2X(Caster screw rod)

⑧



2X(Spring washer D10)

⑨



2X(Caster - with brake)

Step 1

1.Put caster screw rod through spring washer D10 and get in the thread hole of short leg at the bottom of high table leg assembly;

2.Positioning and adjustable M8*30 gets in the thread hole of long leg at the bottom of high table leg assembly;

3.After caster screw rod is tightened, knock caster (with brake) into caster screw rod

10



2X(Buckle plate)

11



1X(Laminate)

12



1X(Metal side plate)

13



16X(Hexagon countersunk screw M6*12)

14



6X(Cross big flat head self-tapping screws 5*20)

15



4X(Cross countersunk self-tapping screw 4*16)

16




5X(Cross big flat head self-tapping screws 5*12)

17



3X(Hexagon countersunk flat heads crew M6*12)

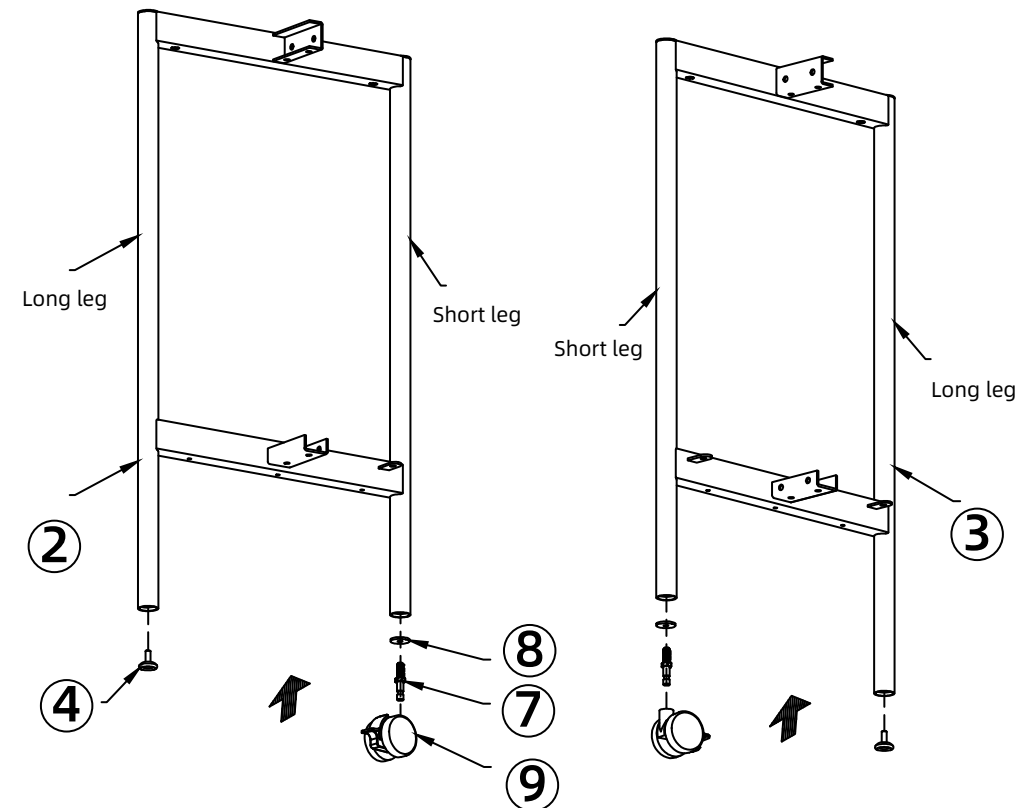


Step 2

1.Insert upper beam and lower beam into high table leg assembly A, then insert high table leg assembly B into upper beam and lower beam (simultaneously);

2.Upper beam and lower beam's side and bottom buckles are put at the grooving of table board back


With M6*12 Hexagon countersunk screw

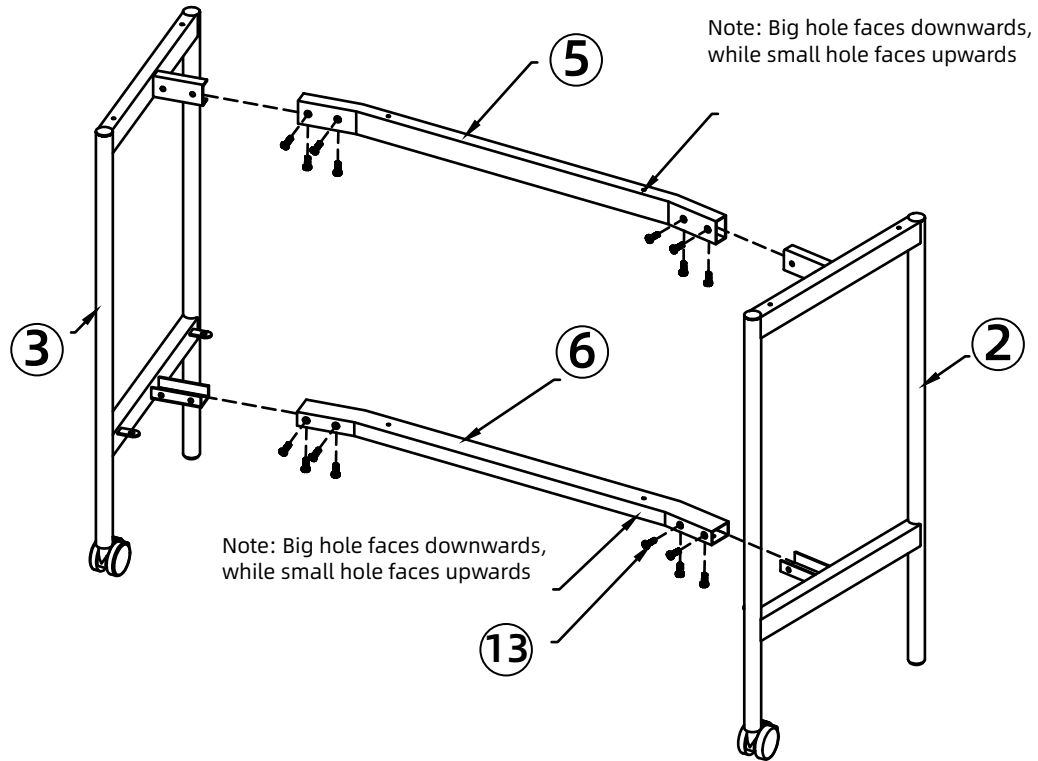

Step 3

Fasteners are placed in the slotted back of the table top

With 4*16 Cross countersunk self-tapping screws

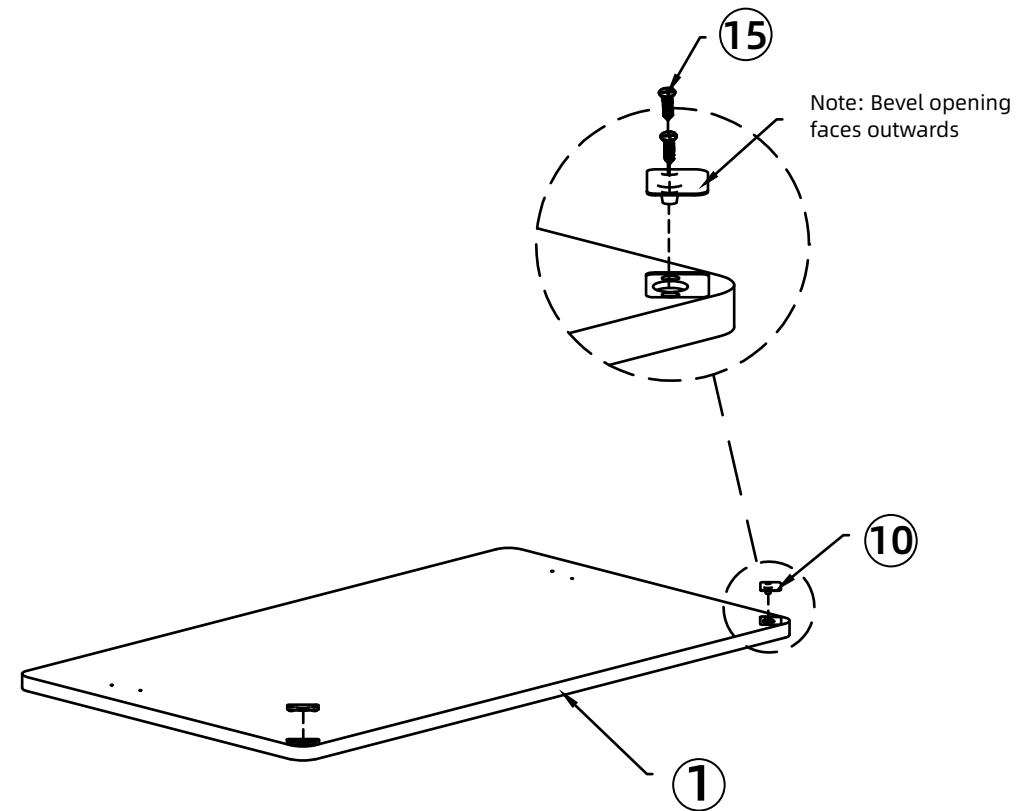


Step 4

1.Put table board onto the top of the assembled table stand and align, from left to right and from top to bottom

With 5*20Cross big flat head self-tapping screws

2.Put laminate in the middle of the assembled table stand and align, from left to right and from top to bottom


With 5*20Cross big flat head self-tapping screws

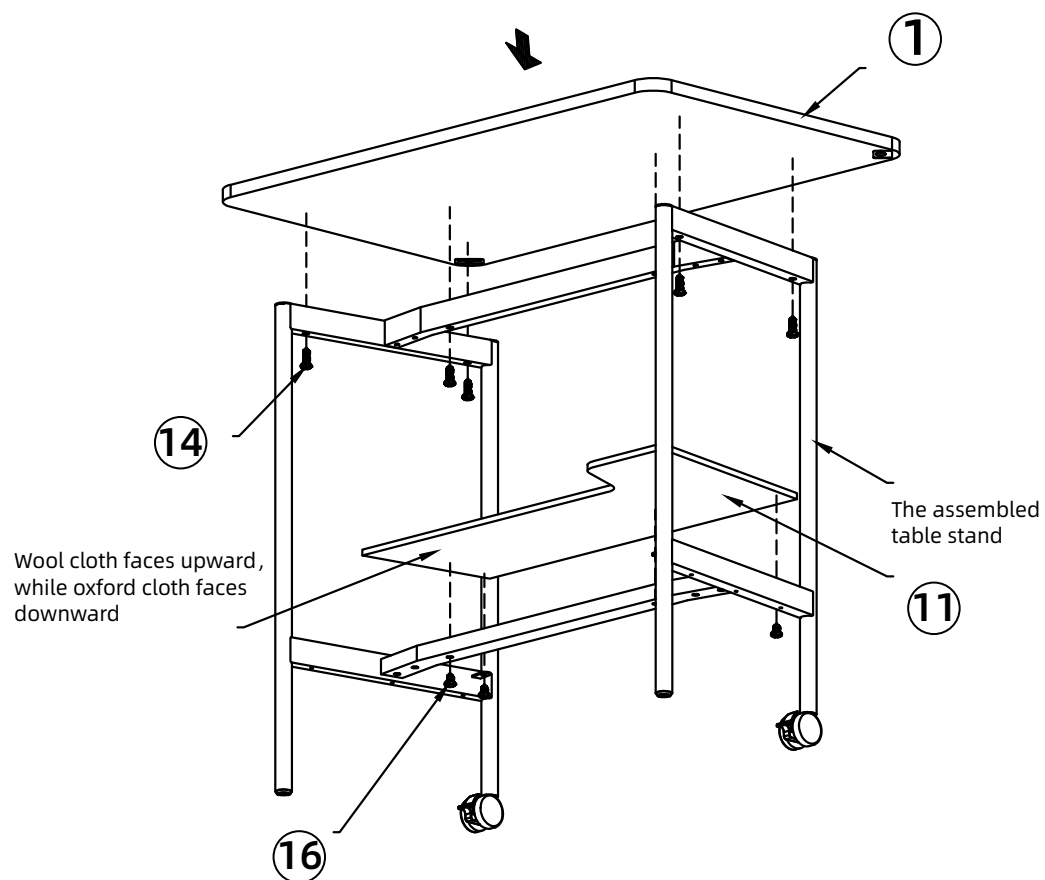

Step 5


Put metal side plate on the right side of the assembled table, and fix it with right side leg

With M6*12 Hexagon flat head screw

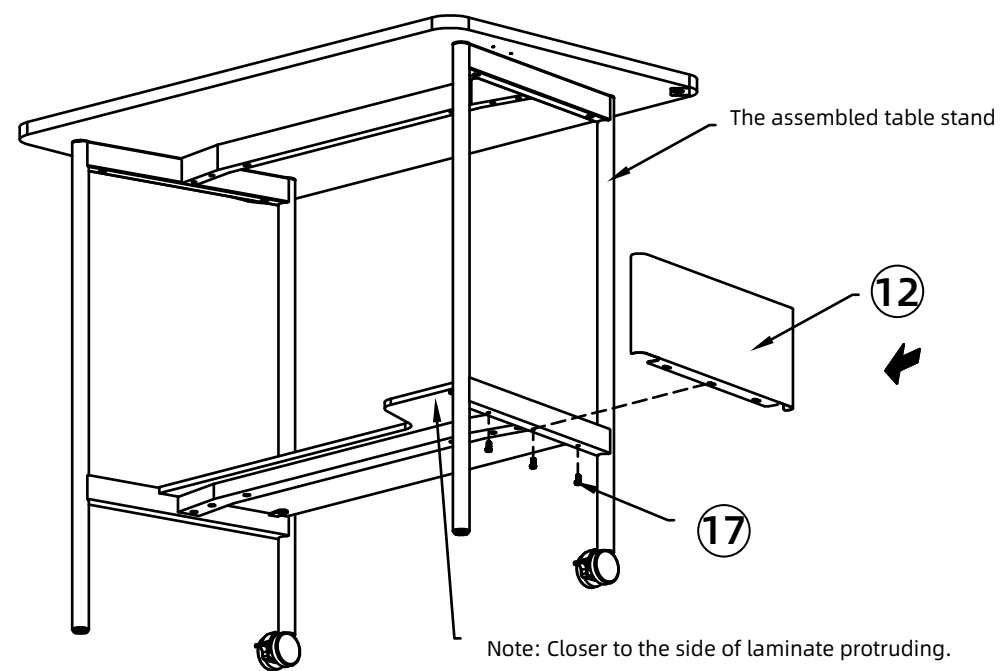

Step 6

The hook is placed on the left-hand corner of the table board and fixed with M4*16 self-tapping screws;

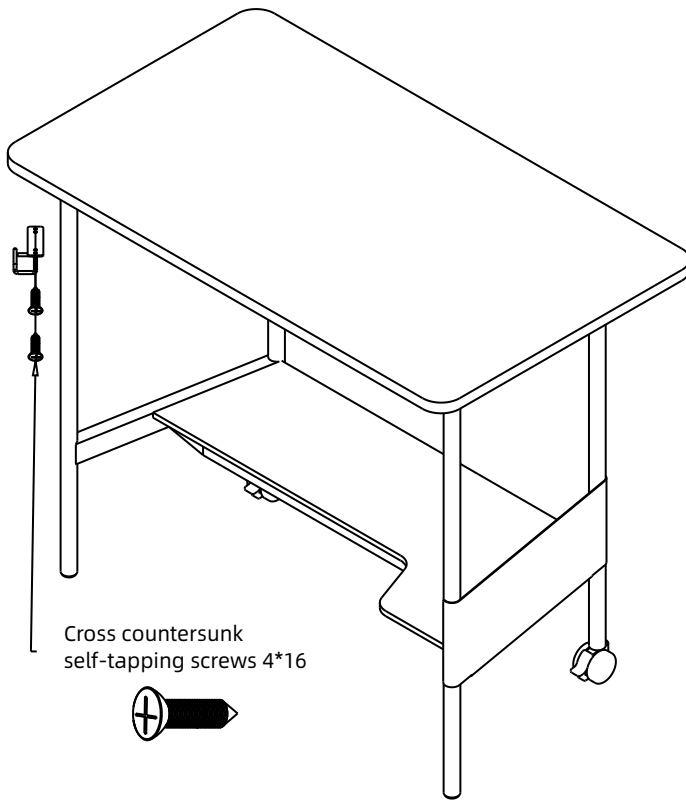

Step 7

