



NOVAH System Technology Co.,Ltd. Tel: 400-115-1688

Web: www.novah.cc Mail: int@novah.cc



Product Parts List



(Hexagon socket cylindrical head screw M6-12)



(Hexagon socket pan head screw M6-16)



(Cross recessed pan head tapping screw ST5.5-20)





(Cross recessed pan head tapping screw ST3.5-12)

1.Place 1 the lifting column and 4 undertable wireway as shown in the figure

2.Install ① the lifting column + ② bottom feet +


+ 3adjustable feet

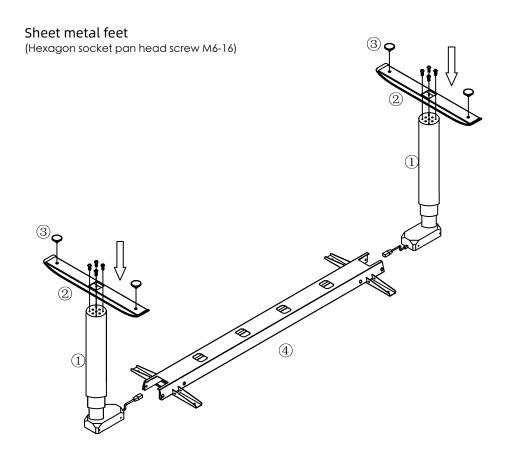

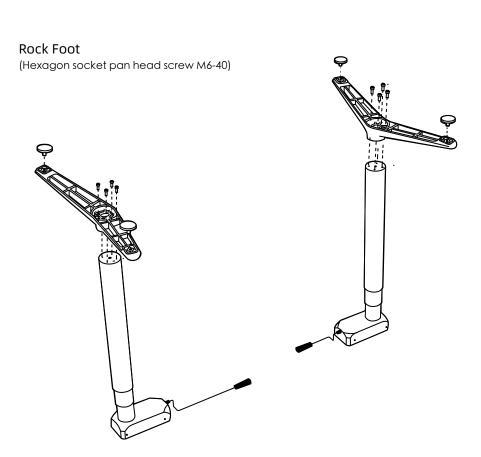

1.Install ① the lifting column and ④ undertable wireway (Hexagon socket cylindrical head screw M6-12)

2.Table stand turning over

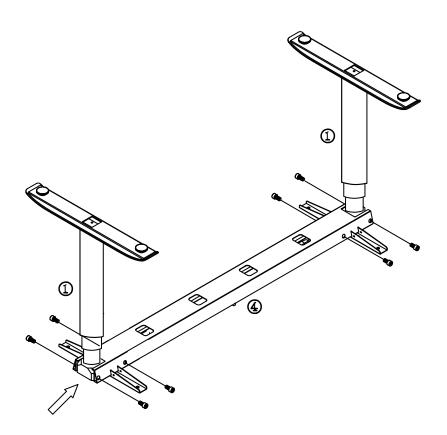


Step 3

1.Install the cables of lifting table
The controller (rose red) is arranged between two holes
with the plane downward; it is located in the direction of routing;
convenient for connection with the table board
Extension cord (yellow) column (green) power cable (red)
hand controller (blue) installed on the right

2.Install ⑤ the rubber gasket of table board


3.Install (a) the heightened pad (Cross recessed big flat head tapping screw \$T3.5*12)

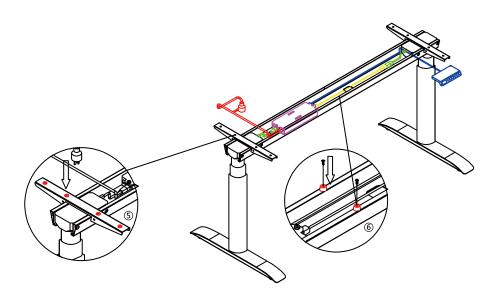

1.Routing Schematic Diagram

2.Reserve one position for 3-plug power of the lifting system of the workstation

3.Test if the lifting system runs normally and check if the circuits are plugged in firmly

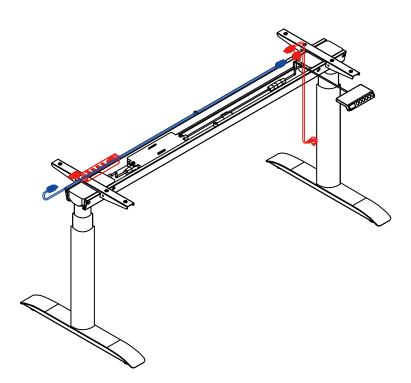


Step 5

1.Install the table board

(Cross recessed pan head tapping screw ST5.5*20)

The table board must be aligned with two ends of the table stand; Table board clearance is 25mm in the direction of width

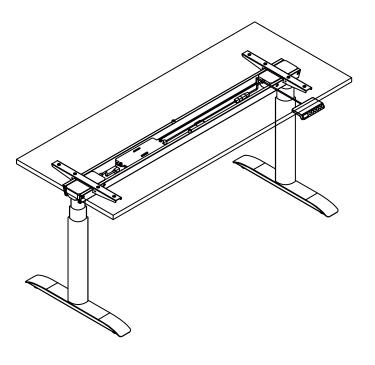

1.Install ⑦ the end coverof undertable wireway (ABS) (Figure 1)


2.Install ® the support arm of undertable wireway (ABS) (Figure 2)

3.Install the hand controller with the cable attached to the support arm (Figure 3)

(Cross recessed pan head tapping screw \$T3.5*16)


4. Fix the controller on the table board (Figure 4)

(Cross recessed pan head tapping screw ST5.5*20)

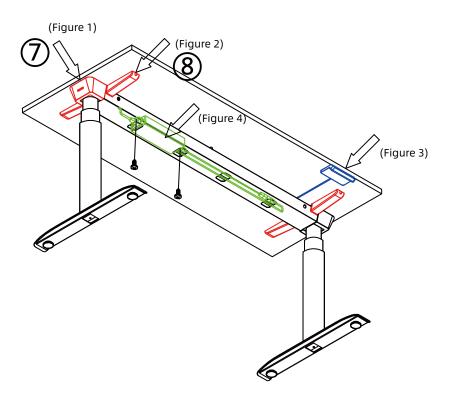

Step 7

1.If ABS opening mode of table board is selected, steel wire box needs to be installed; The side of steel wire box faces towards the opening side of table board

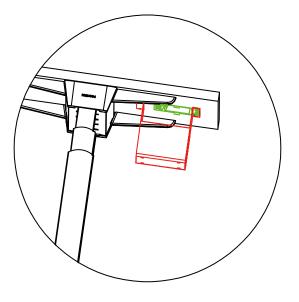

1.The installation is complete

