


Metro

40 Steel Screen

NOVAH

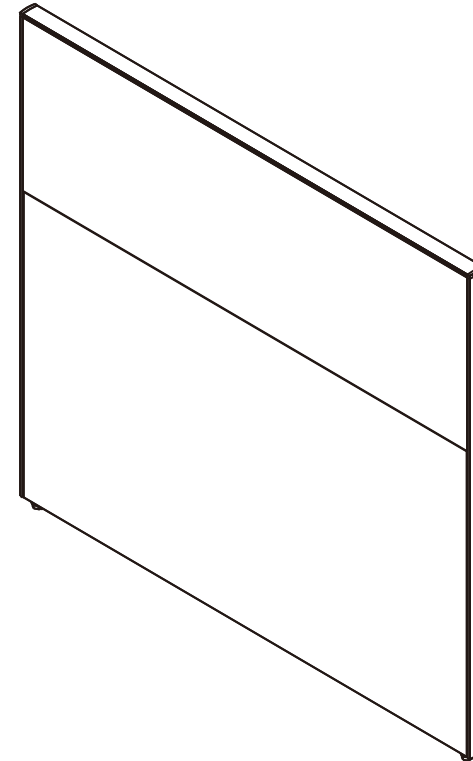


NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH

Step 1

Install the connection clip

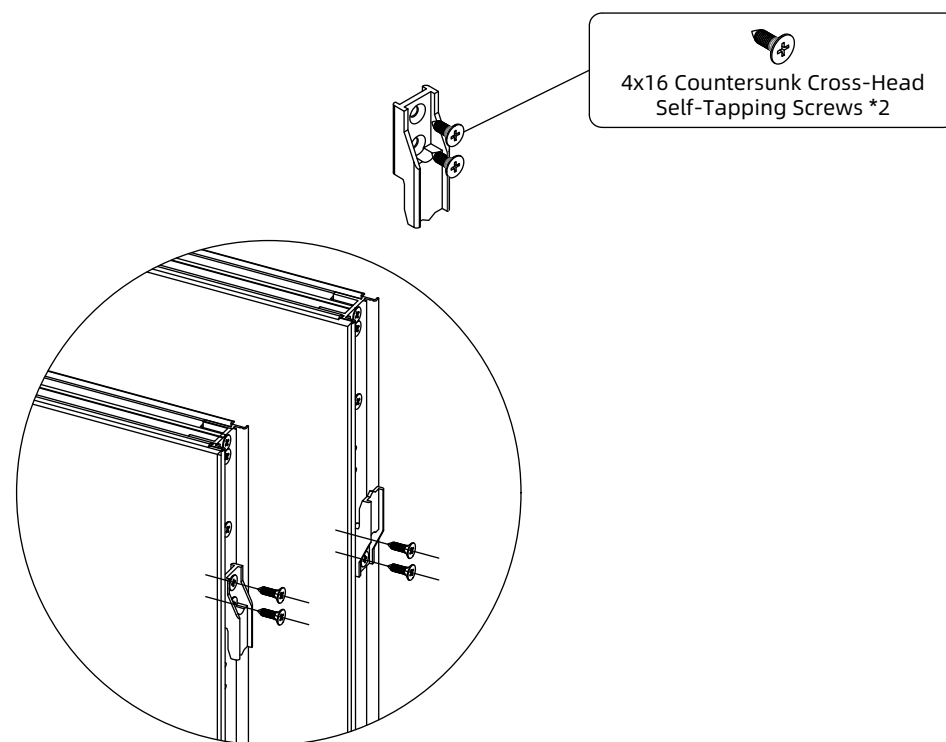


Note:

When installing the connection clip, install one side of the partition upwards and the other side downwards.


Step 2

Partition Connection

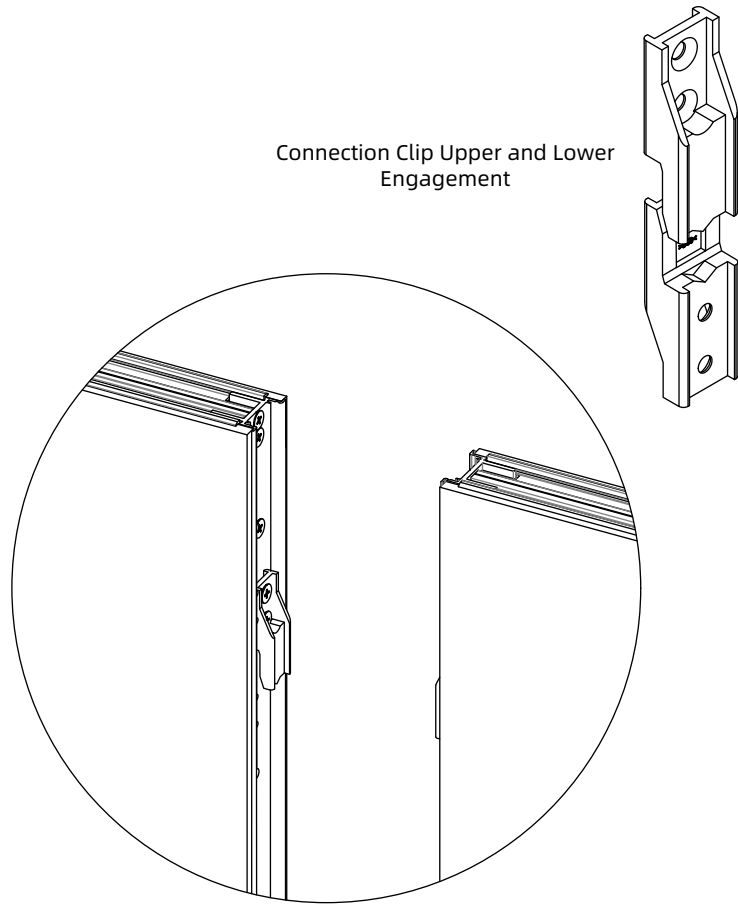


Step 3

Install the Top Edge Trim

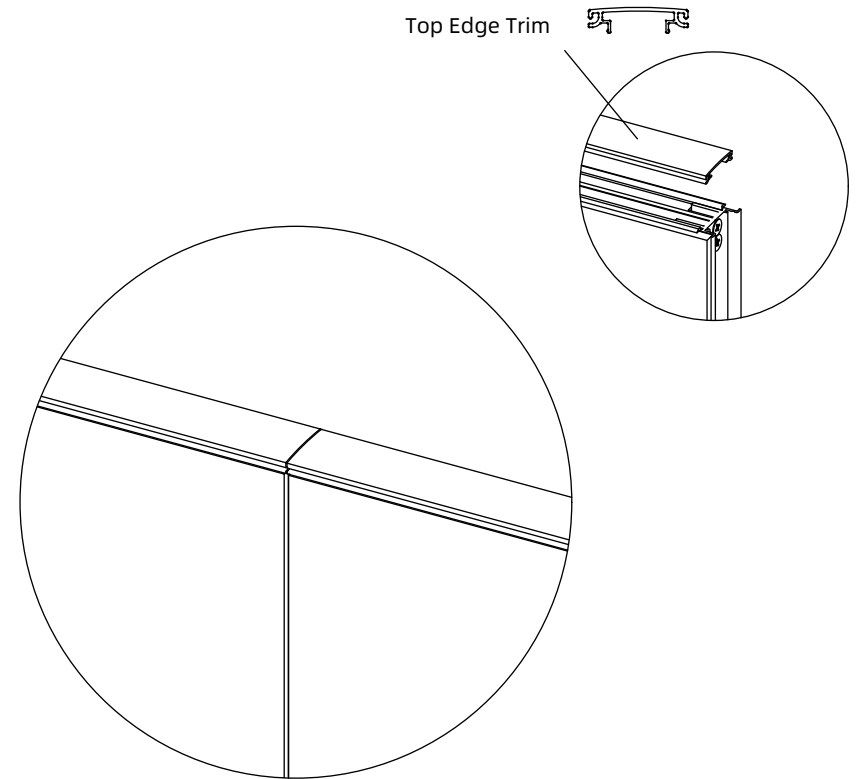


Step 4

Connect Side Trim

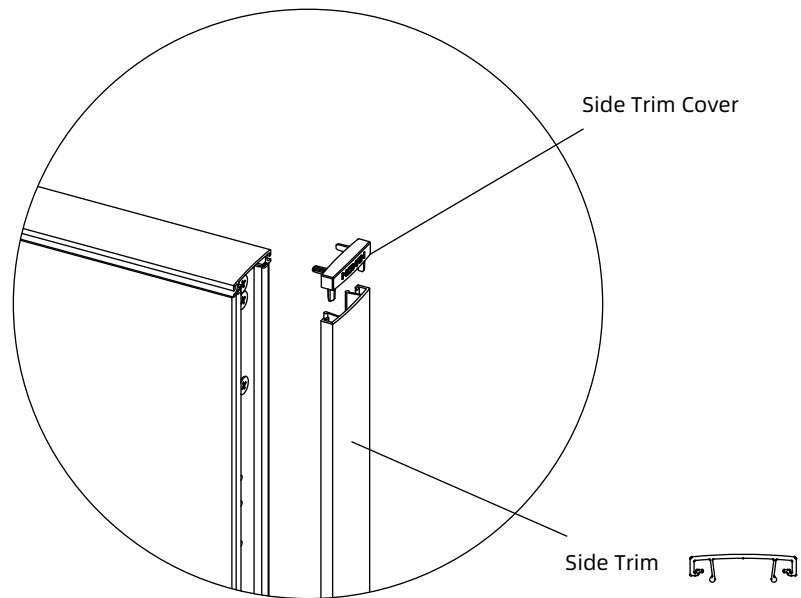


Step 5

Installation of Baseboard Cable Cover

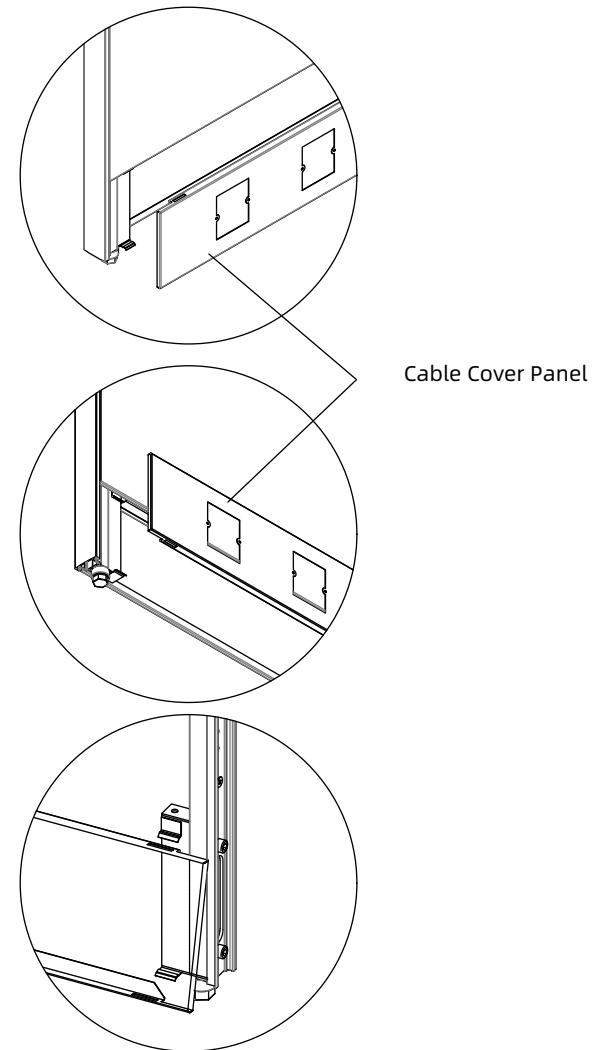


Step 6

3-Directional Connector Column Connection

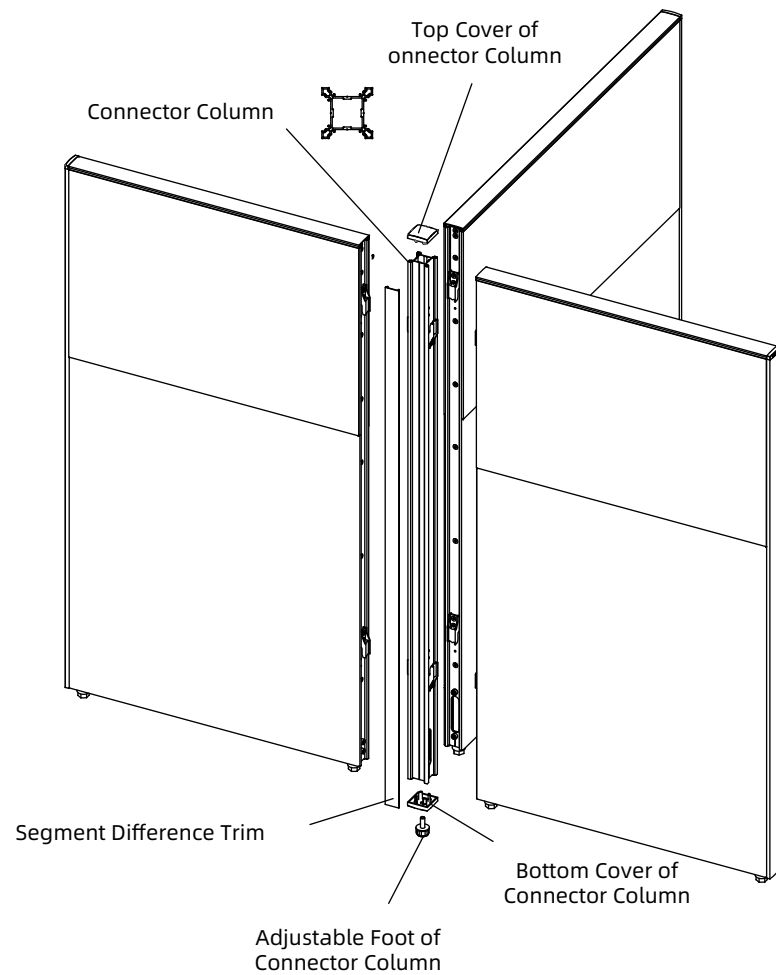


Step 7

120° Connector Column Connection

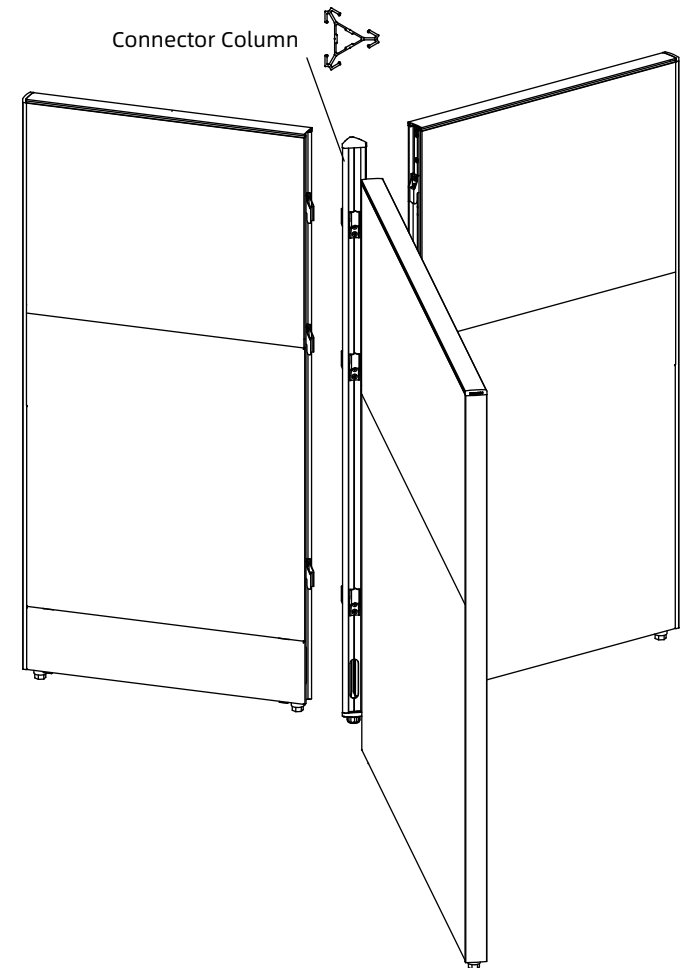

Step 8

Desk Installation Diagram

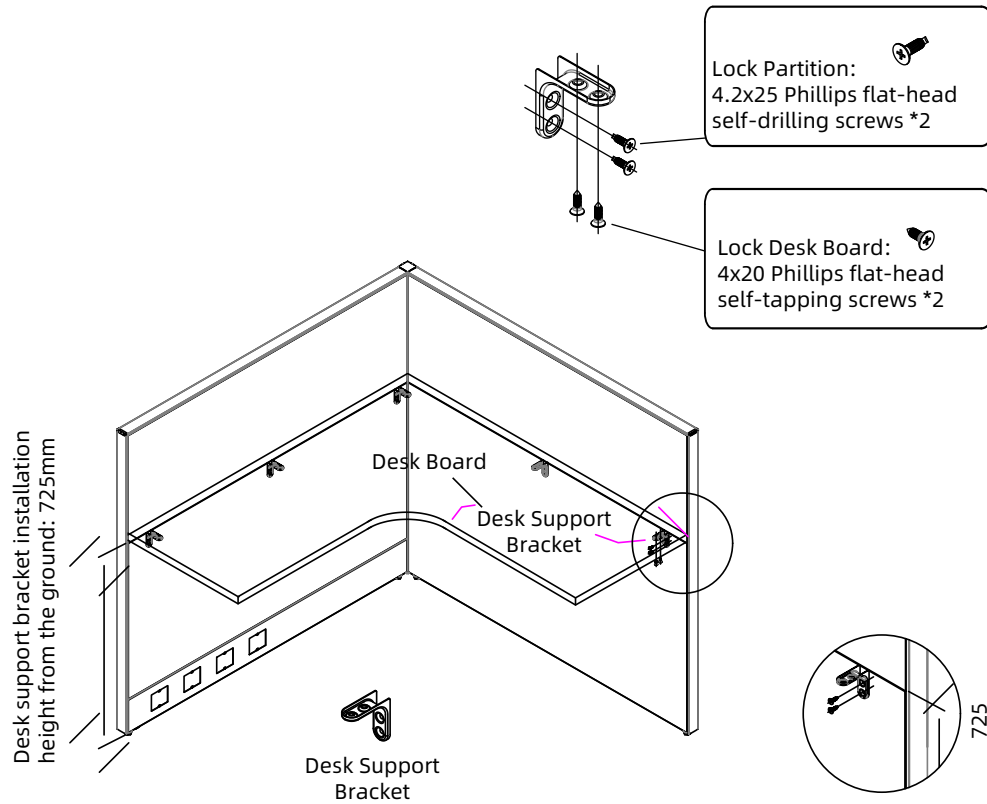

Note:

When installing the desk support bracket, first lock it on the partition (align with the module seam at 725mm from the ground), then install the desk board.