


# Metro

70 Steel Screen

**NOVAH**

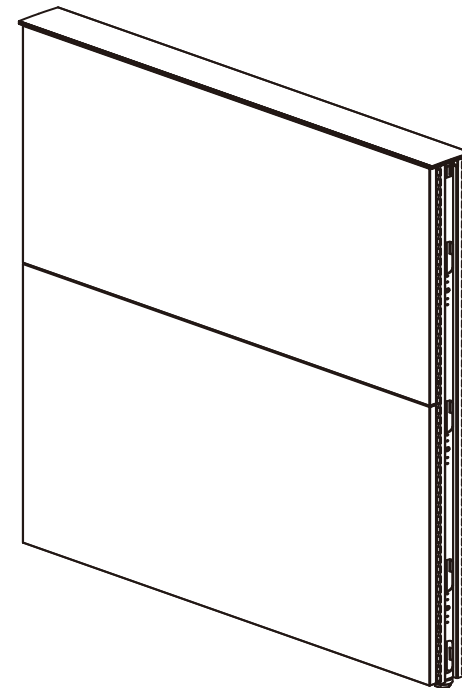


NOVAH System Technology Co.,Ltd.  
Tel: 400-115-1688  
Web: [www.novah.cc](http://www.novah.cc)  
Mail: [int@novah.cc](mailto:int@novah.cc)

**NOVAH**


# Step 1

## Frame Connection

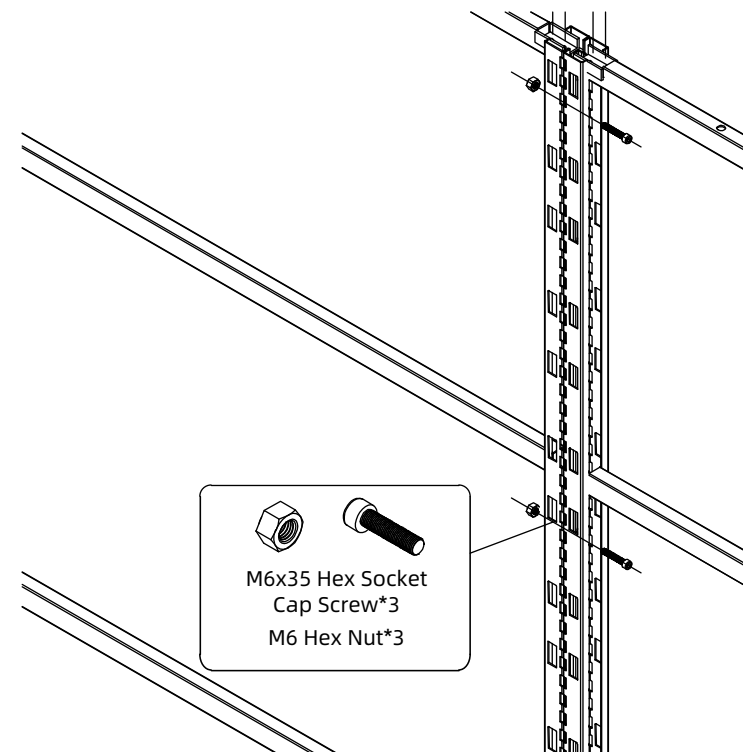


# Step 2

## Frame Straightening Connector

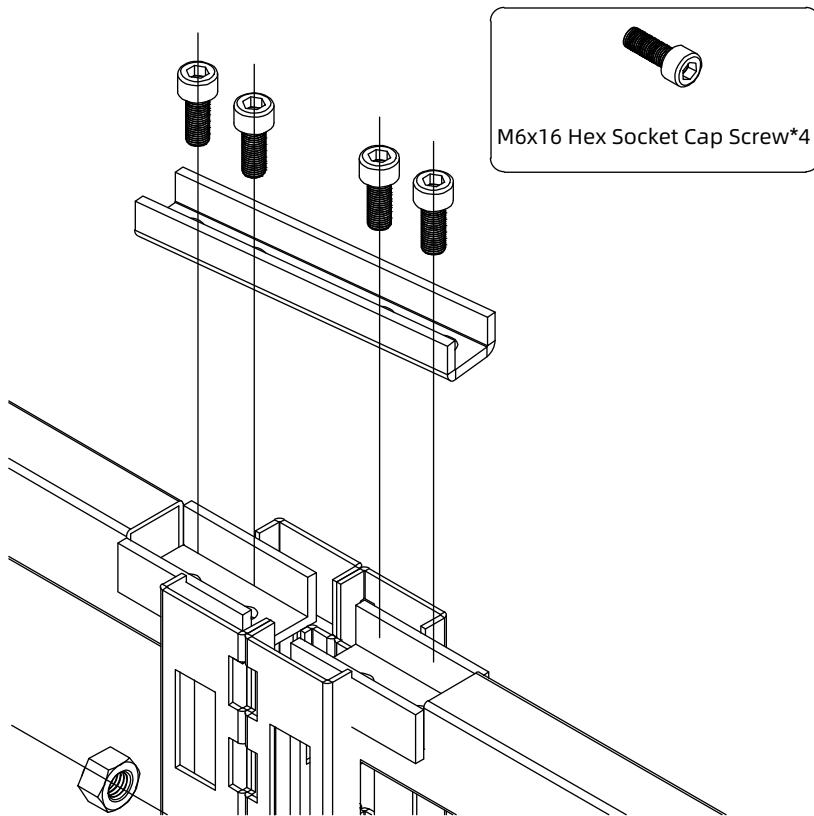

# Step 3

## Connecting Connector Column

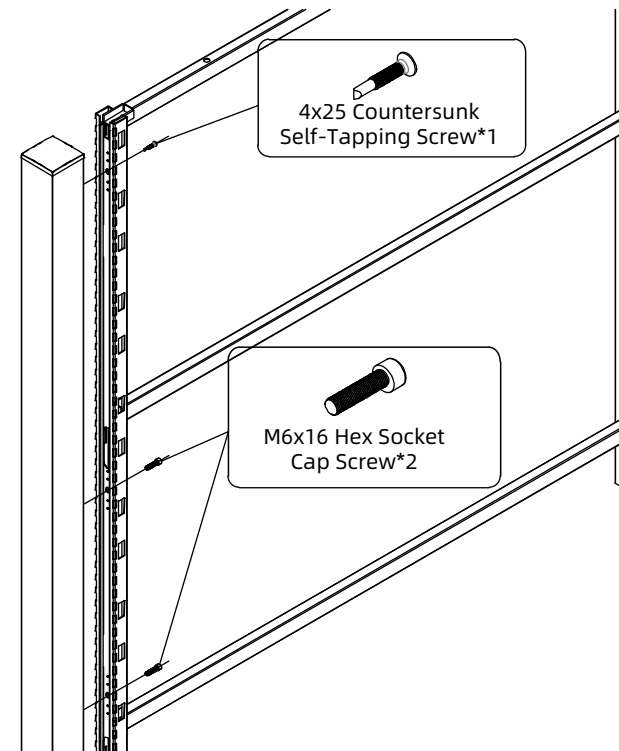


### Note:

When connecting the connector column for the screen partition, there are only 2 M6 threaded holes reserved at the height below the table. Therefore, the part above the table needs to be connected using self-tapping screws.


# Step 4

Connecting Side Trim

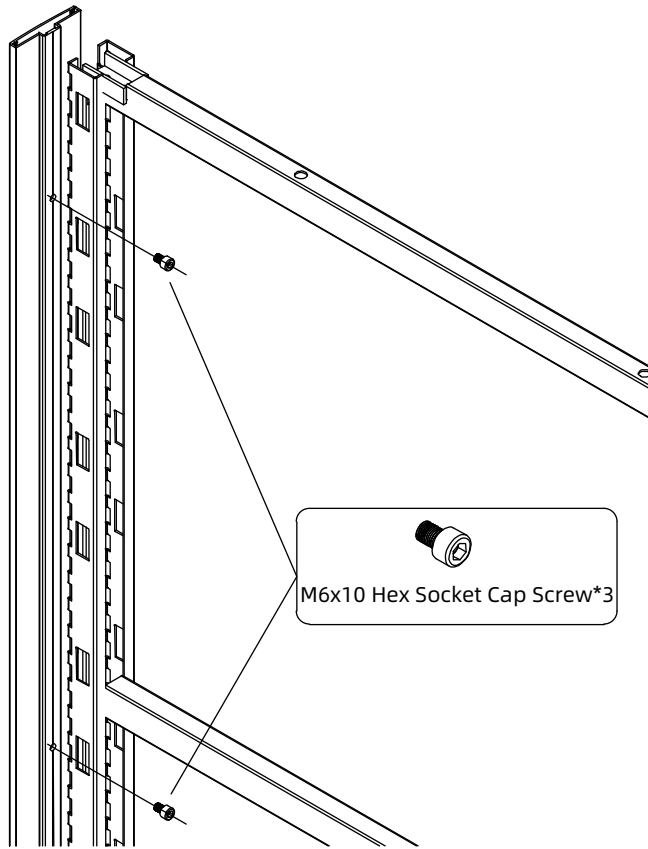


# Step 5

Connecting Top Trim Cover to Top Trim

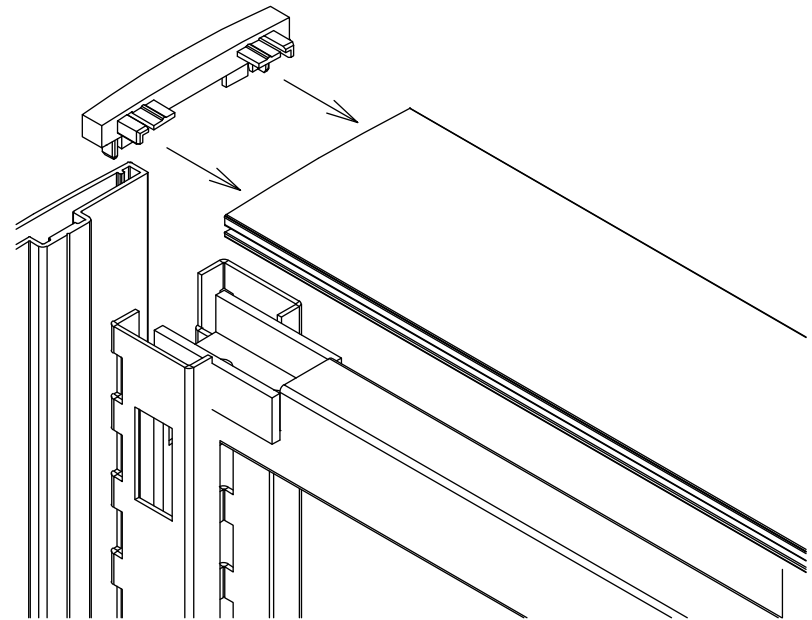

# Step 6


## Connecting Side Trim Cover

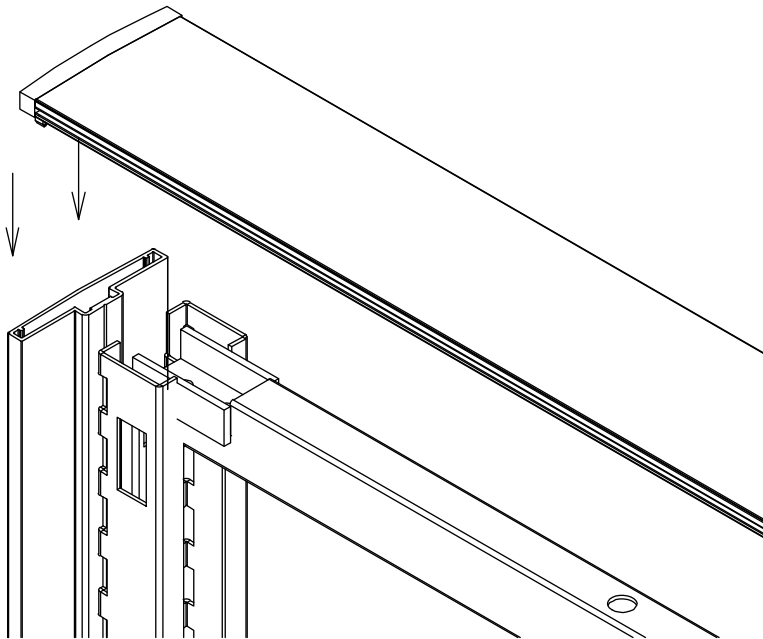

**Note:**  
When connecting the side trim cover, first connect the top trim and then connect the side trim together.

# Step 7


## Installing Top Trim

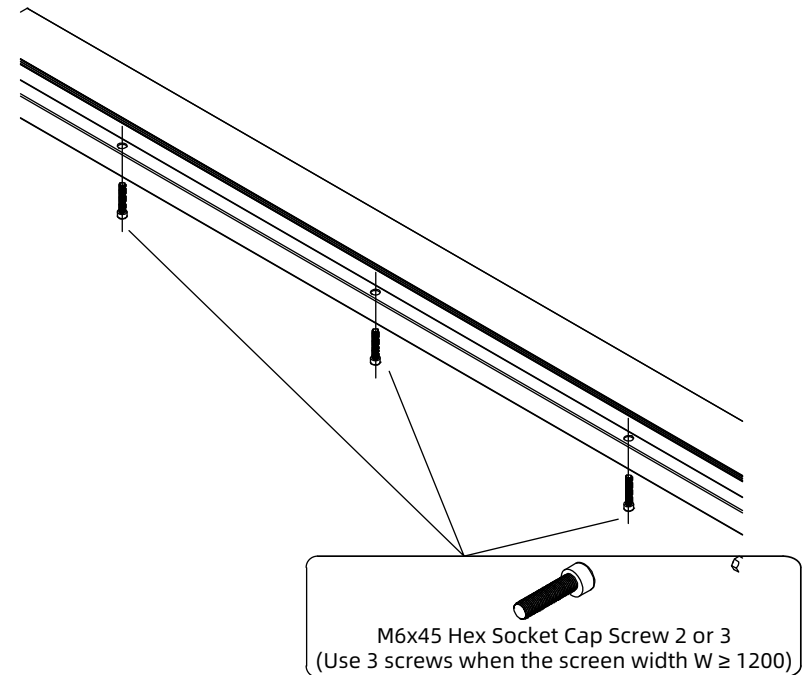

# Step 8


## Installing Cable Management Clips

1. Insert at any position.
2. Gently press to secure the clip in place.
3. Move left or right to the appropriate position.

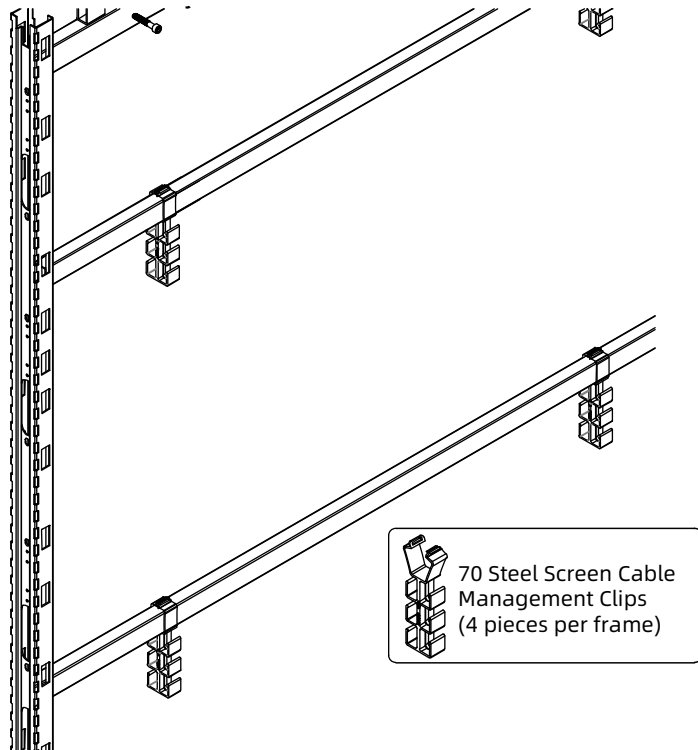

# Step 9


## Installing Single Glass Retainer

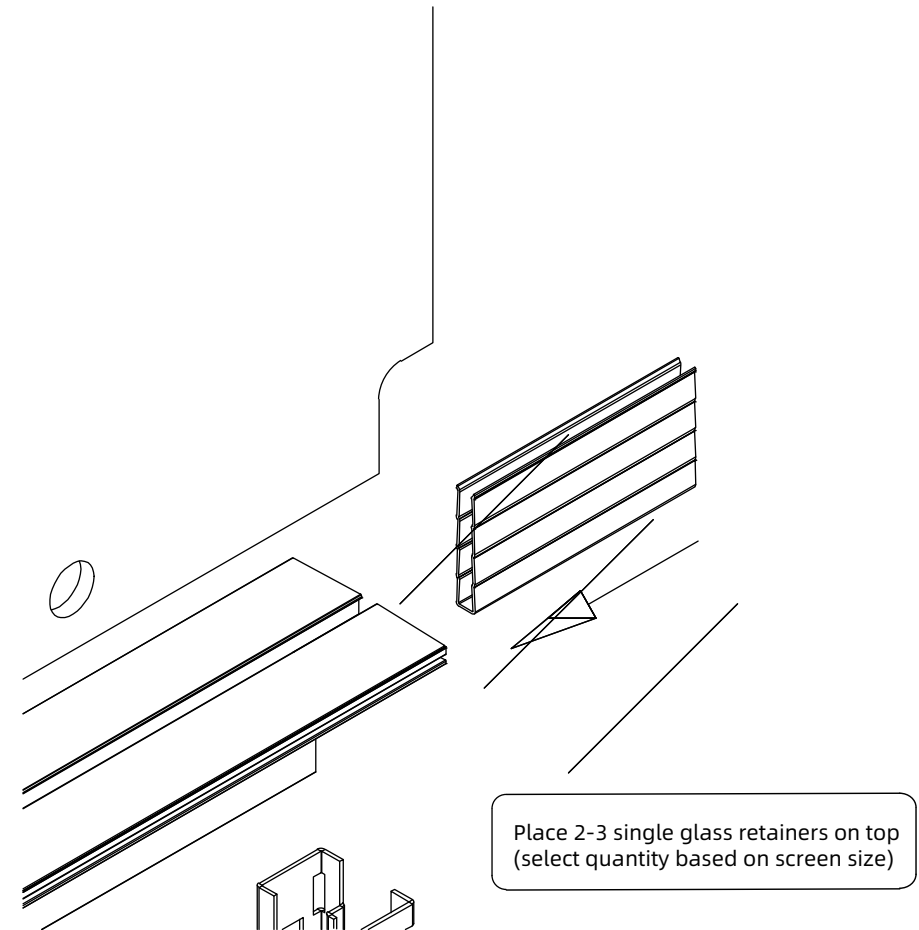

# Step 10



## Install Single Glass

Place the glass into the top trim (for single glass use) and connect it to the frame.

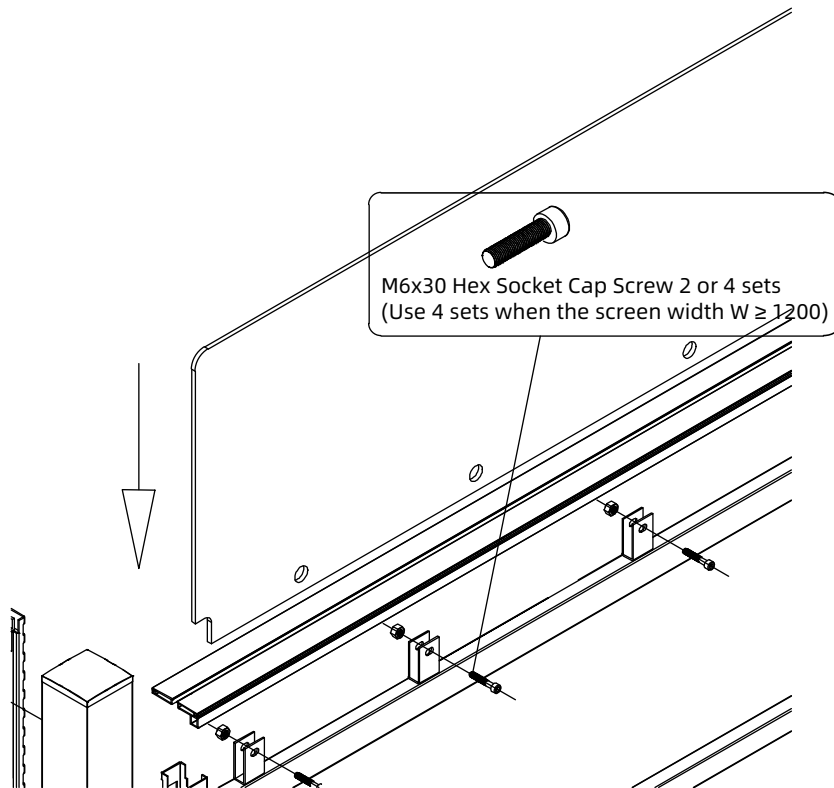

# Step 11a

## Installation of Steel Panel Clips

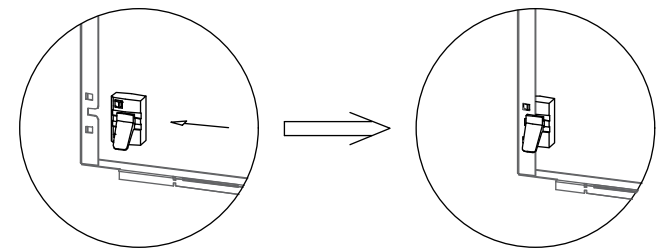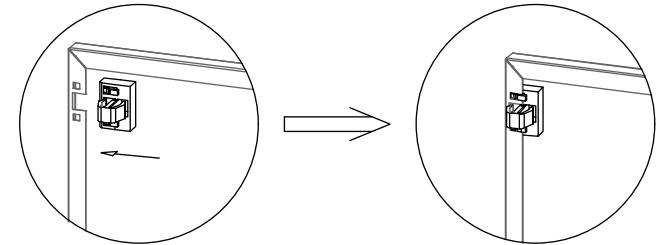

# Step 11b

## Installation of Wooden Panel Clips

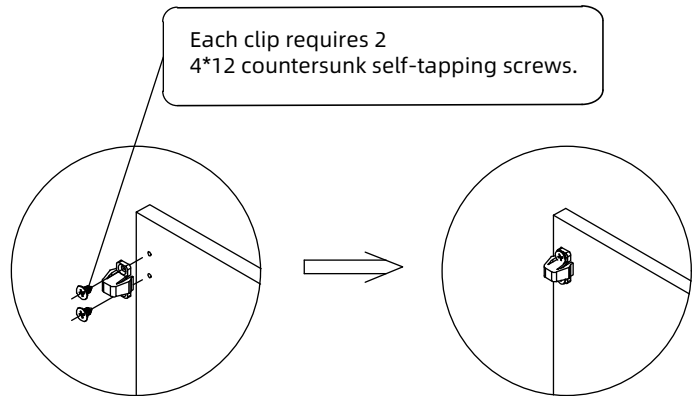


Diagram for Installing Upper Clip (For Panels)


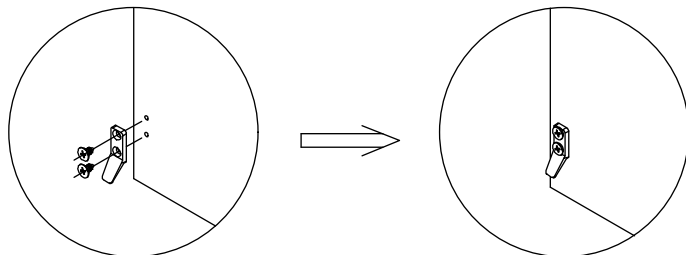


Diagram for Installing Lower Clip (For Panels)

# Step 12a

## Clip Installation Completed

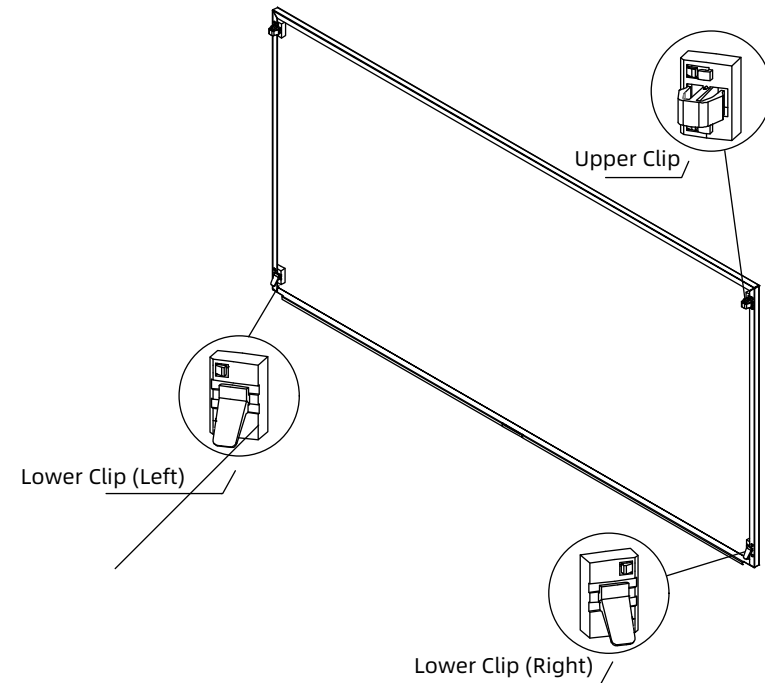

### Note:


Lower clips are divided into left and right.

Fabric panels are installed similarly to steel panels.

When the panel height is 675mm or 705mm, an additional middle clip (which is also an upper clip) is required.

# Step 12b


Clip Installation Completed

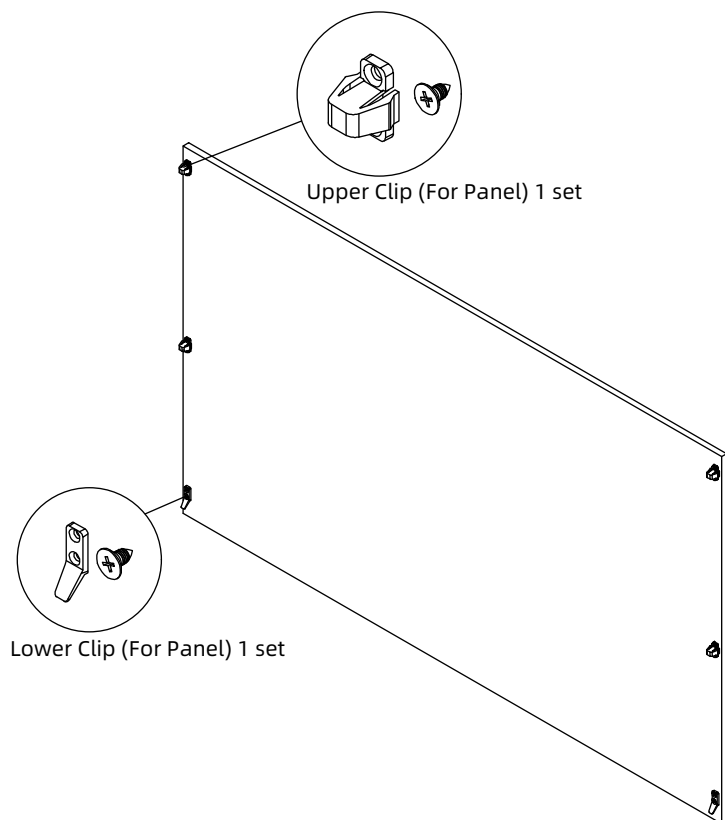

**Note:**  
When the panel height is 675mm or 705mm, an additional middle clip (which is also an upper clip) is required.

# Step 13

Installing Desk Support Brackets

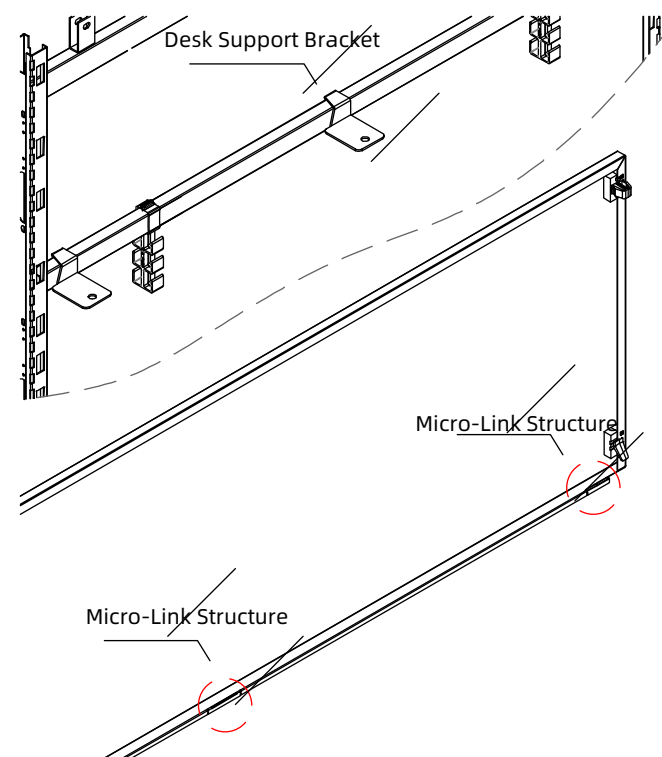

**Note:**  
When installing desk support brackets, you need to remove the micro-link structure from the top panel.

# Step 14

Assembly of Frame and Panel

