
# Signs

**Double-Sided Independent Wiring** 

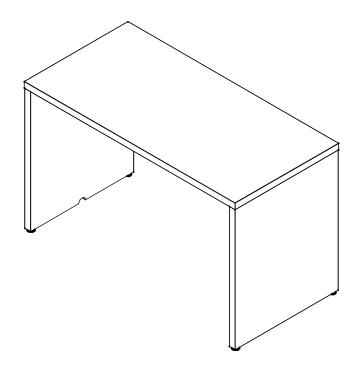








Web: www.novah.cc Mail: int@novah.cc




#### **Product Parts List**

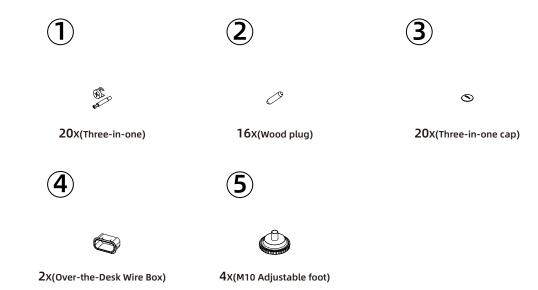


## Step 1

Install eccentric rods and dowel pins on the tabletop.

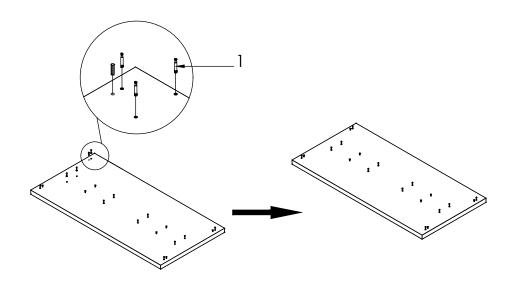

# Step 2

Install the side legs.

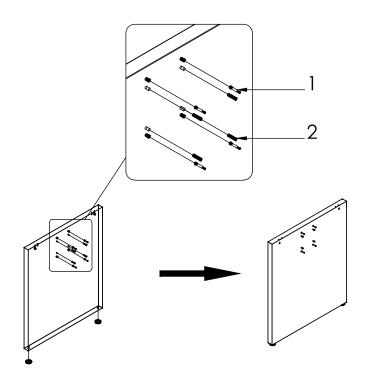


Use a Phillips screwdriver or electric drill to install the eccentric rods.

Use a Phillips screwdriver or electric drill to install the eccentric rods.

#### Step 3


Install the back panel.

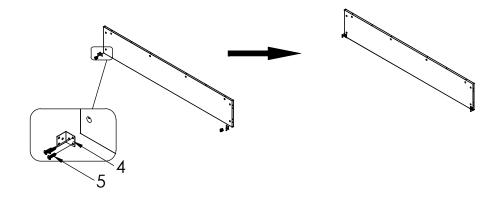


Use a Phillips screwdriver or electric drill to install the L-shaped angle brackets: ensure that the edges are aligned!

### Step 4

Install the tabletop and back panel.

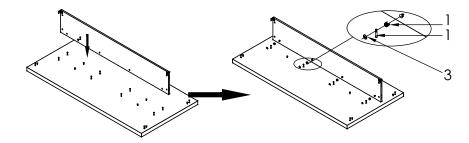


Note: When installing this step, keep the tabletop facing down and ensure the contact surface is clean!!!

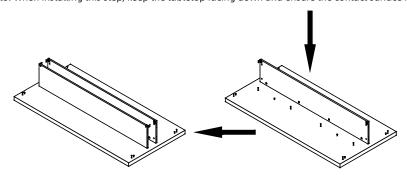

Use a Phillips screwdriver or electric drill to install the eccentric spacers and secure the cover!!!

#### Step 5


Install legs, back panel, and tabletop.

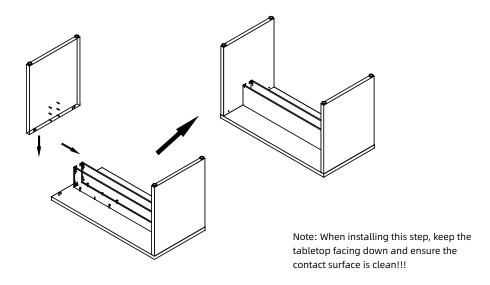

Use a Phillips screwdriver or electric drill to install the eccentric spacers. Secure the L-shaped angle brackets with screws and attach the cover!!!

#### Step 6

**Installation Complete** 

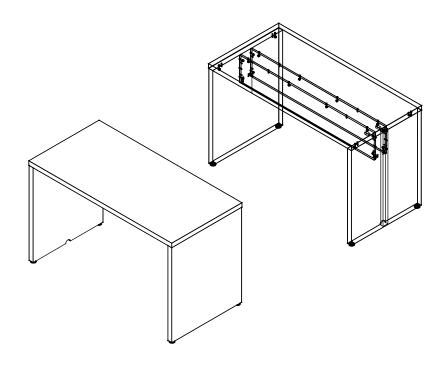

Installation Notes:

1.Finally, install the three-in-one cover. The cover is mentioned in the corresponding installation steps. 2.Clean the product thoroughly!