
# Signs

**Double-Sided Segmented Wiring** 

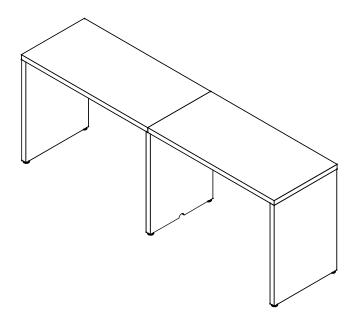









Web: www.novah.cc Mail: int@novah.cc



### **Product Parts List**

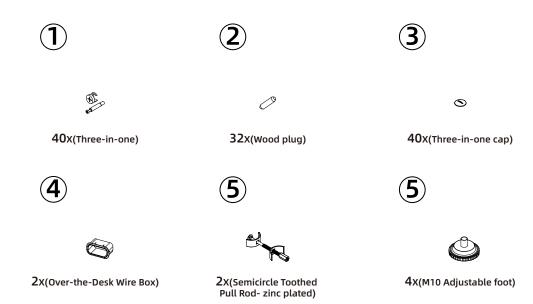


Install eccentric rods and dowel pins on the tabletop.

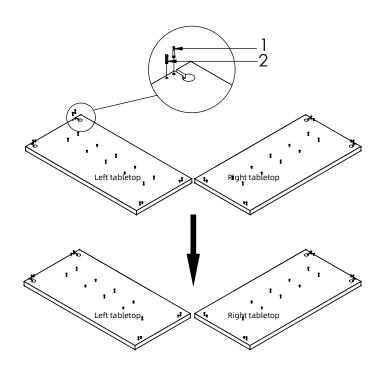

Use a Phillips screwdriver or electric drill to install the eccentric rods.


# Step 2

Install the side legs.

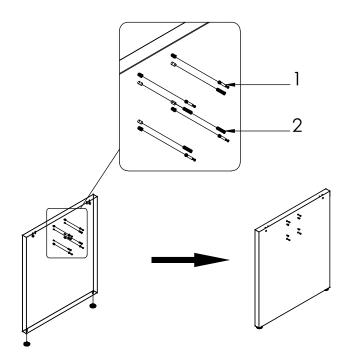


Use a Phillips screwdriver or electric drill to install the eccentric rods.

Install the middle leg.

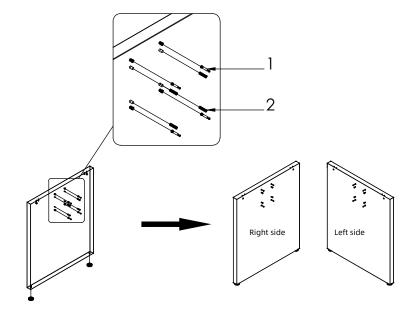

### Step 4

Install the back panel.

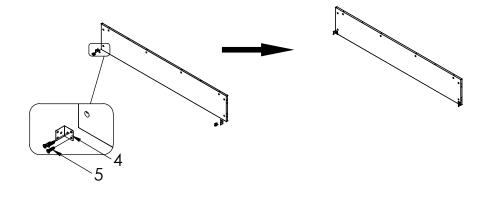

Use a Phillips screwdriver or electric drill to install the eccentric rods.

Use a Phillips screwdriver or electric drill to install the L-shaped angle brackets: ensure that the edges are aligned!


Install the tabletop and back panel.

# Left tabletop

### Step 6

Install legs, back panel, and tabletop.


Note: When installing this step, keep the tabletop facing down and ensure the contact surface is clean!!!

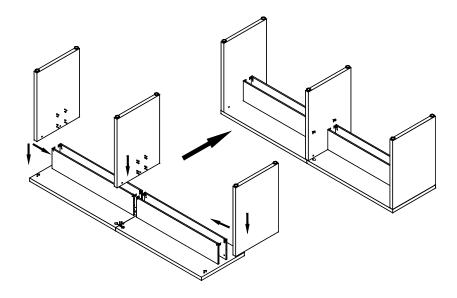

Use a Phillips screwdriver or electric drill to install the eccentric spacers and secure the cover!!!

Use a Phillips screwdriver or electric drill to install the eccentric spacers. Secure the L-shaped angle brackets with screws and attach the cover!!!

### **Installation Complete**

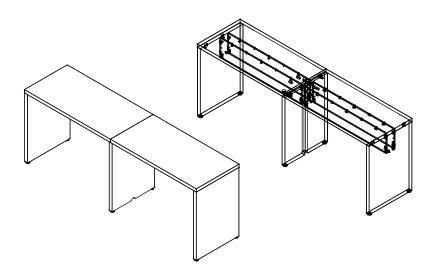

Installation Notes:
1. Finally, install the three-in-one cover. The cover is mentioned in the corresponding installation steps.
2. Clean the product thoroughly!