
Signs

Single-Sided Independent Wiring

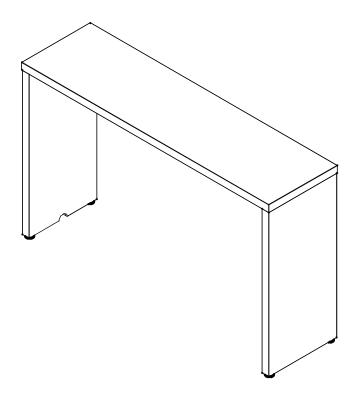








Web: www.novah.cc




Product Parts List

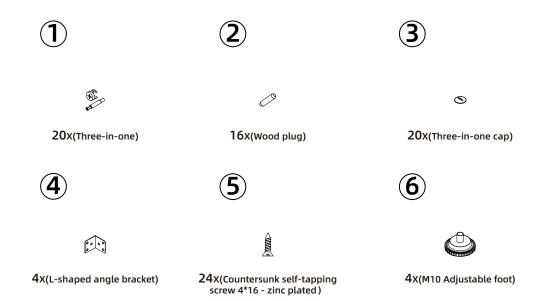

Step 1


Install eccentric rods and dowel pins on the tabletop.

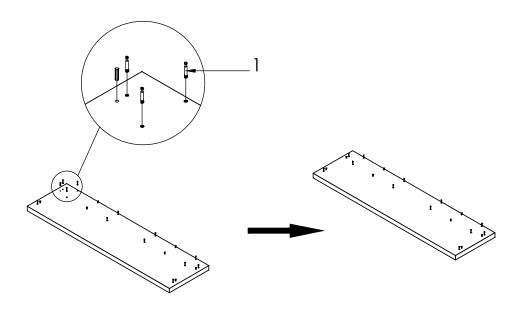

Use a Phillips screwdriver or electric drill to install the eccentric rods.

Step 2


Install the side legs.

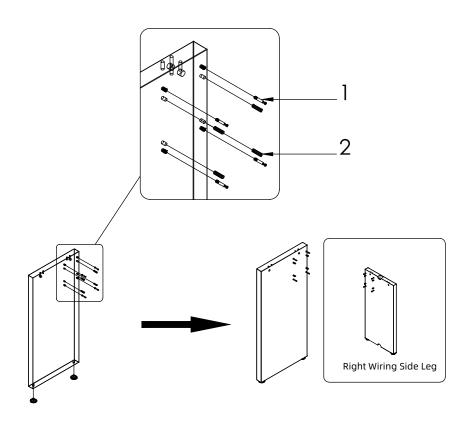

Use a Phillips screwdriver or electric drill to install the eccentric rods.

Step 3


Install the back panel.

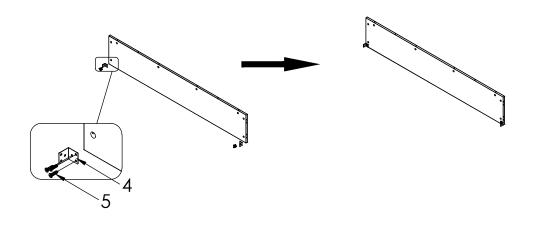

Use a Phillips screwdriver or electric drill to install the L-shaped angle brackets: ensure that the edges are aligned!

Step 4


Install the tabletop and back panel.

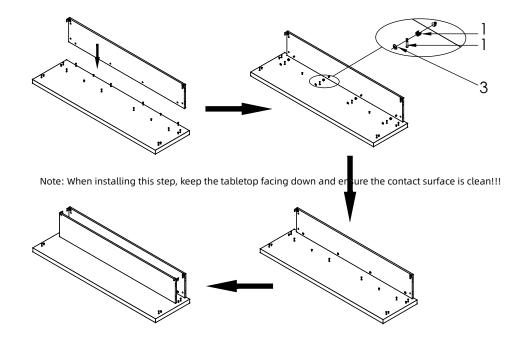

Use a Phillips screwdriver or electric drill to install the eccentric spacers and secure the cover!!!

Step 5


Install legs, back panel, and tabletop.

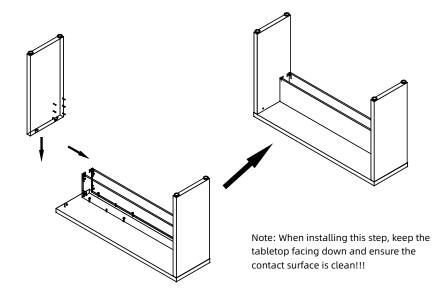

Use a Phillips screwdriver or electric drill to install the eccentric spacers. Secure the L-shaped angle brackets with screws and attach the cover!!!

Step 6

Installation Complete

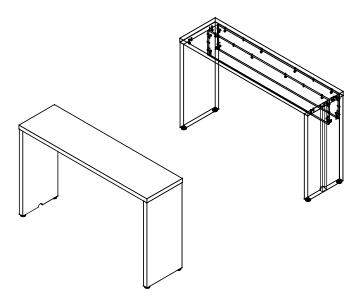

Installation Notes:

1.Finally, install the three-in-one cover. The cover is mentioned in the corresponding installation steps. 2.Clean the product thoroughly!