


Econ

Veneer Finish Side Cabinet

NOVAH

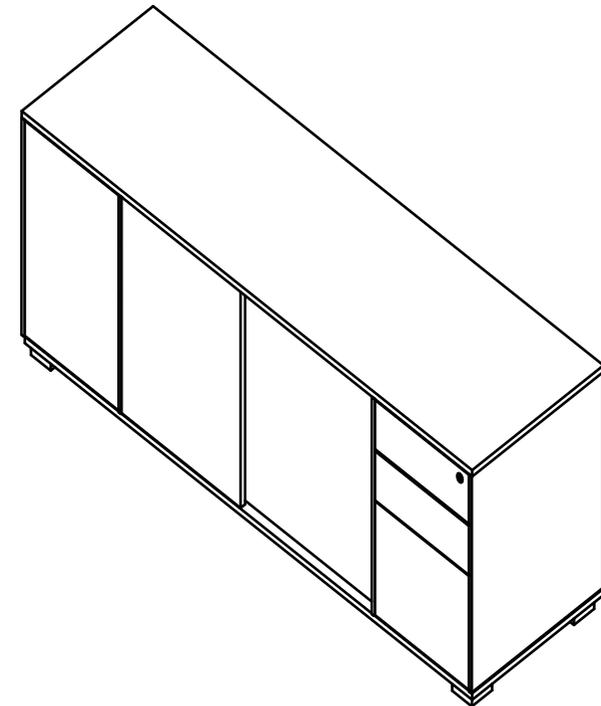

NOVAH System Technology Co.,Ltd.
Tel: 400-115-1688
Web: www.novah.cc
Mail: int@novah.cc

NOVAH

Product Parts List

①



36x

②



4x

③



1x

④



1x

⑤



20x(Cross countersunk self-tapping screws4*16)

⑥



5x(Cross countersunk self-tapping screws4*12)

⑦



14x(Cross diagonal flat head screw 6*10)

⑧



10x(Cross countersunk self-tapping screws3*12)

⑨



26x(Cross countersunk self-tapping screws3.5*14)

Step 1

10



8X(Cross-head large flat head self-tapping screw 4x12)

11



4X(Cross-head pan head screw 4x30)


12



1X(86-type panel mounting base plate (3-hole))

Install the ABS cable exit hole on the side panel.


Clip the ventilation component onto the back panel.

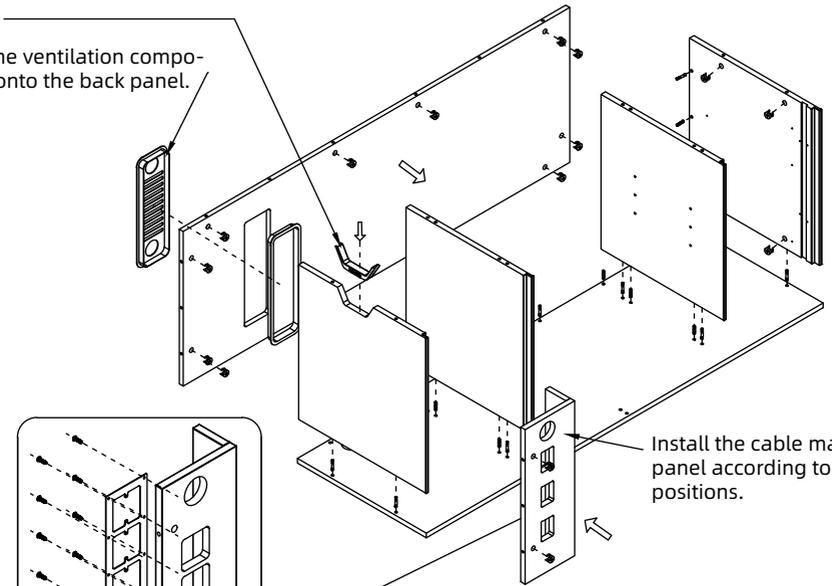


Install the cable management panel according to the hole positions.

Before installing the cable management post into the cabinet, first mount the 86 socket panel inside the cable management post.


Step 2

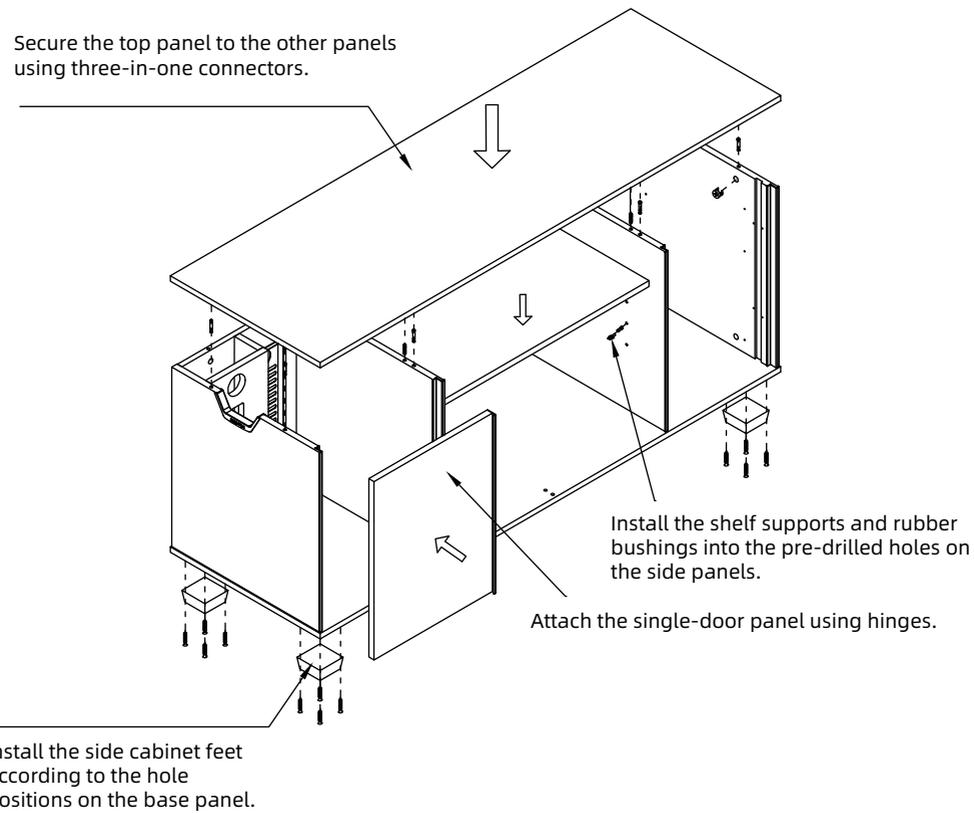

Step 3

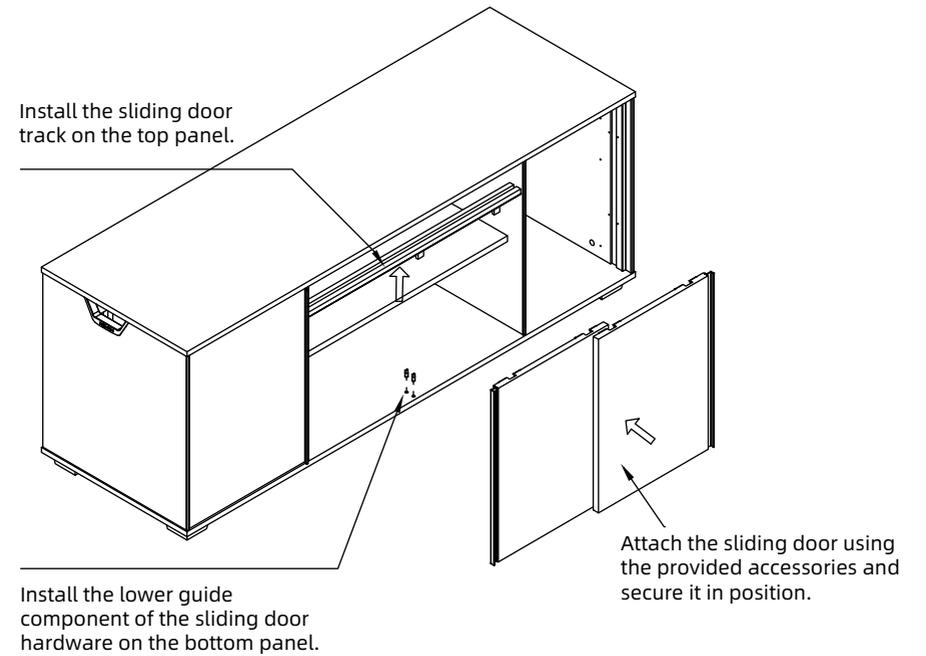

Step 4

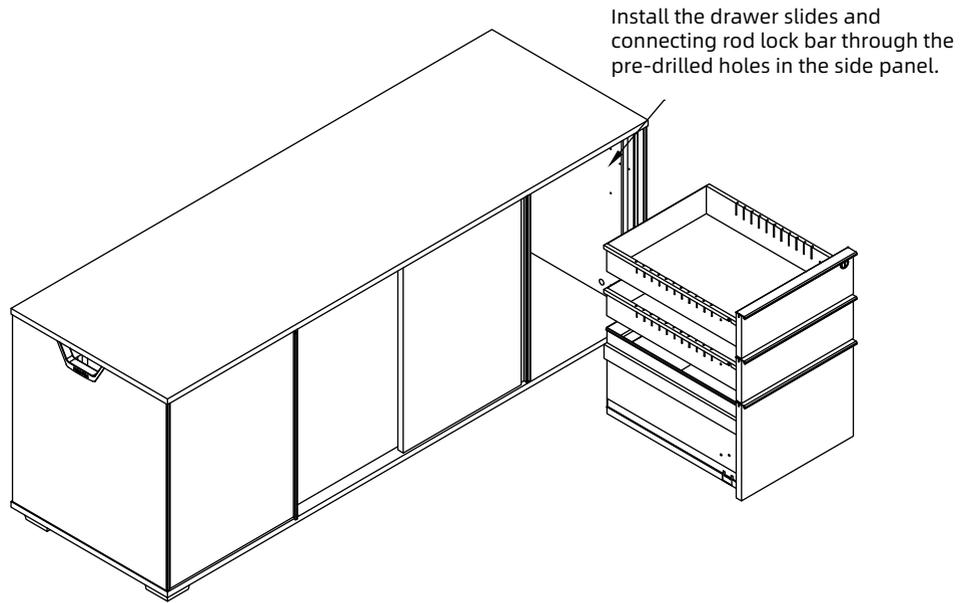

Step 5

